

Originate calls from the ATLAS with a IMUX and either V.35 or USSI module

First go to the Dial Plan Menu:

```

ATLAS 830/Dial Plan/User Term
System Info x Network Term [+ ]
System Status x User Term [+ ]
System Config x Global Param [+ ]
System Utilityx
Modules x
Packet Managerx
Router x
Dedicated Mapsx
Circuit Statusx
Dial Plan x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x

SYS: OK CSU:ONLN 1:ALRM 2:ALRM 3:ALRM 4:ALRM 5:ALRM 6:ALRM 7:ALRM 8:ALRM
Termination of connections to user equipment ^Z=help 17:55_

```

Then select the USSI module and port that you want to launch the call. Hit enter on the plus sign under the word “Ifce Config” for that port.

```

ATLAS 830/Dial Plan/User Term/1/Interface Configuration
Network Termx # Slot/Svc Port/PEP Sig In#Accept Out#Rei Ifce Config
User Term x 1 4)USSI 1)USSI Po [1001] [+ ] [+ ] [+ ]
Global Paramx 2 4)USSI 2)USSI Po [1002] [+ ] [+ ] [+ ]
x 3 4)USSI 3)USSI Po [1003] [+ ] [+ ] [+ ]
x 4 4)USSI 4)USSI Po [1004] [+ ] [+ ] [+ ]
x 5 5)USSI 1)USSI Po [2001] [+ ] [+ ] [+ ]
x 6 5)USSI 2)USSI Po [2002] [+ ] [+ ] [+ ]
x 7 5)USSI 3)USSI Po [2003] [+ ] [+ ] [+ ]
x 8 5)USSI 4)USSI Po [2004] [+ ] [+ ] [+ ]
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x
x

SYS: OK CSU:ONLN 1:ALRM 2:ALRM 3:ALRM 4:ALRM 5:ALRM 6:ALRM 7:ALRM 8:ALRM
^Z=help 18:00_

```

Then enter the number of the USSI module and port that you want to receive the call as listed in the manual excerpt below:

>>> NUMBER

Write security: 3; Read security: 5

Indicates the number to be dialed. Configure this field in the USSI INTERFACE CONFIGURATION section of the DIAL PLAN.

```

ATLAS 830/Dial Plan/User Term[1]/Interface Configuration/Number to Dial
Incoming Number Accept Listx Ports Available !234
Outgoing Number Reject Listx Number of Ports 1
Interface Configuration x Number to Dial 5551001
Substitution Template x Call Type 64K
x Dial Call As Digital
x Source ID 0
x Min DS0's 2
x Max DS0's 6

lgNumber to Dialaaaaaaaaaak
x5551001 x
#aaaaaaaaaaaaaaaaaaaaaaaj
x
x
x
x
x
x
x
x
x
x
SYS: OK CSU:ONLN 1:ALRM 2:ALRM 3:ALRM 4:ALRM 5:ALRM 6:ALRM 7:ALRM 8:ALRM
~Z=help 17:57~
    
```

Then, go to the Modules Menu. Press enter on the plus sign under the word “Menu” for the slot that contains the port you want to call out from.

```

ATLAS 830/Modules[4]/USSI Menus
System Info x Slit Type Menu Alarm Test State Status Rev
System Status x 0 Sys Ctrl [+] [ALARM] [OFF] ONLINE Online C
System Config x 1 IMUX [+] n/a ONLINE No Response -
System Utilityx 2 T1/PRI [+] [n/a] [n/a] ONLINE No Response -
Modules x 3 T1/PRI [+] [n/a] [n/a] ONLINE No Response -
Packet Managerx 4 USSI [+] [n/a] [n/a] ONLINE No Response -
Router x 5 USSI [+] [n/a] [n/a] ONLINE No Response -
Dedicated Mapsx 6 USSI [+] [n/a] [n/a] ONLINE No Response -
Circuit Statusx 7 IMUX [+] n/a ONLINE No Response -
Dial Plan x 8 USSI [+] [n/a] [n/a] ONLINE No Response -
x
x
x
x
x
x
x
x
x
x
SYS: OK CSU:ONLN 1:ALRM 2:ALRM 3:ALRM 4:ALRM 5:ALRM 6:ALRM 7:ALRM 8:ALRM
Access menus for Quad Nx56/64 module ~Z=help 18:01
    
```

Scroll down to the “Configuration” menu. Then, on the port number that you want to launch the call, change the DTR setting from (IGNORE) to (CONNECT ON DTR) by selecting “Connect on DTR” as indicated below in the manual excerpt.

```

ATLAS 830/Modules[4]/USSI Menu/Configuration[1]/DTR
Info        x Pri  Name       Clk +/- Data CTS DCD DSR DIR 0 Inb. Inband Se
Alarm Status x  1  USSI Port   Normal  Norm Nor Nor Nor  Ign Off  Off
DTE Status  x  2  USSI Port   Normal  Norm Nor Nor Nor  Ign  Off  Off
Data Rate   x  3  USSI Port   Normal  Norm Nor Nor Nor  Ign  Off  Off
Inband Stats x  4  USSI Port   Normal  Norm Nor Nor Nor  Ign  Off  Off
PLL/Fifo    x
Configuration x
Dial        x
Test        x
DTE Interface x
            x          1qDTRaaaaaaaaaak
            x          xIgnore             x
            x          xConnect on DTRx
            x          maaaaaaaaaaaaaaaj
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x
            x

SYS: OK  CSU:ONLN  1:ALRM 2:ALRM 3:ALRM 4:ALRM 5:ALRM 6:ALRM 7:ALRM 8:ALRM
DTR: Ignore or Connect When On ^Z=help 18:02_

```

>>> DTR

Write security: 3; Read security: 5

Determines whether the ATLAS 890 treats a connection as permanent (**IGNORE**) or connects only when Data Terminal Ready (DTR) is active (**CONNECT ON DTR**). Select either **IGNORE** or **CONNECT ON DTR**.

The Atlas will then launch the call right away at the number of channels the port is already set for (6), which is a 384 kbps call. You can see the call on the Modules Status menu for either the calling or called USSI port.

To reverse these steps, you can change the DTR back to (IGNORE), and remove the number from the dial plan. The changes in configuration in the Atlas are immediately saved once they are changed and erased once they are changed back.