



INSTALLATION INSTRUCTIONS

1. Remove the cover plate from the appropriate option slot in the ATLAS 800 Series rear panel.
2. Slide the VCOM Resource Module into the option slot until the module is firmly positioned against the front of the chassis.
3. Secure the thumbscrews at both edges of the module. Tighten with a screwdriver.
4. Complete installation of remaining modules and Base Unit as specified in the Installation section of the ATLAS 800 Series System Manual.

MENU TREE

Modules	Slit	Info	Part Number
	Type		Serial Number
	VCOM Menu		Board Revision
	Alarm	Status	Firmware Revision
	Test		Device
	State		Status
	State		Online
	State	Offline	
	Status	Config	Algorithm
	Rev		Silence
	Connection		
		Frame Type	
		Statistics	Configure VCOM Devices
			Gain Settings
			Fax Capability
			Device
			Usage Time
			ATLAS Frms
			ATLAS Drop
			VCOM Frms
		VCOM Drop	
		Clear	
		Reloads	

SPECIFICATIONS

Ordering Options	8, 16, 24, or 32 voice compression resources
Compression Algorithms	Automatic selection of CCITT Standard or ADTRAN-proprietary voice compression algorithms based on endpoint configuration
FAX Support	14400bps
Tone Support	Dual-tone, multi-frequency (DTMF) generation and detection