



ATTACHING RESOURCE MODULE TO HOST MODULE

1. Carefully align the P10 connector on the resource module with the J10 connector on the Resource Host Module.
2. Using only fingertip pressure, so that neither circuit board bends or flexes, ensure that the two connectors are firmly seated.
3. Secure the opposite end of the resource module to the Resource Host Module using the supplied screws and standoff posts.

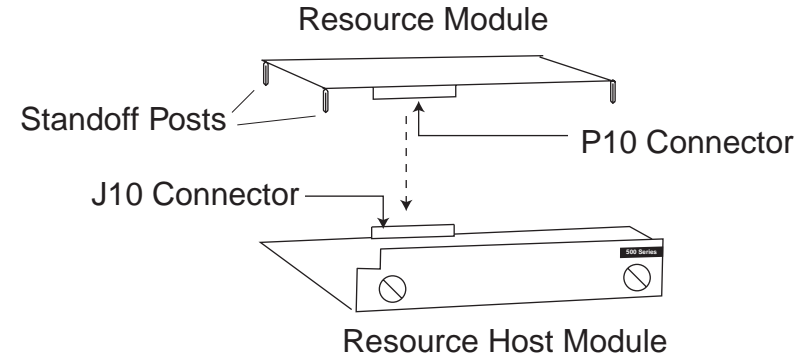

INSTALLING MODULE INTO THE ATLAS 550

1. Remove the cover plate from the appropriate option slot in the ATLAS 550 rear panel.
2. Slide the Resource Host Module into the option slot until the module is firmly positioned against the front of the chassis.
3. Secure the thumbscrews at both edges of the module. Tighten with a screwdriver.
4. Complete installation of remaining modules and Base Unit as specified in the Installation chapter of the ATLAS 550 System Manual.

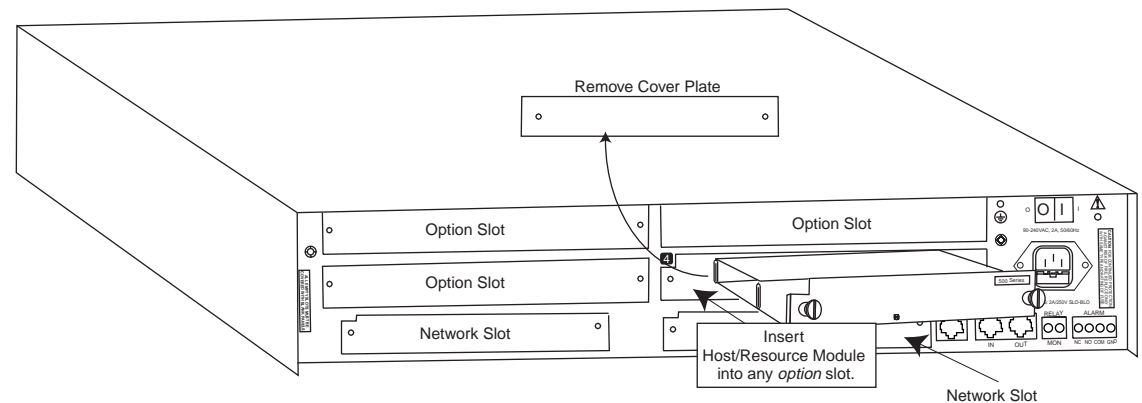

MENU TREE

