



Factory Default Procedure for a 1st Generation NetVanta 2400

To do this you will need to be able to get a DHCP IP address and access to the Internet. This connection should be plugged into the public interface.

1. Hold down the up arrow while turning on the unit.
2. When the screen displays "Netboot?" press enter.
3. Now it should display the last IP address used for the Netboot. If it shows 63.108.129.61 press enter, otherwise press cancel.
4. If you pressed cancel you can now enter an IP address by using the up and down arrows. The enter key moves the cursor to the right, cancel moves to the left. You want to enter 63.108.129.61.
5. Now the unit will go out and get the latest firmware from a server at ADTRAN. It will then upgrade and default the unit. This process takes approximately 10-20 minutes. The unit will reboot when it is all done.