



NETVANTA 5305 AC POWER SUPPLY

P/N 1200840G1

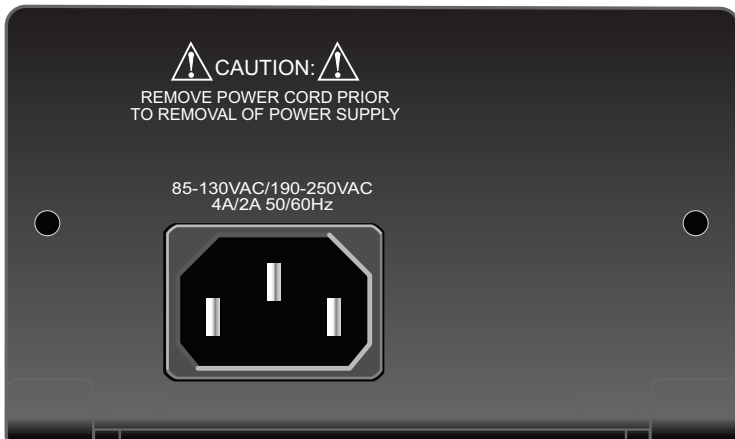

INSTALLATION INSTRUCTIONS

1. Disconnect the power cord.



CAUTION *Disconnect both power cables when installing redundant power supplies.*

2. Use a screwdriver to remove the cover plate (or existing power supply if the part is a replacement) from the appropriate power slot in the NetVanta 5305 base unit.
3. Slide the power supply into the appropriate slot until it is firmly positioned against the chassis.
4. Replace the screws in the front panel and tighten with a screwdriver.
5. Reconnect the power cord(s).
6. Complete the installation of the system as specified in the [NetVanta 5305 Hardware Installation Guide](#) located online at <http://kb.adtran.com> (article number 2521).



NOTE *Important: For additional details on product features, specifications, installation, and safety, refer to the [NetVanta 5305 Hardware Installation Guide](#) located online at <http://kb.adtran.com> (article number 2521).*

SPECIFICATIONS

Power Supply	85 to 130 VAC/190 to 250 VAC input 4A/2A 50/60 Hz input current 250 W of output power
Compliance	FCC Part 15 Class A, EN 55022 Class A, EN 55024, EN 61000-3-2, EN 61000-3-3 UL/CUL 60950-1, EN 60950-1, IEC 60950-1, AS/NZS 60950-1 RoHS compliant
Physical	Dimensions: 2.5-inch H x 4.2-inch W x 9.1-inch D Operating Temperature: 0°C to 50°C Storage Temperature: -20°C to 70°C Relative Humidity: Up to 95 percent, noncondensing