



**NetVanta 6240/6250 Series
IP Business Gateways
Hardware Installation Guide**

Trademarks

Any brand names and product names included in this manual are trademarks, registered trademarks, or trade names of their respective holders.

To the Holder of the Manual

The contents of this manual are current as of the date of publication. ADTRAN reserves the right to change the contents without prior notice.

In no event will ADTRAN be liable for any special, incidental, or consequential damages or for commercial losses even if ADTRAN has been advised thereof as a result of issue of this publication.

Software Licensing Agreement

Each ADTRAN product contains a single license for ADTRAN-supplied software. Pursuant to the Licensing Agreement, you may: (a) use the software on the purchased ADTRAN device only and (b) keep a copy of the software for backup purposes. This Agreement covers all software installed on the system, as well as any software available on the ADTRAN website. In addition, certain ADTRAN systems may contain additional conditions for obtaining software upgrades.

Third-Party Software

The software included in the NetVanta 6250 contains copyrighted software that is licensed under the GNU General Public License (GPL). For a list of third-party software and their licenses, go to <http://www.adtran.com/software/EULA>. You can obtain the complete corresponding source code of such software components from ADTRAN for a period of three years after our last shipment of this product by sending a money order or check for \$5 to:

ADTRAN, Inc, P.O. Box 933638, Atlanta, GA 31193-3638

Please write **GPL Source for product NetVanta 6250** in the memo line of your payment.

This offer is valid to anyone in receipt of this information.



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ADTRAN

901 Explorer Boulevard
P.O. Box 140000
Huntsville, AL 35814-4000
Phone: (256) 963-8000

Copyright © 2013 ADTRAN, Inc.
All Rights Reserved.
Printed in U.S.A.

Conventions



Notes provide additional useful information.



Cautions signify information that could prevent service interruption or damage to the equipment.



Warnings provide information that could prevent injury or endangerment to human life.

Safety Instructions

When using your telephone equipment, please follow these basic safety precautions to reduce the risk of fire, electrical shock, or personal injury:

1. Do not use this product near water, such as a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There is a remote risk of shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord, power supply, and batteries indicated in the manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.
5. The socket-outlet shall be installed near the equipment and shall be easily accessible.

If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your qualified service personnel:

1. The power cable, extension cable, or plug is damaged.
2. An object has fallen into the product.
3. The product has been exposed to water.
4. The product has been dropped or damaged.
5. The product does not operate correctly when you follow the operating instructions.



These units contain no user-serviceable parts. They should only be serviced by qualified service personnel.



Additional safety guidelines, such as Waste Electrical and Electronic Equipment (WEEE), are given in the document [NetVanta Safety and Regulatory Information](http://supportforums.adtran.com) available online at <http://supportforums.adtran.com>.

Save These Important Safety Instructions

FCC-Required Information

FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of Federal Communications Commission (FCC) rules and requirements adopted by America's Carriers Telecommunications Association (ACTA). Each registered interface has a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given; otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment. Advance notification and the opportunity to maintain uninterrupted service are given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected, or it is certain the equipment is not malfunctioning.
5. This unit contains no user-serviceable parts.
6. This equipment is designed to connect to the telephone network or premises wiring using an FCC-compatible modular jack, which is compliant with Part 68 and requirements adopted by ACTA.
7. The following information may be required when applying to the local telephone company for leased line facilities:

| Part Number | Registration Number | Service Type | REN/SOC | FIC | USOC |
|---|-----------------------|--|-----------|--|--------|
| NetVanta 6240 T1 Products | US: HDCIT03B1700204G1 | 1.544 Mbps - SF 1.544 Mbps - SF and B8ZS 1.544 Mbps - ESF 1.544 Mbps - ESF and B8ZS | N/A/6.0N | 04DU9-BN 04DU9-DN 04DU9-1KN 04DU9-1SN | RJ-48C |
| NetVanta 6240 with Optional FXO Ports | | Analog Loop Start/Ground Start | 0.3B/9.0F | 02LS2 02GS2 | RJ-11C |
| NetVanta 6250 T1 Products | US: HDCIS00B1700254F2 | 1.544 Mbps - SF 1.544 Mbps - SF and B8ZS 1.544 Mbps - ESF 1.544 Mbps - ESF and B8ZS | N/A/6.0N | 04DU9-BN 04DU9-DN 04DU9-1KN 04DU9-1SN | RJ-48C |
| NetVanta 6250 with Optional FXO Port | | Analog Loop Start/Ground Start | 0.0B/9.0F | 02LS2 02GS2 | RJ-11C |

8. The ringer equivalency number (REN) is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, the sum of the RENs of all devices should not exceed five. To be certain of the number of devices you may connect to your line as determined by the REN, call your telephone company to determine the maximum REN for your calling area.
9. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state public utility commission or corporation commission for information.

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Industry Canada Compliance Information

Notice: The Industry Canada label applied to the product (identified by the Industry Canada logo or the “IC:” in front of the certification/registration number) signifies that the Industry Canada technical specifications were met.

Notice: The REN for this terminal equipment is supplied in the documentation or on the product labeling/markings. The REN assigned to each terminal device indicates the maximum number of terminals that can be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices should not exceed five (5).

Canadian Emissions Requirements

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class A prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques,” NMB-003 édictée par le ministre des Communications.

Toll Fraud Liability

Be advised that certain security risks are inherent in the use of any telecommunications or networking equipment, including but not limited to, toll fraud, Denial of Service (DoS) attacks, loss or theft of data, and the unauthorized or illegal use of said equipment. ADTRAN OFFERS NO WARRANTIES, EITHER EXPRESSED OR IMPLIED, REGARDING THE PREVENTION, DETECTION, OR DETERRENCE OF TOLL FRAUD, NETWORKING ATTACKS, OR UNAUTHORIZED, ILLEGAL, OR IMPROPER USE OF ADTRAN EQUIPMENT OR SOFTWARE. THEREFORE, ADTRAN IS NOT LIABLE FOR ANY LOSSES OR DAMAGES RESULTING FROM SUCH FRAUD, ATTACK, OR IMPROPER USE, INCLUDING, BUT NOT LIMITED TO, HUMAN AND DATA PRIVACY, INTELLECTUAL PROPERTY, MATERIAL ASSETS, FINANCIAL RESOURCES, LABOR AND LEGAL COSTS. Ultimately, the responsibility for securing your telecommunication and networking equipment rests with you, and you are encouraged to review documentation regarding available security measures, their configuration and implementation, and to test such features as is necessary for your network.

Service and Warranty

For information on the service and warranty of ADTRAN products, visit the [Support](#) section of the ADTRAN website at <http://www.adtran.com>.

Table of Contents

| | |
|---|-----------|
| Introduction | 13 |
| Physical Description | 14 |
| NetVanta 6240 Series | 14 |
| Shipping Contents | 14 |
| Front Panel Design | 14 |
| Rear Panel Design | 15 |
| NetVanta 6250 Series | 17 |
| Shipping Contents | 17 |
| Front Panel Design | 17 |
| Rear Panel Design | 19 |
| Product Specifications | 21 |
| Unit Installation | 23 |
| Tools Required | 23 |
| Mounting Options | 24 |
| Supplying Power to the Unit | 27 |
| Supplying DC Power to the NetVanta 6250 | 27 |
| Optional Battery Backup Unit (P/N 1175044L1/L2) | 29 |
| Appendix A. Connector Pin Definitions. | 33 |

List of Figures

| | | |
|-----------|--|----|
| Figure 1. | NetVanta 6240 Front Panel Layout | 14 |
| Figure 2. | NetVanta 6240 Rear Panel Layout | 15 |
| Figure 3. | NetVanta 6250 Front Panel Layout | 17 |
| Figure 4. | NetVanta 6250 Rear Panel Layout | 19 |
| Figure 5. | Wallmount Installation | 26 |
| Figure 6. | Supplying DC Power and Grounding the NetVanta 6250 | 28 |
| Figure 7. | Wall Mounting the BBU | 30 |

List of Tables

| | | |
|------------|--|----|
| Table 1. | NetVanta 6240 Front Panel LEDs | 15 |
| Table 2. | NetVanta 6250 Front Panel LEDs | 18 |
| Table 3. | BBU Specifications. | 31 |
| Table A-1. | VOICE Connector Pinouts (NetVanta 6240) | 33 |
| Table A-2. | VOICE Connector Pinouts (NetVanta 6250) | 34 |
| Table A-3. | FXO Connector Pinouts | 35 |
| Table A-4. | T1 Port Pinouts | 35 |
| Table A-5. | 10/100Base-T Ethernet Port Pinouts | 35 |
| Table A-6. | 1000Base-T Gigabit Ethernet Port Pinouts | 35 |
| Table A-7. | CRAFT Port Pinouts. | 36 |

1. INTRODUCTION

This hardware installation guide describes the NetVanta 6240/6250 Series units' physical characteristics, lists their features and specifications, introduces basic functionality, and provides installation instructions.

- *Physical Description on page 14*
- *Product Specifications on page 21*
- *Unit Installation on page 23*

For additional information on shipping contents, mounting options, and power the unit, refer to the following sections:

- *Shipping Contents on page 14*
- *Mounting Options on page 24*
- *Supplying Power to the Unit on page 27*
- *Supplying DC Power to the NetVanta 6250 on page 27*
- *Optional Battery Backup Unit (P/N 1175044L1/L2) on page 29*

For information on NetVanta 6240/6250 configuration for a specific application, refer to the configuration guides provided on the [ADTRAN Support Community](#). For details on the command line interface (CLI), refer to the *AOS Command Reference Guide*. All other related documents are also available online at <http://supportforums.adtran.com>.

2. PHYSICAL DESCRIPTION

NetVanta 6240 Series

The NetVanta 6240 Series is a multiservice Internet Protocol (IP) business gateway designed for use in integrated voice and data service offerings to small-to-medium sized businesses worldwide. This product line is a high-bandwidth business gateway designed to allow carriers to deliver up to 60 channels of Voice over IP (VoIP) to their customers. The NetVanta 6240 Series units run ADTRAN Operating System (AOS), and are managed through an EIA-232 port (DB-9) located on the rear panel, Telnet session, or web-based graphical user interface (GUI). The NetVanta 6240 is RoHS compliant (telecommunications exemption).

There are several models in the NetVanta 6240 Series that can provide various combinations up to 24 FXS interfaces, up to 10 FXO interfaces, and up to 60 channels of VoIP. All NetVanta 6240 Series models include four modular T1 wide area network (WAN) interfaces, two 10/100Base-T Ethernet ports, an integrated router, stateful inspection firewall, and transparent Session Initiation Protocol (SIP) proxy. The NetVanta 6240 Series comes equipped with an AC power supply and an onboard battery charger for use with an ADTRAN battery backup unit that can keep the unit running with all interfaces active should the AC power fail.

Shipping Contents

Each NetVanta 6240 Series units are shipped in their own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the [Support](#) page on the ADTRAN website at <http://www.adtran.com/support>).

Shipments of the NetVanta 6240 Series include the following items:

- NetVanta 6240 Series base unit
- A detachable power cable with a grounded, three-prong plug
- Two standard mounting brackets and four screws
- Quick start guide

Front Panel Design

The NetVanta 6240 front panel is shown below.



Figure 1. NetVanta 6240 Front Panel Layout

Front Panel Features

Status LEDs

The status LEDs are located on the right side of the front panel. The **STATUS** LED indicates the unit’s status. The **VOICE** LED indicates the status of the voice ports. The **NET 1** through **NET 4** LEDs reflect the status of the network interfaces. The **LAN 1** and **LAN 2** LEDs reflect the status of the local area networks (LANs). [Table 1](#) below describes the front panel LEDs.

Table 1. NetVanta 6240 Front Panel LEDs

| LED | Color | Indication |
|----------------------------|------------------|---|
| STATUS | Off | Unit is not receiving power. |
| | Green (flashing) | On power up, the STATUS LED flashes rapidly for five seconds, during which time the user may escape to boot mode from the CONSOLE port. |
| | Green (solid) | Power is on and the unit is functioning normally. |
| | Amber (solid) | Power has failed and the unit is in battery backup mode. |
| | Red | Power is on, but the self-test failed. |
| VOICE | Off | All ports are inactive or administratively disabled. |
| | Green (flashing) | At least one port is ringing. |
| | Green (solid) | At least one port is off-hook. |
| | Amber (solid) | Port is in test mode. |
| | Red | Alarm or fault condition is occurring on the port interface. |
| NET 1 through NET 4 | Off | All ports are inactive or administratively disabled. |
| | Green (solid) | Port is functioning normally. |
| | Amber (solid) | Port is in test mode. |
| | Red | Alarm or fault condition is occurring on the port interface. |
| LAN 1/LAN 2 | Off | LAN is administratively disabled or link is down. |
| | Green (solid) | The link is up. |
| | Amber (flashing) | There is activity on the link. |

Rear Panel Design

The NetVanta 6240 Series rear panel is shown below.

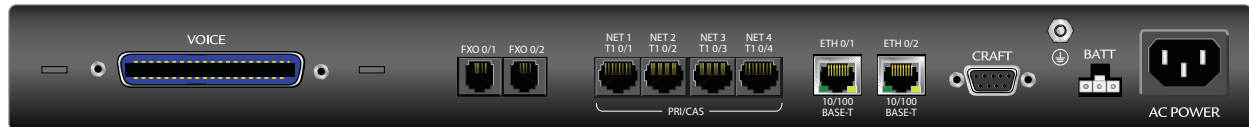


Figure 2. NetVanta 6240 Rear Panel Layout

Rear Panel Interfaces

VOICE Connection

A single 50-pin female amphenol connector, labeled **VOICE**, provides the interconnect wiring for the analog FXS/FXO circuits. See [Table A-1 on page 33](#) for voice connector pinouts. The status LED, labeled **VOICE**, is located on the front panel.



The number of circuits used (1 through 24) is dependent on the model NetVanta 6240. FXO interfaces use circuits 17 through 24 depending on the model.

FXO Interfaces

The **FXO 0/1** and **FXO 0/2** interfaces are RJ-11 connectors and provide analog trunks for local call routing. See [Table A-3 on page 35](#) for the FXO interface pinouts.

Network Interfaces

The **NET 1 T1 0/1** through **NET 4 T1 0/4** interfaces are DS1 RJ-48C pin connections. See [Table A-4 on page 35](#) for the network interface pinouts. The status LEDs, labeled **NET 1** through **NET 4**, are located on the front panel.

10/100Base-T Ethernet Interfaces

The **ETH 0/1** and **ETH 0/2** ports are RJ-45 connectors. See [Table A-5 on page 35](#) for the Ethernet interface pinouts. The status LEDs, labeled **LAN 1** and **LAN 2**, are located on the front panel.

CRAFT Interface

The **CRAFT** interface is an EIA-232 serial port (DCE), which provides for local management and configuration (via a DB-9 female connector). See [Table A-7 on page 36](#) for the craft interface pinouts.



Connection directly to an external modem requires a cross-over cable.

Power Connection

The rear panel has a power input to a 120 VAC power supply with an IEC connector. The appropriate three-prong cable is included in the shipment. Refer to [Supplying Power to the Unit on page 27](#) for connection details.

Battery Backup Connection

An optional battery backup unit (P/N 1175044L1/L2) is available for use in case of power outages. The battery backup unit connects to the **BATT** port, which also charges the unit during operation. Refer to [Optional Battery Backup Unit \(P/N 1175044L1/L2\) on page 29](#) for connection details.

NetVanta 6250 Series

The NetVanta 6250 Series is a multiservice Internet Protocol (IP) business gateway designed for use in integrated voice and data service offerings to small-to-medium sized businesses worldwide. This product line is a high-bandwidth business gateway designed to allow carriers to deliver up to 72 channels of Voice over IP (VoIP) to their customers. The NetVanta 6250 Series units run ADTRAN Operating System (AOS), and are managed through an EIA-232 port (DB-9) located on the rear panel, Telnet session, or web-based graphical user interface (GUI). The NetVanta 6250 is RoHS compliant.

There are several models in the NetVanta 6250 Series that can provide various combinations up to 24 FXS interfaces, up to 9 FXO interfaces, and up to 60 channels of VoIP. All NetVanta 6250 Series models include four modular T1 wide area network (WAN) interfaces, four routed 10/100Base-T Ethernet ports, one routed 10/100/1000Base-T Ethernet port (both copper and fiber), one Universal Serial Bus (USB) port, an integrated router, stateful inspection firewall, and transparent Session Initiation Protocol (SIP) proxy. The NetVanta 6250 Series comes equipped with an AC power supply and an onboard battery charger for use with an ADTRAN battery backup unit that can keep the unit running with all interfaces active should the AC power fail. The NetVanta 6250 also comes equipped with a -48 VDC input for DC powering.



ADTRAN does not recommend using the optional battery backup unit when the NetVanta 6250 is being powered by a DC source.

Shipping Contents

Each NetVanta 6250 Series units are shipped in their own cardboard shipping carton. Open each carton carefully, and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer Service (refer to the [Support](#) page on the ADTRAN website at <http://www.adtran.com/support>).

Shipments of the NetVanta 6250 Series include the following items:

- NetVanta 6250 Series base unit
- A detachable power cable with a grounded, three-prong plug
- Two universal 19/23-inch rack mounting brackets and four screws
- Two position terminal block for connection to DC power source
- Quick start guide

Front Panel Design

The NetVanta 6250 front panel is shown below.



Figure 3. NetVanta 6250 Front Panel Layout

Front Panel Features

Status LEDs

The status LEDs are located on the left side of the front panel. The **VOICE** LED indicates the status of the voice ports. The **STATUS** LED indicates the unit's status. The **GIG 1** LED indicates the status of the Gigabit Ethernet port (both fiber and copper). The **USB** LED indicates the status of the USB port. The **T1 1** through **4** LEDs reflect the status of the network interfaces. The **ETH 1** through **4** LEDs reflect the status of the local area networks (LANs). [Table 2](#) below describes the front panel LEDs.

Table 2. NetVanta 6250 Front Panel LEDs

| LED | Color | Indication |
|----------------------------|------------------|---|
| STATUS | Off | Unit is not receiving power. |
| | Green (flashing) | On power up, the STATUS LED flashes rapidly for five seconds, during which time the user may escape to boot mode from the CONSOLE port. |
| | Green (solid) | Power is on and the unit is functioning normally. |
| | Amber (solid) | Power has failed and the unit is in battery backup mode. |
| | Red | Power is on, but the self-test failed. |
| VOICE | Off | All ports are inactive or administratively disabled. |
| | Green (flashing) | At least one port is ringing. |
| | Green (solid) | At least one port is off-hook. |
| | Amber (solid) | Port is in test mode. |
| | Red | Alarm or fault condition is occurring on the port interface. |
| USB | Off | Interface is shut down or not connected. |
| | Green (solid) | A supported device is connected. |
| | Amber (flashing) | There is activity on the link. |
| GIG 1 | Off | Port is inactive or administratively disabled. |
| | Green (solid) | The link is up. |
| | Amber (flashing) | There is activity on the link. |
| T1 1 through T1 4 | Off | All ports are inactive or administratively disabled. |
| | Green (solid) | Data T1 is up with Layer 2, PRI T1 is up with D-channel, RBS is up with Layer 1. |
| | Green (flashing) | Data T1 is up with Layer 2 down, PRI T1 is up with D-channel down. |
| | Amber (solid) | T1 is in test mode. |
| | Red | Alarm or fault condition is occurring on the port interface. |
| ETH 1 through ETH 4 | Off | LAN is administratively disabled or link is down. |
| | Green (solid) | The link is up. |
| | Amber (flashing) | There is activity on the link. |

Rear Panel Design

The NetVanta 6250 Series rear panel is shown below.

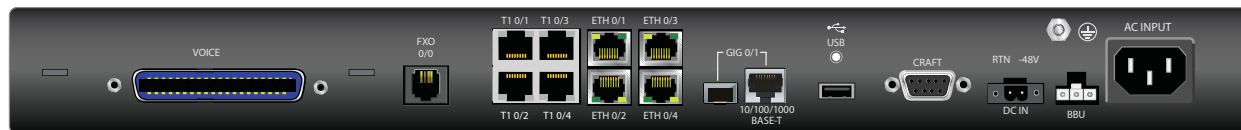


Figure 4. NetVanta 6250 Rear Panel Layout

Rear Panel Interfaces

VOICE Connection

A single 50-pin female amphenol connector, labeled **VOICE**, provides the interconnect wiring for the analog FXS/FXO circuits. See [Table A-2 on page 34](#) for voice connector pinouts. The status LED, labeled **VOICE**, is located on the front panel.



The number of circuits used (1 through 24) is dependent on the model NetVanta 6250. FXO interfaces use circuits 17 through 24 depending on the model.

FXO Interface

The **FXO 0/0** interface is an RJ-11 connector and provides analog trunks for local call routing. See [Table A-3 on page 35](#) for the FXO interface pinouts.

Network Interfaces

The **T1 0/1** through **T1 0/4** interfaces are DS1 RJ-48C pin connections. See [Table A-4 on page 35](#) for the network interface pinouts. The status LEDs, labeled **T1 1** through **4**, are located on the front panel.

10/100Base-T Ethernet Interfaces

The **ETH 0/1** through **ETH 0/4** ports are RJ-45 connectors. See [Table A-5 on page 35](#) for the Ethernet interface pinouts. The status LEDs, labeled **ETH 1** through **4**, are located on the front panel.

10/100/1000Base-T Ethernet Interfaces

The **GIG 0/1** ports consist of one RJ-45 and one small form-factor pluggable (SFP) slot for connectivity over fiber. (Use either the RJ-45 connector *or* the SFP slot. The fiber slot has precedence.) See [Table A-6 on page 35](#) for the Ethernet interface pinouts. The status LED, labeled **GIG 1**, is located on the front panel.

USB Interface (Future Release)

The **USB** interface is Type A USB host connector and is provided for use with 3G/4G modems or flash drives. The status LED, labeled **USB**, is located on the front panel. A USB power switch is used to limit the current drawn by a device connected to the USB port.

CRAFT Interface

The **CRAFT** interface is an EIA-232 serial port (DCE), which provides for local management and configuration (via a DB-9 female connector). See [Table A-7 on page 36](#) for the craft interface pinouts.



Connection directly to an external modem requires a cross-over cable.

DC Power Connection

A DC input connector, labeled **DC IN**, is provided to power the unit from a -48 VDC power source. Refer to [Supplying DC Power to the NetVanta 6250 on page 27](#) for connection details.

Grounding Point

A grounding point is provided to connect the unit to a protective earth ground. Refer to [Supplying DC Power to the NetVanta 6250 on page 27](#) for connection details.

Battery Backup Connection

An optional battery backup unit (P/N 1175044L1) is available for use in case of power outages. The battery backup unit connects to the **BBU** port, which also charges the unit during operation. Refer to [Optional Battery Backup Unit \(P/N 1175044L1/L2\) on page 29](#) for connection details.

Power Connection

The rear panel has a power input to a 120 VAC power supply with an IEC connector. The appropriate three-prong cable is included in the shipment. Refer to [Supplying Power to the Unit on page 27](#) or [Supplying DC Power to the NetVanta 6250 on page 27](#) as appropriated for connection details.

3. PRODUCT SPECIFICATIONS

The NetVanta 6240 Series products have the following features:

- 8, 16, or 24 foreign exchange station (FXS) ports
- 16 FXS ports and 8 foreign exchange office (FXO) ports
- Optional 1 onboard FXO (RJ-11) interface on the rear panel
- 4 T1 WAN (RJ-48C) interfaces
- 4 auto medium dependent interface/medium dependent interface crossover (MDI/MDIX) 10/100Base-T Ethernet ports (RJ-48C)
- EIA-232 craft port (DCE) provided for local management
- Up to 72 channels of VoIP; simultaneous TDM to IP conversions
- Stateful inspection firewall
- IPsec VPN (100 tunnels minimum)
- Data Encryption Standard (DES), 3DES, and Advanced Encryption Standard (AES) encryption for IPsec VPN traffic
- Quality of service/network address translation/Dynamic Host Configuration Protocol (QoS/NAT/DHCP) client, server, and relay
- Supports SIP trunks
- Supports Point-to-Point Protocol (PPP), Multilink PPP, Frame Relay, Multilink Frame Relay, and high level data link control (HDLC)
- Three-way conferencing
- Caller ID, call waiting, call transfer, message waiting, distinctive ringing, and star codes
- Fax and analog modem compatible (V.29, V.32, V.32bis, V.34, V.90, V.92)
- Local station-to-station calls
- Up to 60 channels of ITU T.38
- Up to 72 channels of G.711 (μ -law)
- Up to 72 channels of G.726
- Up to 72 channels of G.729
- Up to 72 channels of dual tone multi-frequency (DTMF) detection/generation
- Up to 72 channels of caller ID
- Conforms to ITU G.168
- 64 ms echo cancellation
- 200 ms adaptive jitter buffer per channel
- User-friendly GUI and a familiar CLI
- Simple Network Management Protocol (SNMP)
- LEDs for system status information
- Chassis dimensions: 1.75-inch H x 16.5-inch W x 10.25-inch D
- AC power: 100 to 120 VAC, 60 Hz
- Optional battery backup (1175044L1/L2): -48 VDC
- Operating temperature: 32°F (0°C) to +122°F (+50°C)

The NetVanta 6250 Series products have the following features:

- 8, 16, or 24 FXS ports
- 16 FXS ports and 9 FXO ports
- 1 built-in FXO lifeline on the rear panel (F2 models only)
- 4 T1 WAN (RJ-48C) interfaces
- 1 routed 10/100/1000Base-T Ethernet port (copper RJ-45 and fiber SFP)
- 4 routed auto MDI/MDIX 10/100Base-T Ethernet ports (RJ-48C)
- EIA-232 craft port (DCE) provided for local management
- USB port (host mode only)
- Up to 60 channels of VoIP
- Stateful inspection firewall
- IPsec VPN (50 tunnels minimum)
- DES, 3DES, and AES encryption for IPsec VPN traffic
- QoS/NAT/DHCP client, server, and relay
- Supports SIP trunks
- Supports PPP, Multilink PPP, Frame Relay, Multilink Frame Relay, and HDLC
- Three-way conferencing
- Caller ID, call waiting, call transfer, message waiting, distinctive ringing, and star codes
- Fax and analog modem compatible (V.29, V.32, V.32bis, V.34, V.90, V.92)
- Local station-to-station calls
- Up to 8 channels of ITU T.38
- Up to 60 channels of G.711 (μ -law)
- Up to 60 channels of G.726
- Up to 60 channels of G.729
- Up to 60 channels of DTMF detection/generation
- Up to 60 channels of caller ID
- Conforms to ITU G.168
- 64 ms echo cancellation
- 200 ms adaptive jitter buffer per channel
- User-friendly GUI and a familiar CLI
- SNMP
- LEDs for system status information
- Chassis dimensions: 1.72-inch H x 17.2-inch W x 10.5-inch D
- AC power: 120 VAC, 60 Hz
- DC power: -48 VDC
- Optional battery backup (1175044L1/L2): -48 VDC
- Operating temperature: 32°F (0°C) to +122°F (+50°C)

4. UNIT INSTALLATION

The instructions and guidelines provided in this section cover hardware installation topics, such as mounting options and supplying power to the unit. These instructions are presented as follows:

- [Tools Required on page 23](#)
- [Mounting Options on page 24](#)
- [Supplying DC Power to the NetVanta 6250 on page 27](#)

For information on configuring a specific application, refer to the configuration guides provided on the [ADTRAN's Support Forum](#) or the [AOS Command Reference Guide](#).

WARNING

To prevent electrical shock, do not install equipment in a wet location or during a lightning storm.



- *The NetVanta 6240/6250 Series is intended to be installed, maintained, and serviced by qualified service personnel only and should be installed in a restricted access location as described in UL/IEC 60950-1.*
- *Ethernet cables are intended for intrabuilding use only. Connecting an ADTRAN unit directly to Ethernet cables that run outside the building in which the unit is housed will void the user's warranty and could create a fire or shock hazard. To connect an ADTRAN unit to Ethernet cables that run outside the building, ADTRAN's Ethernet Port Protection Device (EPPD) (P/N 1700502G1) must be connected between the unit and the outside plant cable. Use of any Ethernet protector other than ADTRAN's for this purpose will void the user's warranty.*

Tools Required

The customer-provided tools required for the hardware installation of the NetVanta are:

- Ethernet cables
- Network cables (module dependent)
- Phillips-head screwdriver
- Drill and drill bit set (wallmount applications only)



To access the CLI of the NetVanta, you will also need a PC with terminal emulation software and a console port cable. Instructions on how to access the CLI are available in the quick start guide shipped with your unit or online at [ADTRAN's Support Forum](#).

Mounting Options

The unit may be installed in rackmount, wallmount, or tabletop configurations. The following sections provide step-by-step instructions for rack mounting and wall mounting.

Rack Mounting the NetVanta

The NetVanta is a 1U-high, rack-mountable unit that can be installed into 19-inch or 23-inch equipment racks. The following steps guide you in mounting the NetVanta into a rack.



ADTRAN recommends 1U (1.75 inches) of separation above and below the NetVanta 6240/6250 Series unit. This spacing allows the unit to dissipate heat. The design of the NetVanta 6240/6250 Series uses the chassis to distribute heat generated by the unit's internal cards. This design allows the unit to operate without a cooling fan, ensuring the overall reliability of the unit.




- *If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature specified by the manufacturer.*
- *Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.*
- *Be careful not to compromise the stability of the equipment mounting rack when installing this product.*
- *Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading the circuit might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.*
- *Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).*

Instructions for Rack Mounting the NetVanta

| Step | Action |
|------|---|
| 1 | Attach universal rackmount brackets in the appropriate (either 19-inch or 23-inch) position using the supplied screws. |
| 2 | To allow proper grounding, scrape the paint from the rack around the mounting holes where the NetVanta will be positioned. |
| 3 | Position the NetVanta in a stationary equipment rack allowing 1U space above the unit for ventilation. |
| 4 | Have an assistant hold the unit in position as you install two mounting bolts through the unit's brackets and into the equipment rack using a #2 Phillips-head screwdriver. |
| 5 | Apply power to the unit (refer to Supplying Power to the Unit on page 27 or Supplying DC Power to the NetVanta 6250 on page 27 as appropriate). |

Wall Mounting the NetVanta

By following these instructions exactly, the NetVanta can be safely mounted on the wall.

| | |
|---|--|
|  <p>CAUTION</p> | <ul style="list-style-type: none"> To avoid damaging the unit, use only the screws included in the shipment when attaching mounting ears to the chassis. When wall mounting the NetVanta, care must be taken not to damage the power cord. Do not attach the power cord to the building surface or run it through walls, ceilings, floors, or openings in the building structure. The socket-outlet must be installed near the equipment and must be easily accessible. |
|---|--|

| Instructions for Wall Mounting the NetVanta | |
|---|--|
| Step | Action |
| 1 | Attach the rack mounting brackets rotated 90 degrees so the rackmount tab (two screw holes) is parallel with the unit. Reattach the mounting ears to the chassis (see Figure 5 on page 26). |
| 2 | Decide on a location for the NetVanta, keeping in mind that the unit needs to be mounted at or below eye-level so that the LEDs are viewable. Warning! The NetVanta 6240/6250 can only be wall mounted with the front panel facing to the right, to the left, or downward (see the example in Figure 5 on page 26). Do not mount with the LED facing up. |
| 3 | Prepare the mounting surface by attaching a board (typically plywood, 3/4-inch to 1-inch thick) to a wall stud using #6 to #10 (2.5-inch or greater in length) wood screws. Important! Mounting to a stud ensures stability. Using sheetrock anchors may not provide sufficient long-term stability. |
| 4 | Have an assistant hold the unit in position as you install two #6 to #10 (1-inch or greater in length) wood screws through the unit's brackets and into the mounted board (see Figure 5 on page 26). |
| 5 | Proceed to the steps given in Supplying Power to the Unit on page 27 or Supplying DC Power to the NetVanta 6250 on page 27 (NetVanta 6250 only) as appropriate. |

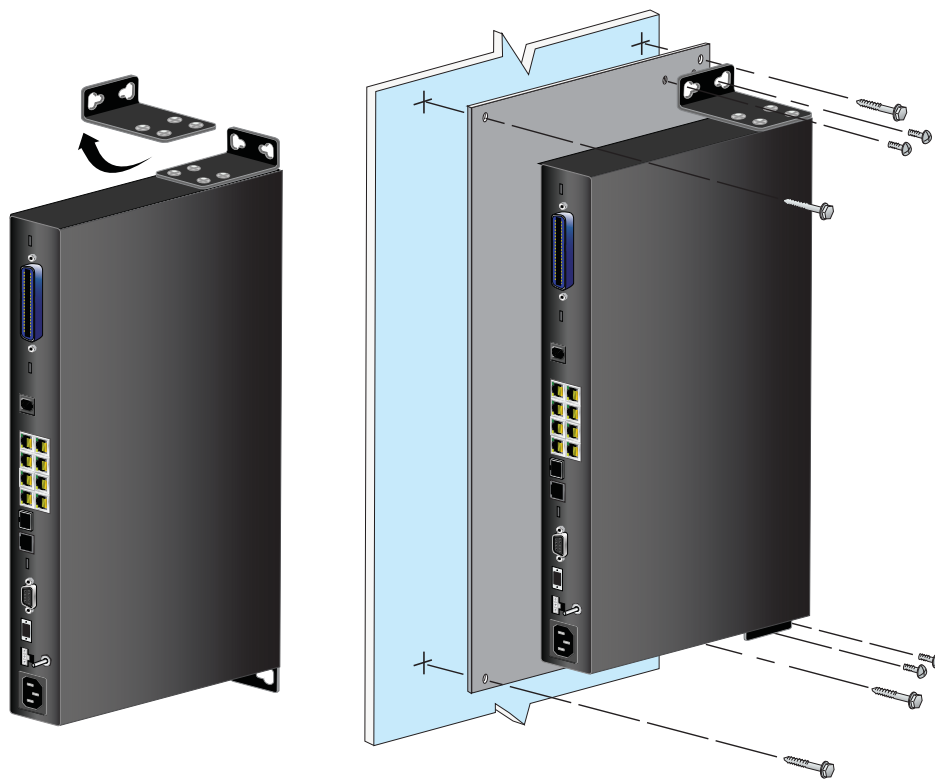


Figure 5. Wallmount Installation

Supplying Power to the Unit

The NetVanta 6240/6250 Series units come equipped with a 120 VAC, 60 Hz power supply for connecting to a properly grounded power receptacle. (A detachable power cable with a grounded, three-prong plug comes with the shipment.) To power this unit, connect the power cable to an appropriate AC power source.



- *In addition to the equipment earthing conductor in the power supply cord, a supplementary equipment earthing conductor is to be installed between the system and earth.*
- *The supplemental earthing conductor shall be connected to the equipment using a number 8 ring terminal and should be fastened to the grounding lug provided on the rear panel of the equipment. The ring terminal should be installed using the appropriate crimping tool (AMP P/N 59250 T-EAD Crimping Tool or equivalent).*
- *The supplementary equipment earthing conductor must not be smaller in size than cross-sectional area of not less than 2.5 mm², if mechanically protected. The supplementary equipment earthing conductor is to be connected to the product at the terminal provided, and connected to earth in a manner that will retain the earth connection when the power supply cord is unplugged. The connection to earth of the supplementary earthing conductor must be in compliance with the appropriate rules for terminating bonding jumpers in Part K of Article 250 of the National Electrical Code, ANSI/NFPA 70, and Article 10 of Part 1 of the Canadian Electrical Code, Part 1, C22.1. Termination of the supplementary earthing conductor is permitted to be made to building steel, to a metal electrical raceway system, or to any earthed item that is permanently and reliably connected to the electrical service equipment earthed.*
- *Bare, covered, or insulated earthing conductors are acceptable. A covered or insulated conductor must have a continuous outer finish that is either green, or green with one or more yellow stripes.*
- *A readily accessible disconnect device, that is suitably approved and rated, shall be incorporated in the field wiring.*
- *Maximum recommended ambient operating temperature is 50°C.*

Supplying DC Power to the NetVanta 6250

The NetVanta 6250 can also be connected to a centralized DC power source via the two-position terminal block connector (**DC IN**) located on the rear of the chassis (see [Figure 6 on page 28](#)). Power and ground connections require copper conductors and a ring lug.



ADTRAN does not recommend using the optional battery backup unit when the NetVanta 6250 is being powered from a DC source.

| Instructions for Connecting DC Power Source to the NetVanta 6250 | |
|--|--|
| Step | Action |
| 1 | Insert the positive terminal of the DC power source into left position of the two-position terminal block (labeled RTN on the NetVanta 6250). Tighten the screw. |
| 2 | Insert the negative terminal of the DC power source into the right position of the two-position terminal block (labeled -48V on the NetVanta 6250). Tighten the screw. |
| 3 | With the power disconnected, insert the terminal block into the receptacle labeled DC IN until it is firmly seated against the chassis. Tighten the two screws. |
| 4 | Connect a ground wire (fitted with a number 8 ring terminal end) to the grounding lug using the screw provided and the appropriate crimping tool (AMP P/N 59250 T-EAD Crimping Tool or equivalent). Connect the other end of the ground wire to a protective earth ground. See Figure 6 below. |
| 5 | Supply DC power to the unit. |



- Power to the NetVanta 6250 system must be from a reliably grounded 48 VDC.
- Use only copper conductors when making power connections.
- Install unit in accordance with the requirements of NEC NFPA 70.
- The branch circuit overcurrent protection shall be a fuse or circuit breaker rated minimum -48 VDC, maximum 10 A.
- A readily accessible disconnect device, that is suitably approved and rated, shall be incorporated in the field wiring.
- Maximum recommended ambient operating temperature is 50°C.

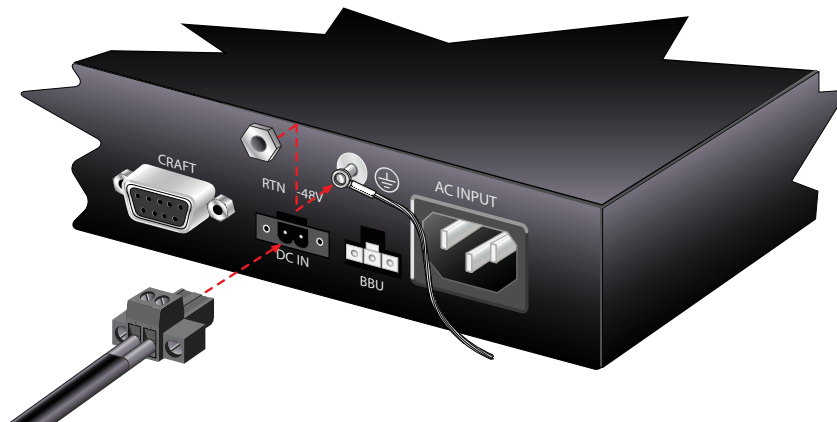


Figure 6. Supplying DC Power and Grounding the NetVanta 6250

Optional Battery Backup Unit (P/N 1175044L1/L2)

The ADTRAN battery backup unit (BBU) is an optional device designed as a backup DC power supply for the NetVanta 6240/6250 Series. The BBU connects to the NetVanta 6240/6250 through a 6-foot charge/discharge, 2-conductor wire with a keyed modular plug (included with the BBU). The 1175044L1 BBU is a low profile wallmount configuration. It can be rack mounted with the appropriate 19-inch or 23-inch rackmount adapter brackets. The 19-inch rackmount adapter bracket part number is P/N 1175047L1. The 23-inch rackmount adapter bracket part number is P/N 1175048L1.



ADTRAN does not recommend using the optional battery backup unit when the NetVanta 6250 is being powered from a DC source.

Features of the BBU, P/N 1175044L1, include the following:

- No-spill battery design
- Compact wallmount or rackmount box
- Double BBU rack mounting available
- 7 AHR battery (up to 8 hours of backup, depending on load)
- Modular plug (provides quick and easy installation)
- All mounting hardware included

Unpack and Inspect the BBU

After unpacking the BBU unit, inspect it for damage. If damage is noted, file a claim with the carrier; then contact ADTRAN Customer Service.

Batteries are retained and prewired in the BBU in a specific pattern. Battery position is maintained by foam spacers press fitted against the housing walls. Removing batteries or disconnecting wires compromises correct reassembly and should not be attempted.

BBU Safety and EMC Notices



- *Removing the BBU covers could allow batteries to fall out.*
- *The BBU should only be used in specified ADTRAN applications.*
- *The BBU (P/N 1175044L1) weighs in excess of 30 pounds. Arrange for assistance when handling the BBU for mounting.*

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including that which may cause undesired operation.

Wall Mounting the BBU

Figure 7 shows the BBU (P/N 1175044L1) mounting dimensions for the NetVanta 6240/6250 Series.

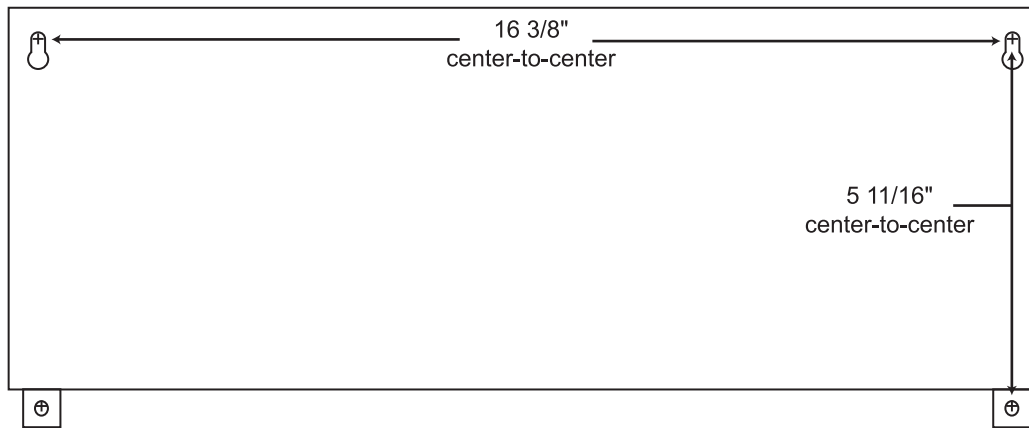


Figure 7. Wall Mounting the BBU

Install the BBU as follows:

| Instructions for Wall Mounting the BBU | |
|--|---|
| Step | Action |
| 1 | Decide on a location for the BBU, keeping in mind that the cable plugs must be able to reach their designated sockets in the NetVanta unit. |
| 2 | Prepare the mounting surface by attaching a board (typically plywood, 3/4-inch to 1-inch thick) to a wall stud using #6 to #10 (2.5-inch or greater in length) wood screws. <i>Important! Mounting to a stud ensures stability. Using sheetrock anchors may not provide sufficient long-term stability.</i> |
| 3 | Ensuring a plumb measurement, mark where the pilot holes are to be drilled according to the dimensions given in Figure 7 on page 30 . |
| 4 | Drill all four pilot holes using a size 1/16-inch drill bit. |
| 5 | Screw two #10 x 3/4-inch pan-head screws into the top two previously drilled holes. Let the head of each screw protrude 1/16 inch from the plywood to engage the keyhole slot. |



Do not let the weight of the BBU rest on the two keyhole screws. Maintain support until the lower two screws are fully inserted.

| | |
|---|---|
| 6 | With an assistant, lift the BBU and position to engage the screw heads into the top two keyholes. Allow the unit to slide down until the slot end rests against the screws. |
| 7 | Insert the two lower screws through the tabs and tighten securely. |
| 8 | Use cable ties as appropriate. The battery connection from the BBU should be directly connected to the BATT port on the rear of the chassis. |

BBU Maintenance

- The BBU does not require routine maintenance for normal operation. The life expectancy of the BBU is 3 to 5 years on standby when used at room temperature.
- Excessive heat decreases battery power and life. Extreme low temperature also decreases battery capacity. Ideal ambient temperature for battery life and capacity is 20°C.
- Battery shelf life is extended in cooler temperatures.
- To order replacement batteries, reference the following part number: 1975044L1 (12 V replacement batteries).

ADTRAN is an environmentally friendly company. Therefore, we encourage the proper recycling and handling of the batteries. Federal and state laws prohibit the improper disposal of all lead acid batteries. The customer is responsible for the handling of their batteries from the day of purchase through their ultimate disposal. For more information on battery replacement and recycling, refer to the document [Battery Replacement and Recycling](#).

BBU Specifications

Table 3 provides BBU specifications.

Table 3. BBU Specifications

| | |
|----------------------------|---|
| Battery | |
| Part Number: | 311212V02 |
| Suppliers: | YUASA and Panasonic |
| Batteries: | 7 AHR per battery |
| Voltage: | -12 VDC per battery |
| Backup Time: | Up to 8 hours |
| Wire Gauge: | 18 AWG |
| Environmental | |
| Operating Temperatures: | Charge: -15°C to 50°C Discharge: -20°C to 60°C |
| Preferred: | 20°C |
| Physical Dimensions | |
| P/N 1175044L1: | 17-inch W x 6.5-inch H x 3.5-inch D |
| Weight: | 30 lb |

Your NetVanta unit is now ready to be configured and connected to the network. For information on configuration for a specific application, refer to the configuration guides provided online on [ADTRAN's Support Forum](#). For details on the CLI, refer to the [AOS Command Reference Guide](#). All other related documents are also available online on [ADTRAN's Support Forum](#).

APPENDIX A. CONNECTOR PIN DEFINITIONS

The following tables provide the pin assignments for the base unit.

Table A-1. VOICE Connector Pinouts (NetVanta 6240)

| Pins | 50-pin Amphenol Connector | Description |
|-------------|----------------------------------|--|
| 1, 26 | Circuit 1 | FXS 0/1 Ring, Tip |
| 2, 27 | Circuit 2 | FXS 0/2 Ring, Tip |
| 3, 28 | Circuit 3 | FXS 0/3 Ring, Tip |
| 4, 29 | Circuit 4 | FXS 0/4 Ring, Tip |
| 5, 30 | Circuit 5 | FXS 0/5 Ring, Tip |
| 6, 31 | Circuit 6 | FXS 0/6 Ring, Tip |
| 7, 32 | Circuit 7 | FXS 0/7 Ring, Tip |
| 8, 33 | Circuit 8 | FXS 0/8 Ring, Tip |
| 9, 34 | Circuit 9 | FXS 0/9 Ring, Tip |
| 10, 35 | Circuit 10 | FXS 0/10 Ring, Tip |
| 11, 36 | Circuit 11 | FXS 0/11 Ring, Tip |
| 12, 37 | Circuit 12 | FXS 0/12 Ring, Tip |
| 13, 38 | Circuit 13 | FXS 0/13 Ring, Tip |
| 14, 39 | Circuit 14 | FXS 0/14 Ring, Tip |
| 15, 40 | Circuit 15 | FXS 0/15 Ring, Tip |
| 16, 41 | Circuit 16 | FXS 0/16 Ring, Tip |
| 17, 42 | Circuit 17 | FXS 0/17 Ring, Tip or FXO 0/3 Ring, Tip |
| 18, 43 | Circuit 18 | FXS 0/18 Ring, Tip or FXO 0/4 Ring, Tip |
| 19, 44 | Circuit 19 | FXS 0/19 Ring, Tip or FXO 0/5 Ring, Tip |
| 20, 45 | Circuit 20 | FXS 0/20 Ring, Tip or FXO 0/6 Ring, Tip |
| 21, 46 | Circuit 21 | FXS 0/21 Ring, Tip or FXO 0/7 Ring, Tip |
| 22, 47 | Circuit 22 | FXS 0/22 Ring, Tip or FXO 0/8 Ring, Tip |
| 23, 48 | Circuit 23 | FXS 0/23 Ring, Tip or FXO 0/9 Ring, Tip |
| 24, 49 | Circuit 24 | FXS 0/24 Ring, Tip or FXO 0/10 Ring, Tip |
| 25, 50 | — | Unused |

Table A-2. VOICE Connector Pinouts (NetVanta 6250)

| Pins | 50-pin Amphenol Connector | Description |
|-------------|----------------------------------|---|
| 1, 26 | Circuit 1 | FXS 0/1 Ring, Tip |
| 2, 27 | Circuit 2 | FXS 0/2 Ring, Tip |
| 3, 28 | Circuit 3 | FXS 0/3 Ring, Tip |
| 4, 29 | Circuit 4 | FXS 0/4 Ring, Tip |
| 5, 30 | Circuit 5 | FXS 0/5 Ring, Tip |
| 6, 31 | Circuit 6 | FXS 0/6 Ring, Tip |
| 7, 32 | Circuit 7 | FXS 0/7 Ring, Tip |
| 8, 33 | Circuit 8 | FXS 0/8 Ring, Tip |
| 9, 34 | Circuit 9 | FXS 0/9 Ring, Tip |
| 10, 35 | Circuit 10 | FXS 0/10 Ring, Tip |
| 11, 36 | Circuit 11 | FXS 0/11 Ring, Tip |
| 12, 37 | Circuit 12 | FXS 0/12 Ring, Tip |
| 13, 38 | Circuit 13 | FXS 0/13 Ring, Tip |
| 14, 39 | Circuit 14 | FXS 0/14 Ring, Tip |
| 15, 40 | Circuit 15 | FXS 0/15 Ring, Tip |
| 16, 41 | Circuit 16 | FXS 0/16 Ring, Tip |
| 17, 42 | Circuit 17 | FXS 0/17 Ring, Tip or FXO 0/1 Ring, Tip |
| 18, 43 | Circuit 18 | FXS 0/18 Ring, Tip or FXO 0/2 Ring, Tip |
| 19, 44 | Circuit 19 | FXS 0/19 Ring, Tip or FXO 0/3 Ring, Tip |
| 20, 45 | Circuit 20 | FXS 0/20 Ring, Tip or FXO 0/4 Ring, Tip |
| 21, 46 | Circuit 21 | FXS 0/21 Ring, Tip or FXO 0/5 Ring, Tip |
| 22, 47 | Circuit 22 | FXS 0/22 Ring, Tip or FXO 0/6 Ring, Tip |
| 23, 48 | Circuit 23 | FXS 0/23 Ring, Tip or FXO 0/7 Ring, Tip |
| 24, 49 | Circuit 24 | FXS 0/24 Ring, Tip or FXO 0/8 Ring, Tip |
| 25, 50 | FXO 0/0 | FXO 0/0 |

Table A-3. FXO Connector Pinouts

| Pin | Name | Description |
|------|------|-----------------------------------|
| 1, 2 | — | Unused |
| 3 | Ring | Ring lead of the 2-wire interface |
| 4 | Tip | Tip lead of the 2-wire interface |
| 5, 6 | — | Unused |

Table A-4. T1 Port Pinouts

| Pin | Name | Description |
|-----|------|---------------------------------------|
| 1 | RX | Receive data from the network—Ring |
| 2 | RX | Receive data from the network—Tip |
| 3 | — | Unused |
| 4 | TX | Transmit data toward the network—Ring |
| 5 | TX | Transmit data toward the network—Tip |
| 6-8 | — | Unused |

Table A-5. 10/100Base-T Ethernet Port Pinouts

| Pin | Name | Description |
|------|------|-------------------|
| 1 | TX+ | Transmit Positive |
| 2 | TX- | Transmit Negative |
| 3 | RX+ | Receive Positive |
| 4, 5 | — | Unused |
| 6 | RX- | Receive Negative |
| 7, 8 | — | Unused |

Table A-6. 1000Base-T Gigabit Ethernet Port Pinouts

| Pin | Name | Description |
|-----|-------|---------------------------|
| 1 | TRD0+ | Transmit/Receive Positive |
| 2 | TRD0- | Transmit/Receive Negative |
| 3 | TRD1+ | Transmit/Receive Positive |
| 4 | TRD2+ | Transmit/Receive Positive |
| 5 | TRD2- | Transmit/Receive Negative |
| 6 | TRD1- | Transmit/Receive Negative |
| 7 | TRD3+ | Transmit/Receive Positive |
| 8 | TRD3- | Transmit/Receive Negative |

Table A-7. CRAFT Port Pinouts

| Pin | Name | Description |
|------------|-------------|------------------------------|
| 1 | DCD | Data Carrier Detect (output) |
| 2 | TXD | Receive Data (output) |
| 3 | RXD | Transmit Data (input) |
| 4 | DTR | Data Terminal Ready (input) |
| 5 | GND | Signal Ground |
| 6 | DSR | Data Set Ready (output) |
| 7 | RTS | Request to Send (input) |
| 8 | CTS | Clear to Send (output) |
| 9 | — | Unused |