



## Configuring SPRE Mapping in AOS

Requires A1.05.00 Firmware or Higher in A1 family

Requires A2.03.00 Firmware or Higher

### Overview

This document describes *SPRE mapping*. Using this feature, the AOS voice product may be configured such that certain functions are assigned to a given SPRE code. For example, the function “Block Caller-ID Delivery” can be assigned to \*62 instead of its default of \*67. Functions can also be mapped to have no corresponding SPRE code.

### Configuration

To configure a SPRE map, issue the following global configuration command:

```
hostname(config)# voice spre-map <function> <*NX>
```

### Example

An example of a SPRE map is shown below. In this example, the SPRE code for “Block Caller-ID delivery” is set to \*62.

```
!  
!  
voice spre-map block-callid-delivery *62  
!  
!
```