

## DESCRIPTION

The Small Form-Factor Pluggable OC-3 Long-Reach 2 (SFP3L2) plugs into ADTRAN OC-3 modules designed to accept Small Form-factor Pluggables (SFPs). Installed into an appropriate host module, the SFP3L2 provides an OC-3 interface to the supporting system.

*NOTE: To ensure compatibility, refer to the documentation provided with the host module.*

The following features are supported on the SFP3L2:

- ◆ SONET OC-3 (155.52 Mb/s) 1550 nm, long-reach (LR-2), single-mode, 2-fiber operation
- ◆ Digital diagnostics via the menus of the host module

*CAUTION: Due to compliance certification requirements, only SFPs supplied by ADTRAN are to be used with the host module. ADTRAN cannot certify system integrity with other SFPs.*

## Operational Specifications

- ◆ Optical Specifications:
  - Transmit level: -5 dBm to 0 dBm
  - Receive level: -34 dBm to -10 dBm
  - Optical budget: 28 dB
  - Optical connectors: LC
- ◆ Extended Environmental Support:
  - Operational temperature range: -40°C to +65°C
  - Storage temperature range: -40°C to +100°C
  - Relative humidity to 95%, noncondensing

## INSTALLATION

To install the SFP3L2 into an appropriate module, perform the following steps:

1. Inspect the SFP3L2. If damaged, file a claim with the carrier and then contact ADTRAN Customer Service.
2. Remove the black safety cap from the optical connectors of the SFP3L2.
3. Insert the SFP3L2 into the receptacle on the circuit board of the host module, with the manufacturer's label facing outward. Slide the SFP3L2 all the way into the receptacle.
4. Using thumb and forefinger, firmly squeeze the receptacle and SFP3L2 together, to ensure a proper connection.

*NOTE: The latch on the SFP is for removal only.*

5. Continue the installation and turn-up of the host module using the instructions in the Job Aid provided with that module, or using the Installation and Maintenance Practice (I&M), available online at [www.adtran.com](http://www.adtran.com).

## PROVISIONING

The SFP3L2 is not directly provisionable. To provision the SFP3L2, access the menu system of the host module. Refer to the "Provisioning" section of the Job Aid or I&M provided with the host module for provisioning details.



## COMPLIANCE

**CAUTION:** *Electrostatic Discharge (ESD) can damage electronic modules. When handling modules, wear an antistatic discharge wrist strap to prevent damage to electronic components. Place modules in antistatic packing material when transporting or storing. When working on modules, always place them on an approved antistatic mat that is electrically grounded.*

*The SFP3L2 is NRTL Listed to the applicable UL standards. The SFP3L2 meets or exceeds all the applicable requirements of NEBS, Telcordia GR-63-CORE, and GR-1089-CORE. The SFP3L2 is intended for deployment in Central Office type facilities, EEEs, EECs, and locations where the NEC applies (for example, Customer Premises). Install the SFP3L2 in an ADTRAN product located in a restricted access location.*

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by ADTRAN could void the user's authority to operate this equipment.

**CAUTION:** *Per GR-1089-CORE the ADTRAN system that the SFP is being deployed in is designed and intended for installation as part of a Common Bonding Network (CBN). The ADTRAN system that the SFP is being deployed in is not designed nor intended for installation as part of an Isolated Bonding Network (IBN).*

*Per GR-1089-CORE Section 9, the SFP3L2 does not have an internal DC connection between battery return and frame ground. The SFP3L2 can be installed in a DC-I (isolated) or DC-C (common) installation. For installations where other cards or the host system have internal connections between battery return and frame ground, the system would be intended for deployment only in a DC-C installation.*

*The ADTRAN system chassis frame ground terminal must be connected to an earth ground to ensure that the metal enclosure of the SFP3L2 is properly grounded via the backplane connector.*

**NOTE:** *The OC-3 port(s) are optical and therefore are not classified as any type of port as defined in Appendix B of GR-1089-CORE Issue 4.*

The SFP3L2 is designed to meet the following environmental classes:

- ◆ ETSI EN 300 019-1-1 "Classification of environmental conditions; Storage," Class 1.2
- ◆ ETSI EN 300 019-1-2 "Classification of environmental conditions, Transportation," Class 2.3
- ◆ ETSI EN 300 019-1-3 "Classification of environmental conditions, Stationary use at weather-protected locations," Class 3.3

The equipment is designed to function without degradation during exposure to all test severities per Class 3.3.

**Warranty:** ADTRAN will replace or repair this product within the warranty period if it does not meet its published specifications or fails while in service. Warranty information can be found online at [www.adtran.com/warranty](http://www.adtran.com/warranty).

©2007 ADTRAN, Inc. All Rights Reserved.



**PRICING AND AVAILABILITY** 800.827.0807  
**TECHNICAL SUPPORT** 800.726.8663  
**RETURN FOR REPAIR** 256.963.8722

