

**SMART/RG**  
An ADTRAN Company



**SR400ac**

**Quick Start Guide**

# Important Safety Instructions

When using your telecommunications equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Use only the power adaptor that is included with the device.
2. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
3. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
4. Do not use the telephone to report a gas leak in the vicinity of the leak.
5. **CAUTION** - To Reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

## WEEE Statement



The WEEE logo (shown at the left) appears on the product to indicate that this product must not be disposed of or dumped with your other household wastes. You are required to dispose of your electronic or electrical waste equipment by delivering it to the specified collection point for recycling of such hazardous waste.

# Importantes Mesures de Sécurité

tre prises pendant l'utilisation de matériel télécommunications afin de réduire les risques d'incendie, de choc électrique  
Certaines mesures de sécurité doivent et de blessures. En voici quelquesunes:

1. Utilisez uniquement l'adaptateur secteur fourni avec l'appareil.
2. Ne pas utiliser l'appareil près de l'eau, p.ex., près d'une baignoire, d'un lavabo, d'un évier de cuisine, d'un bac à laver, dans un sous-sol humide ou près d'une piscine.
3. Éviter d'utiliser le téléphone (sauf s'il s'agit d'un appareil sans fil) pendant un orage électrique. Ceci peut présenter un risque de choc électrique causé par la foudre.
4. Ne pas utiliser l'appareil téléphonique pour signaler une fuite de gaz s'il est situé près de la fuite.
5. **ATTENTION** - Pour réduire les risques d'incendie, utiliser uniquement des conducteurs de télécommunications 26 AWG au de section supérieure.

le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

## DEEE Statement




Le logo DEEE (illustré à gauche) apparaît sur le produit pour indiquer que ce produit ne doit pas être jeté ou jeté avec vos autres déchets ménagers. Vous êtes tenu de vous débarrasser de vos déchets d'équipements électroniques ou électriques en les livrant au point de collecte spécifié pour le recyclage de ces déchets dangereux.

# Installation

1. Connect a LAN port on the SmartRG gateway to the network card of your PC using an Ethernet cable.
2. To connect a broadband device:
  - Connect one end of an Ethernet cable to the **WAN** port on the SmartRG gateway and connect the other end of the cable to the broadband device.
  - Connect one end of the cable supplied by your provider to the broadband modem and connect the other end of the cable to the wall jack installed by your provider.
3. Plug the power adapter to the wall outlet and then connect the other end of it to the **Power** port of the gateway.
4. Turn on the unit by pressing the **On/Off** button on the side of the gateway.

Your gateway is now automatically being set up to connect to the Internet. This process may take a few minutes to complete before you can begin using your Internet applications (browser, email, etc.).

If you are unable to connect to the Internet, confirm that all cable connections are in place and the gateway's power is turned on.

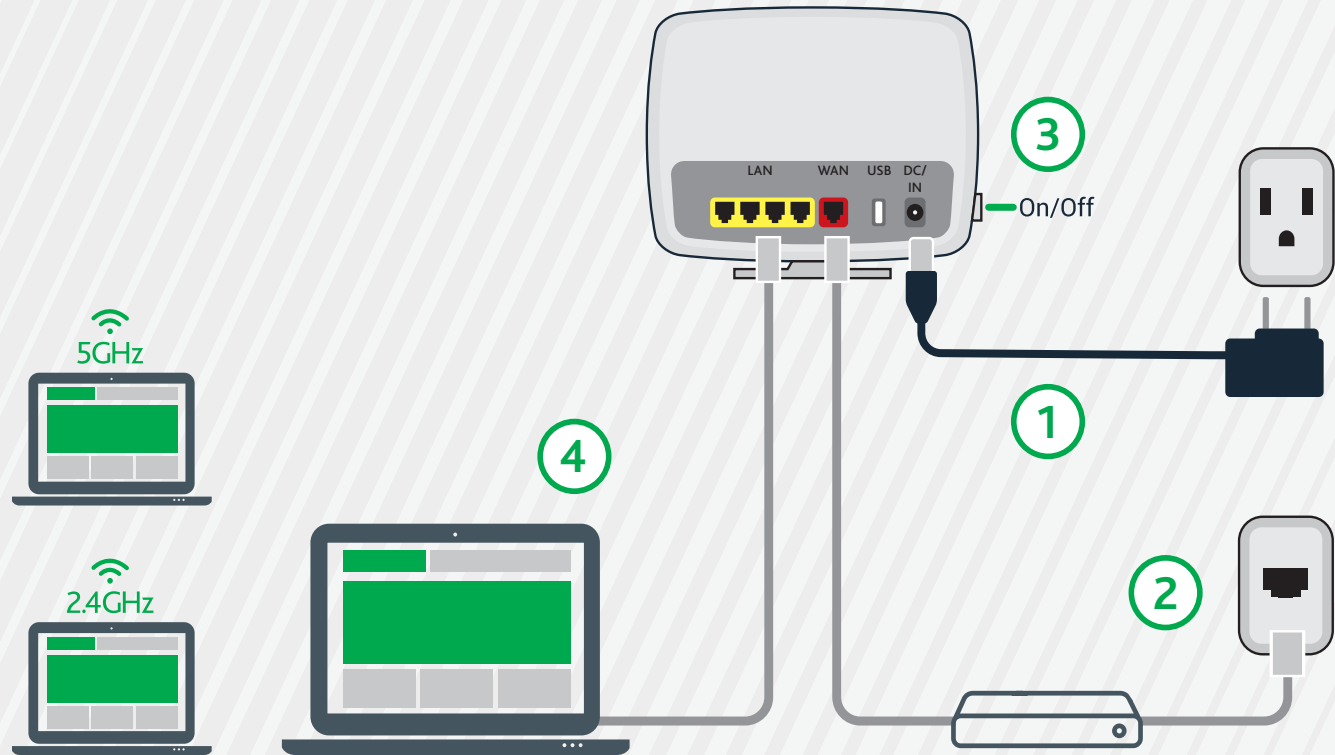

# LED Indicators














The LEDs on the top of the SR400ac can assist you in better understanding the current state of your gateway.

There is also a small LED on the front of the gateway that flickers when data is being transferred.



**Legend:**    White    White blinking    Green    Green blinking    Red


LED	Action	Explanation
Power		Device in CFE mode
		Device powered on and ready for use
WAN		Gateway online (at 1000 BASE-T)
		Gateway online (at 10/100 BASE-T)
		Network activity
		WAN Ethernet connected (at 1000 BASE-T)
		Data being transferred (at 1000 BASE-T)
		WAN Ethernet connected (at 10/100BASE-T)
		Data being transferred (at 10/100BASE-T)

LED	Action	Explanation
Internet		Gateway online
		Data being transferred
		Internet authentication / connection has failed
USB / USB 3.0		USB device connected
		Data being transferred
2.4 GHz 5 GHz		WiFi enabled
		Data being transferred
Locked Wifi (WPS)		WPS enabled
		Data being transferred
1-4 (LAN)		LAN Ethernet connected (at 1000 BASE-T)
		Data being transferred (at 1000 BASE-T)
		LAN Ethernet connected (at 10/100BASE-T)
		Data being transferred (at 10/100BASE-T)

# Logging in to your gateway

To change the settings on your gateway, you must log into the gateway's interface. Make sure that you have completed the steps in "Installation" before you begin.

1. Open your internet browser application and type 192.168.1.1 into the address line. The Login dialog box appears.

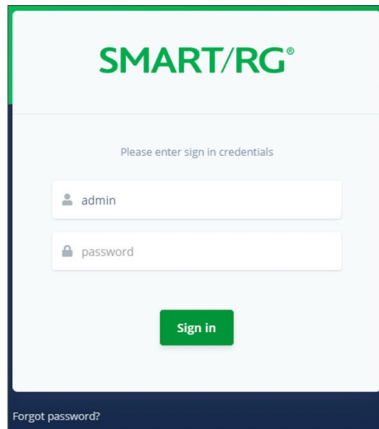The image shows a login interface for SMART/RG. At the top, the logo "SMART/RG®" is displayed in green. Below the logo, the text "Please enter sign in credentials" is shown in a small, light gray font. There are two input fields: the first is for the username, with a person icon and the text "admin" inside; the second is for the password, with a lock icon and the text "password" inside. Below these fields is a green button with the text "Sign In" in white. At the bottom left, there is a link that says "Forgot password?".

SMART/RG®

Please enter sign in credentials

admin

password

Sign In

Forgot password?

2. Enter the credentials shown below and click **Sign In**. Your service provider may use other settings. If so, contact your provider for details.

**User Name:** admin

**Password:** admin



To review the end user license agreement, click the [License Agreement link](#) at the bottom right corner of the browser window. The agreement appears in a separate tab.


**Note:** If you've forgotten your password, click [Forgot password](#) and follow the instructions to reset your gateway to the factory defaults. Then, enter the credentials provided with the gateway when you first received it.

## Configuring the WAN manually

If the automatic connect process is unsuccessful, refer to the Ethernet WAN Configuration section of the *SmartRG SR400AC Gateway User Manual* to manually establish a connection.

# WiFi Setup



1. In the left menu, click **WiFi** > **Networks**. The following page appears, showing information for the primary wireless network. The dual-band option is enabled by default.

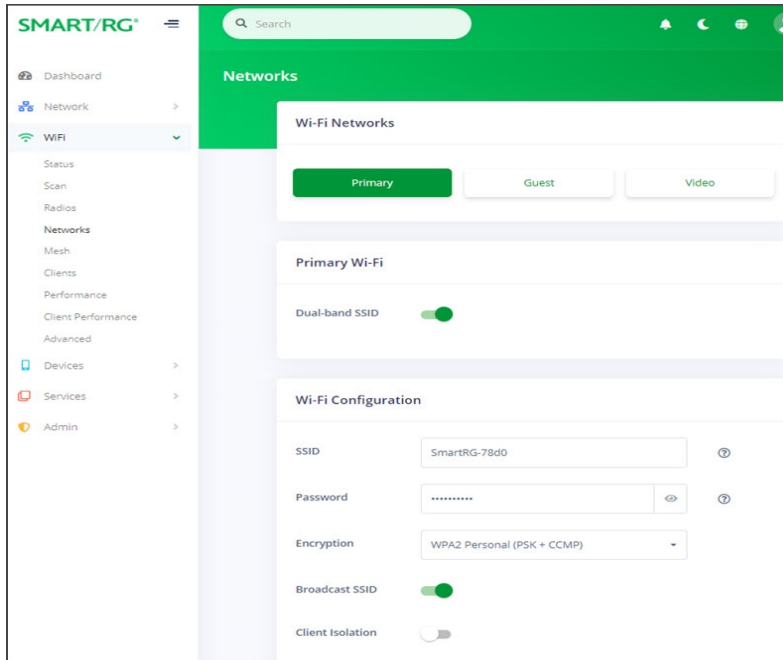

2. Accept the default ID shown in the **SSID** field or enter the SSID for the network that you want to configure. You will need this ID for Step 9.
3. Choose a passphrase and type it in to the **Password** field. You will need this passphrase for Step 9.
4. In the **Encryption** field, accept the default authentication type or select **None**. For security purposes, selecting None is not recommended.
5. If you *do not want* this SSID visible to other users, click the **slide button** next to **Broadcast SSID**.
6. Skip the **Client Isolation** field. If needed, you can change this setting later.
7. Click the **Apply button** in the **Pending changes...** dialogue to save your settings.
8. To enable a guest or video WiFi network:
  - a. Click the **GUEST** or **VIDEO** button.
  - b. Click the **slide button** next to **Enabled**.
  - c. Modify the fields as needed and then click the **Apply button** in the **Pending changes...** dialogue to save your settings.
9. Follow the WiFi connection instructions provided with your client device to connect to the gateway.
  - Use the **SSID name** you selected in Step 2.
  - Then enter the passphrase that you created in Step 3 in the appropriate location on the network setup screen of your WiFi client device.

## Optional Wall Mount

- ① Using a Phillips-head screwdriver, remove the mount from its present location on the bottom of the gateway.
- ② Slide the mount onto the back of the gateway and tighten the screw located in the bottom of the mount.
- ③ Using the template below, attach the two included screws to the wall. Using wall anchors is recommended.

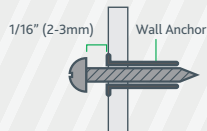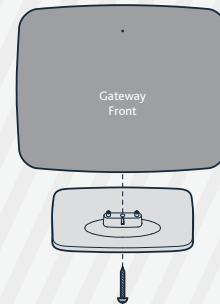

- ④ Slide the back of the mount down on the screws.



## Record Your SR400ac WiFi Settings

	Predefined wireless settings	If you change the preset wireless settings
Primary WiFi network name (SSID)	<input type="text"/>	<input type="text"/>
Primary WiFi Network key (password)	<input type="text"/>	<input type="text"/>
Guest WiFi network name (SSID)	<input type="text"/>	<input type="text"/>
Guest WiFi network key (password)	<input type="text"/>	<input type="text"/>
Video WiFi network name (SSID)	<input type="text"/>	<input type="text"/>
Video WiFi network key (password)	<input type="text"/>	<input type="text"/>

## Additional Support

If you require further instructions, please contact your local ISP Support.