

TRACER 2210/3202 Status Menu Tree

1) STATUS	1) RSSI	
	2) FAR RSSI	
3) UTIL		
4) TEST	3) PERFRM REPORTS	SES 15 Min/24 Hr
		ES 15 Min/24 Hr
		%AV 15 Min/24 Hr
		%EF 15 Min/24 Hr
		RESET PERF CNTRS

TRACER 2210/3202 Config Menu Tree

1) STATUS 2) CONFIG 3) UTIL 4) TEST	1) 2210	1) CLOCK SOURCE	INTERNAL	1	
			FAR END	2	
			AUTO	3	
			DTE	4	
		1) V.35 STEP SIZE		56 Kbps	4
				64 Kbps	5
		2) V.35 RATE Nx 56/64	N=		6
		2) V.35		AUTO	7
				INT--INV	8
				EXTERNAL	9
				INTERNAL	10
				INTERNAL	11
				NORMAL	12
				INVERT	13
		4) DATA		NORMAL	14
				INVERT	15
		5) CTS		NORMAL	16
				FORCE ON	17
				NORMAL	18
				FORCE ON	19
		6) DCD		NORMAL	20
				FORCE ON	21
		7) DSR		NORMAL	22
				FORCE ON	23
	3) RADIO	1) TRANSMIT POWER (↑/↓)		24	
		2) FAR TRANSMIT POWER (↑/↓)			
		3) CHANNEL PLAN	NEAR (A or B)		
			FAR (A or B)		
		4) CHANGE CHANNEL PLAN (A or B)	(YES/NO)		

TRACER 2210/3202 Util Menu Tree

1) STATUS	1) SOFTWARE REV	REVISION
		CHECKSUM
2) CONFIG	2) RADIO SW REV	REVISION
		CHECKSUM
3) UTIL	3) REINIT UNIT	
4) TEST	4) SET PASSCODE (valid range 0000-9999)	
	5) KEYPAD LOCK	UNLOCKED
		LOCKED
	6) FACT RESTORE	
	7) ALL PIXELS ON	
	8) ALL PIXELS OFF	
	9) LED TEST	

TRACER 2210/3202 Test Menu Tree

1) STATUS	1) LOOPBACKS	NO LOOPBACK
		FAR 2210
		2210 TO RADIO
		2210 TO DTE
		RADIO CABLE
2) CONFIG	2) TEST PATTERN	NO PATTERN
		QRSS PATTERN
		511 PATTERN
3) UTIL		1:8 PATTERN
4) TEST	3) CLR PATTN ERRORS	
	4) INSERT PATTN ERR	
	5) CLEAR TESTS	