

TSU 610 HDSL Network Module Installation Instructions

HDSL Network Module
P.N. 1200651L1

This product is designed for use in the 1200610L2, 1200610L2#DC, 1200615L2, and 1200615L2#DC.

To install the HDSL Network Module in the TSU 610 family:

1. On the TSU unit, turn the power switch **OFF**.
2. Loosen the captive fasteners on the network module installed in the TSU 610.
3. Remove the module.
4. Install the HDSL Network Module. (See Figure 1.)
5. Tighten the captive fasteners on the HDSL Network Module.
6. Turn the TSU 610 power switch **ON**.
7. Refer to the TSU 610 User Manual for instructions on configuring the HDSL Network Module.

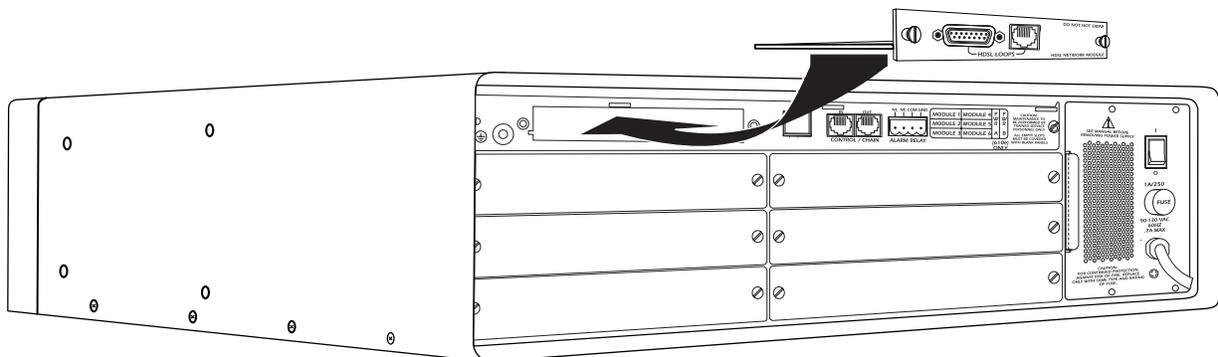


Figure 1: HDSL Network Module