
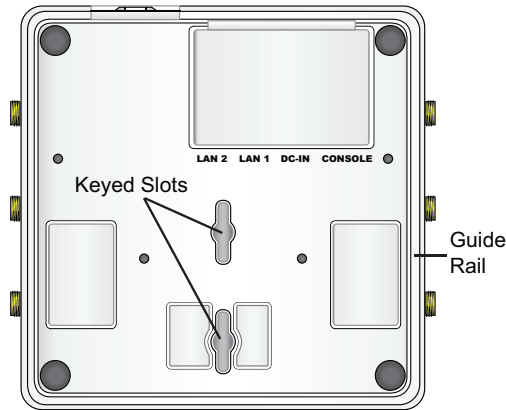


Bluesocket Hard Ceiling/Wall/Junction Box Mounting Bracket for BSAP

P/N 1700984F1

Use with BSAPs 1930/1935/2030/2035 only.

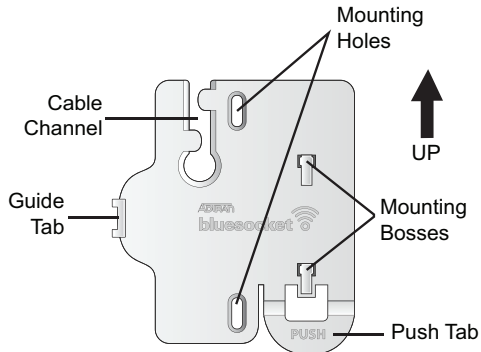

SHIPPING CONTENTS

The Bluesocket Mounting Bracket shipment includes:

- Two #6 screws
- Two drywall anchors



The Bluesocket Hard Ceiling/Wall/Junction Box Mounting Bracket is intended to use with the BSAP 1930/1935 and BSAP 2030/2035 units only.

MOUNTING THE BSAP TO A CEILING/WALL (CONTINUED)

6. Align the left side of the BSAP with the left side of the mounting bracket so that the bracket's guide tab engages with the BSAP's guide rail.
7. At the same time, align the bottom of the BSAP with the bottom edge of the mounting bracket. You should feel the mounting bosses align with the keyed slots in the back of the BSAP.
8. When the mounting bosses are fully inserted and the BSAP is resting flush against the mounting bracket, slide the BSAP downward until it snaps into place.

MOUNTING THE BSAP TO A CEILING/WALL

BSAPs should be positioned for maximum throughput and range between other APs and wireless client devices. Follow these instructions to mount the BSAP on an interior ceiling or wall using the enclosed mounting kit:

1. For BSAPs with external antennas, install the antennas onto the appropriate antenna ports before mounting.
2. Orient the bracket as shown in the figure above. Using the mounting holes in the bracket as a template, mark the screw locations on the ceiling or wall.
3. For drywall, screw the anchors directly into the drywall using a Phillip's head screwdriver. For hard wall, drill 1/8-inch pilot holes (do not use anchors).
4. For drywall, drive the enclosed #6 screws through the mounting bracket into the drywall anchors using a Phillip's head screwdriver. For hard wall, drive the screws directly into the pilot holes.
5. Route the Ethernet cable through the channel shown in the figure above, and plug the cable into the appropriate LAN port.

MOUNTING THE BSAP TO A JUNCTION BOX

BSAPs should be positioned for maximum throughput and range between other APs and wireless client devices. Follow these instructions to mount the BSAP to an interior junction box using the enclosed mounting kit:

1. For BSAPs with external antennas, install the antennas onto the appropriate antenna ports before mounting.
2. Align the mounting holes in the bracket with the mounting holes in the junction box.
3. Drive the provided #6 screws through the bracket into the junction box.
4. Proceed to Step 5 in *Mounting the BSAP to a Ceiling or Wall*.

REMOVE THE BSAP FROM THE BRACKET

To remove the BSAP from the mounting bracket follow these steps:

1. Press on the tab on the bracket labeled **PUSH**.
2. Slowly slide the BSAP up until you feel it disengage.