



# **T3SU 300 User Manual**

1200218L1 HSSI DTE Interface Card  
1200219L1 V.35 DTE Interface Card  
1200284L1 Quad DSX-1 Interface Card  
1200655L1 Quad Bridge Module  
1202217L2 AC Version  
1202217L4 DC Version

**Trademark Information:**

OpenView is a trademark of Hewlett-Packard Company.

Spectrum is a registered trademark of Cabletron.

Netview is a registered trademark of IBM.



901 Explorer Boulevard  
P.O. Box 140000  
Huntsville, AL 35814-4000  
(256) 963-8000

© 2004 ADTRAN, Inc.  
All Rights Reserved.  
Printed in U.S.A.

## About this Manual

This manual is arranged so you can quickly and easily find the information you need. The following is an overview of the contents of this manual:

- Chapter 1, *Introduction*, familiarizes you with fiber networks and T3SU 300 highlights and gives a brief explanation of the option cards that may be purchased for use with the T3SU 300.
- Chapter 2, *Installation and Operation*, describes the T3SU 300 connectors (pin assignments are given in Appendix A), provides installation instructions, and explains how to operate your T3SU 300 using the terminal interface.
- Chapter 3, *Configuration*, explains how to access the T3SU 300 Configuration menu, describes selections made in the Configuration menus, and provides a menu tree of Configuration options.
- Chapter 4, *Status*, describes each field of the Status menu.
- Chapter 5, *Statistics*, explains how to access statistical information for the T3SU 300 and describes each field.
- Chapter 6, *Diagnostics*, explains how to diagnose problems using loopback and BERT tests.
- Appendix A provides pinouts for the T3SU 300 connectors.
- Appendix B contains product specifications.
- Appendix C lists the acronyms and abbreviations used in this document.
- Appendix D is a glossary.



*Notes provide additional useful information.*



*Cautions signify information that could prevent service interruption.*



*Warnings provide information that could prevent damage to the equipment or endangerment to human life.*

## Safety Instructions

When using your telephone equipment, please follow these basic safety precautions to reduce the risk of fire, electrical shock, or personal injury:

1. Do not use this product near water, such as a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless-type) during an electrical storm. There is a remote risk of shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord, power supply, and/or batteries indicated in the manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.

## Save These Important Safety Instructions

FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of FCC rules and requirements adopted by ACTA. On the equipment housing is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given; otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment. Advance notification and the opportunity to maintain uninterrupted service are given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected or it is certain the equipment is not malfunctioning.
5. This unit contains no user-serviceable parts.
6. An FCC compliant telephone cord with a modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using an FCC compatible modular jack, which is compliant with Part 68 requirements adopted by ACTA.
7. The following information may be required when applying to the local telephone company for service:

Reg. Number	Service Type	REN	FIC	USOC
HDCUSA-27156-MD-T	Anaolg Loop Start Service	0.8B	02LS2	RJ-11C

8. The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, the sum of the RENs of all devices should not exceed five. To be certain of the number of devices you may connect to your line as determined by the REN, call your telephone company to determine the maximum REN for your calling area.
9. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state public utility commission or corporation commission for information.

## Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



*Shielded cables must be used with this unit to ensure compliance with Class A FCC limits.*

### **WARNING**

*Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

## Industry Canada Compliance Information

Notice: The Industry Canada label applied to the product (identified by the Industry Canada logo or the “IC:” in front of the certification/registration number) signifies that the Industry Canada technical specifications were met.

Notice: The Ringer Equivalence Number (REN) for this terminal equipment is supplied in the documentation or on the product labeling/markings. The REN assigned to each terminal device indicates the maximum number of terminals that can be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices should not exceed five (5).

## Canadian Emissions Requirements

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class A prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques,” NMB-003 édictée par le ministre des Communications.

## Warranty and Customer Service

ADTRAN will repair and return this product within 5 years from the date of shipment if it does not meet its published specifications or fails while in service. For detailed warranty, repair, and return information refer to the ADTRAN Equipment Warranty and Repair and Return Policy Procedure.

Return Material Authorization (RMA) is required prior to returning equipment to ADTRAN.

For service, RMA requests, or further information, contact one of the numbers listed at the end of this section.

### LIMITED PRODUCT WARRANTY

ADTRAN warrants that for 5 years from the date of shipment to Customer, all products manufactured by ADTRAN will be free from defects in materials and workmanship. ADTRAN also warrants that products will conform to the applicable specifications and drawings for such products, as contained in the Product Manual or in ADTRAN's internal specifications and drawings for such products (which may or may not be reflected in the Product Manual). This warranty only applies if Customer gives ADTRAN written notice of defects during the warranty period. Upon such notice, ADTRAN will, at its option, either repair or replace the defective item. If ADTRAN is unable, in a reasonable time, to repair or replace any equipment to a condition as warranted, Customer is entitled to a full refund of the purchase price upon return of the equipment to ADTRAN. This warranty applies only to the original purchaser and is not transferable without ADTRAN's express written permission. This warranty becomes null and void if Customer modifies or alters the equipment in any way, other than as specifically authorized by ADTRAN.

EXCEPT FOR THE LIMITED WARRANTY DESCRIBED ABOVE, THE FOREGOING CONSTITUTES THE SOLE AND EXCLUSIVE REMEDY OF THE CUSTOMER AND THE EXCLUSIVE LIABILITY OF ADTRAN AND IS IN LIEU OF ANY AND ALL OTHER WARRANTIES (EXPRESSED OR IMPLIED). ADTRAN SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING (WITHOUT LIMITATION), ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THIS EXCLUSION MAY NOT APPLY TO CUSTOMER.

In no event will ADTRAN or its suppliers be liable to the Customer for any incidental, special, punitive, exemplary or consequential damages experienced by either the Customer or a third party (including, but not limited to, loss of data or information,



loss of profits, or loss of use). ADTRAN is not liable for damages for any cause whatsoever (whether based in contract, tort, or otherwise) in excess of the amount paid for the item. Some states do not allow the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to the Customer.

## Customer Service, Product Support Information, and Training

ADTRAN will repair and return this product if within 5 years from the date of shipment the product does not meet its published specification or the product fails while in service.

A return material authorization (RMA) is required prior to returning equipment to ADTRAN. For service, RMA requests, training, or more information, use the contact information given below.

### Repair and Return

If you determine that a repair is needed, please contact our Customer and Product Service (CAPS) department to have an RMA number issued. CAPS should also be contacted to obtain information regarding equipment currently in house or possible fees associated with repair.

CAPS Department (256) 963-8722

Identify the RMA number clearly on the package (below address), and return to the following address:

ADTRAN Customer and Product Service  
901 Explorer Blvd. (East Tower)  
Huntsville, Alabama 35806

RMA # \_\_\_\_\_

## **Pre-Sales Inquiries and Applications Support**

Your reseller should serve as the first point of contact for support. If additional pre-sales support is needed, the ADTRAN Support web site provides a variety of support services such as a searchable knowledge base, latest product documentation, application briefs, case studies, and a link to submit a question to an Applications Engineer. All of this, and more, is available at:

<http://support.adtran.com>

When needed, further pre-sales assistance is available by calling our Applications Engineering Department.

Applications Engineering (800) 615-1176

## **Post-Sale Support**

Your reseller should serve as the first point of contact for support. If additional support is needed, the ADTRAN Support web site provides a variety of support services such as a searchable knowledge base, updated firmware releases, latest product documentation, service request ticket generation and trouble-shooting tools. All of this, and more, is available at:

<http://support.adtran.com>

When needed, further post-sales assistance is available by calling our Technical Support Center. Please have your unit serial number available when you call.

Technical Support (888) 4ADTRAN

## **Installation and Maintenance Support**

The ADTRAN Custom Extended Services (ACES) program offers multiple types and levels of installation and maintenance services which allow you to choose the kind of assistance you need. This support is available at:

<http://www.adtran.com/aces>

For questions, call the ACES Help Desk.

ACES Help Desk

(888) 874-ACES (2237)

## **Training**

The Enterprise Network (EN) Technical Training Department offers training on our most popular products. These courses include overviews on product features and functions while covering applications of ADTRAN's product lines. ADTRAN provides a variety of training options, including customized training and courses taught at our facilities or at your site. For more information about training, please contact your Territory Manager or the Enterprise Training Coordinator.

Training Phone (800) 615-1176, ext. 7500

Training Fax (256) 963-6700

Training Email [training@adtran.com](mailto:training@adtran.com)

# Table of Contents

---

<b>Product Overview</b> .....	<b>21</b>
<b>T3 Overview</b> .....	<b>22</b>
<b>SNMP</b> .....	<b>22</b>
<b>TELNET</b> .....	<b>23</b>
<b>Interface Option Cards</b> .....	<b>23</b>
HSSI Card .....	24
V.35 Card .....	24
Quad DSX-1 Card .....	24
Ethernet Bridge Card .....	25
<b>Receiving Inspection</b> .....	<b>27</b>
<b>ADTRAN Shipments Include</b> .....	<b>27</b>
Customer Provides .....	28
<b>Power Up</b> .....	<b>28</b>
<b>Installing the Unit</b> .....	<b>29</b>
Rackmount Installation .....	29
Desktop Installation .....	30
<b>Rear Panel</b> .....	<b>30</b>
DTE Port Interface Card Slots .....	31
DTE Port 1 (HSSI Interface) .....	31
Alarm Connector .....	32
Auxiliary Port .....	32
LAN Port .....	32
DS3 Interface .....	32
<b>Front Panel</b> .....	<b>33</b>
Control Port .....	33
LED Descriptions .....	35
<b>DS3 Network</b> .....	<b>40</b>
DS3 Framing .....	41
Line Length .....	41
DS3 Timing .....	41
DS3 Scrambler .....	42
Multiplexing Mode .....	42
Data Link .....	42
Remote Auto-Configuration .....	42

<b>DTE Ports.....</b>	<b>42</b>
Port Selections 1-4 .....	43
Timed Profiles .....	51
<b>System Management.....</b>	<b>53</b>
Local IP Address .....	54
Subnet Mask .....	54
Gateway IP Address .....	54
Remote IP Address .....	54
IP Security .....	54
IP Hosts .....	54
Management Port .....	55
Modem Mode .....	55
Modem Baud Rate .....	55
Read Community Name .....	55
Write Community Name .....	55
Trap IP Addresses .....	56
Trap Generation .....	56
Password .....	59
Control Port .....	59
Unit ID .....	60
Terminal Timeout .....	60
Date/Time .....	60
Alarm Relay .....	60
Dialup Options .....	60
<b>Utilities .....</b>	<b>63</b>
<b>Save Configuration .....</b>	<b>64</b>
<b>Network Port .....</b>	<b>65</b>
DS3 Framing .....	65
Network State .....	66
Alarm State .....	66
Data Link State .....	67
Remote State .....	67
<b>DTE Ports.....</b>	<b>68</b>
Interface Type .....	68
Port Status .....	68
T1 Status .....	69
Bandwidth .....	70
DTE Leads .....	70

Ethernet Bridge Status .....	72
<b>Viewing Statistical information.....</b>	<b>75</b>
Alarm History .....	76
Performance Parameters .....	78
Other Statistics .....	81
DS3 .....	91
DTE Ports 1-4 .....	93
BERT Configuration .....	103
<b>Single Port Full T3 Bandwidth .....</b>	<b>105</b>
<b>Point-to-Point Multiport Application.....</b>	<b>106</b>
<b>Fractional T3 Carrier Application .....</b>	<b>108</b>
<b>Remote SNMP Management Application .....</b>	<b>110</b>
<b>Voice Application .....</b>	<b>111</b>
 <b>Appendix A   Pinouts.....</b>	 <b>113</b>
 <b>Appendix B   Specifications Summary.....</b>	 <b>117</b>
 <b>Appendix C   Acronyms/Abbreviations.....</b>	 <b>119</b>
 <b>Appendix D   Glossary.....</b>	 <b>123</b>





## List of Figures

---

Figure 2-1. DC Power Connector .....	29
Figure 2-2. T3SU 300 Rear View .....	31
Figure 2-3. T3SU 300 Front Panel .....	33
Figure 2-4. Terminal Main Menu .....	34
Figure 3-1. Configuration Main Menu .....	40
Figure 3-2. DS3 Network Configuration Menu .....	41
Figure 3-3. DTE Ports Menu .....	43
Figure 3-4. Port Configuration Menu (V.35 Interface Card) .....	44
Figure 3-5. Port Configuration Menu (Quad DSX-1 Interface Card) .....	48
Figure 3-6. Port Configuration Menu (Ethernet Bridge Interface Card) .....	50
Figure 3-7. Timed Profiles Screen .....	52
Figure 3-8. Example of a Profile Configuration Menu .....	53
Figure 3-9. System Management Configuration Menu .....	53
Figure 3-10. Trap Generation Menu .....	56
Figure 3-11. Dialup Options Menu .....	61
Figure 3-12. System Utilities Menu .....	64
Figure 4-1. Status Menu .....	65
Figure 4-2. Ethernet Bridge Status Menu .....	72
Figure 5-1. Main Local Statistics Menu Screen .....	76
Figure 5-2. Current Alarm Count Screen .....	77
Figure 5-3. 24-Hour Alarm History Screen .....	77
Figure 5-4. Quad DSX-1 24-Hour Alarm History .....	78
Figure 5-5. Network Statistics Menu for Current 15-Minute Interval .....	79
Figure 5-6. Network Port Statistics 24-Hour History Screen .....	80
Figure 5-7. Network Port Statistics Menu (24-Hour Totals) .....	81
Figure 5-8. Ethernet Bridge Statistics Menu Screen 1 .....	82
Figure 5-9. Ethernet Bridge Statistics Menu Screen 2 .....	84
Figure 5-10. Ethernet Bridge Statistics Menu Screen 3 .....	86
Figure 6-1. Diagnostics Main Menu .....	90
Figure 6-2. DS3 Diagnostics Menu .....	91
Figure 6-3. DS3 Payload Loopback Test .....	92
Figure 6-4. Line Loopback Test .....	92
Figure 6-5. HSSI or V.35 Port Diagnostics Menu .....	94
Figure 6-6. Payload Loopback Test .....	95

Figure 6-7. Payload BERT Test .....	95
Figure 6-8. DTE Loopback Test .....	96
Figure 6-9. Payload and DTE Loopback Test .....	96
Figure 6-10. Quad DSX-1 Diagnostics Menu .....	97
Figure 6-11. DSX-1 Payload Loopback Test .....	98
Figure 6-12. Frammer Loopback Test .....	98
Figure 6-13. DSX-1 Local Loopback Test .....	99
Figure 6-14. Line Loopback Test .....	99
Figure 6-15. Payload Loopback Test .....	100
Figure 6-16. DTE Loopback Test .....	101
Figure 6-17. Payload and DTE Loopback Test .....	102
Figure 6-18. DSX-1 Payload Loopback Test .....	102
Figure 6-19. BERT Pattern Menu .....	103
Figure 7-1. Single Port Application .....	105
Figure 7-2. Multiport Application .....	107
Figure 7-3. Fractional T3 Application .....	109
Figure 7-4. Remote Management Application .....	110
Figure 7-5. Voice Application .....	111

## List of Tables

---

Table 3-1. HSSI and V.35 Configuration Selections . . . . .	45
Table 3-2. Additional V.35 Interface Port Configuration Selections . . . . .	46
Table 3-3. DSX-1 Interface Port Configuration Selections . . . . .	48
Table 3-4. Ethernet Bridge Interface Port Configuration . . . . .	50
Table 3-5. Near End Alarm Trap Descriptions . . . . .	57
Table 3-6. Far End Alarm Trap Descriptions . . . . .	57
Table 3-7. MIB II Standard Trap Descriptions . . . . .	58
Table 3-9. DTE Port Trap Description . . . . .	59
Table 3-10. Quad DSX Port Trap Description . . . . .	59
Table 3-8. Network Trap Descriptions . . . . .	59
Table 4-1. LA and LB Leads . . . . .	71
Table 4-2. V.35 Interface Leads . . . . .	72
Table 5-1. Ethernet Bridge Statistics Counters Screen 1 . . . . .	82
Table 5-2. Ethernet Bridge Statistics Counters Screen 2 . . . . .	84
Table 5-3. Ethernet Bridge Statistics Counters Screen 3 . . . . .	86
Table 7-1. Single Port Full T3 Bandwidth Application Configuration Example . .	106
Table 7-2. Multiport Application Configuration Example . . . . .	107
Table 7-3. Configuration Example for Fractional T3 Application . . . . .	109
Table 7-4. Configuration Example for Remote SNMP Management Application	110
Table 7-5. Configuration Example for a Voice Application . . . . .	111
Table A-1. Control Port Pin Assignments . . . . .	113
Table A-2. HSSI Interface Pin Assignments . . . . .	114
Table A-3. LAN Port/Ethernet Bridge Pin Assignments . . . . .	115
Table A-4. V.35 Interface Card Pin Assignments . . . . .	115
Table A-5. Quad DSX-1 Interface Card Pin Assignments . . . . .	116



## Chapter 1 Introduction

---

### PRODUCT OVERVIEW

The T3SU 300 is a multiport DSU/CSU (data service unit/channel service unit) that provides access to T3 services. The unit provides a cost-effective, versatile approach for migrating T1 services to T3. The TDM (time division multiplexer) multiport design allows you to share the cost of a T3 line between multiple applications. This unit maximizes the use of T3 services, providing up to four data ports capable of transmitting and receiving high-capacity, real time data.

The T3SU 300 has a built-in HSSI (high speed serial interface) port along with three expansion slots which accept additional HSSI, V.35, Quad DSX-1, or Ethernet Bridge interface cards. The HSSI interfaces support rates between 75 kbps and 44.2 Mbps in 75 kbps increments. The high speed V.35 interface option supports rates up to 10 Mbps in increments of 75 kbps. The Quad DSX-1 interface card provides four DSX-1 lines. Each DSX-1 port supports rates up to 1.544 Mbps. The Ethernet Bridge interface card provides four auto-sensing 10/100 BaseT Ethernet ports.

Embedded SNMP (simple network management protocol) and Telnet are available through either a SLIP/PPP or a 10BaseT Ethernet port. Through the Management Information Base II (MIB II), RFC 1407 standards, and an ADTRAN enterprise MIB, the T3SU 300 can be configured, monitored, and diagnosed using standard SNMP network management programs such as Hewlett Packard's HP OpenView™, IBM's Netview™, and Cabletron's Spectrum™.

Complete configuration, diagnostics, and performance monitoring are available through SNMP, Telnet, or a VT100 terminal interface. This connection can be made via Ethernet, a local EIA-232 link, or through the built-in V.34 modem. Advanced dial-out on trap capabilities through the built-in modem allow the T3SU 300 to contact remote hosts and alert them to DSX-3 network conditions (without dedicated management connections). The T3SU 300 is designed for either desktop use or installation in a 19-inch rack.

The major features of the T3SU 300 are as follows:

- Full feature multiport T3 DSU/CSU
- Maximum of four user data ports: one integrated HSSI port and three additional slots for optional HSSI, high speed V.35, or Quad DSX-1 cards
- Automatic or manual remote configuration
- Embedded SNMP and Telnet management through 10BaseT Ethernet or SLIP/PPP
- Detailed performance monitoring for local and remote units
- Simplified configuration through detailed VT100 terminal menu structure
- Integrated V.34 modem for dial-up and dial-out access
- Standard 5-year warranty

## T3 OVERVIEW

T3 provides the same bandwidth as 28 T1s and is used to interconnect high-speed bridges, routers, front-end processors, and data terminal equipment (DTE). T3 service plays a major role in Internet backbones and public organizations needing broad bandwidth for WAN (wide area network) connectivity.

## SNMP

The T3SU 300's embedded SNMP feature allows the unit to be accessed and controlled by a network manager through either the auxiliary (AUX) control port or the 10BaseT local area network

(LAN) port. The T3SU 300 supports the MIB-II standard, RFC 1213, and the ADTRAN Enterprise Specific MIB.



*MIB files are available from ADTRAN in the support section of the ADTRAN web page at [www.adtran.com](http://www.adtran.com).*

The term SNMP broadly refers to the message protocols used to exchange information between the network management system (NMS) and the managed devices, as well as to the structure of device management databases. SNMP has three basic components:

**Network Manager**

Control programs that collect, control, and present data pertinent to the operation of the network devices. These programs reside on a network management station.

**Agent**

Control program that resides in every network device. This program responds to queries and commands from the network manager, returns requested information or invokes configuration changes initiated by the manager, and sends unsolicited traps to the manager.

**MIB**

Industry standard presentation of all status and configuration parameters supported by a network device.

## TELNET

Telnet provides a password-protected, remote login facility to the T3SU 300 that allows a remote user to control the T3SU 300 through the terminal menus. Only one Telnet session may be active at a time.

## INTERFACE OPTION CARDS

Optional interface cards may be purchased to equip the T3SU 300 with up to three additional ports. HSSI, V.35, and Quad DSX-1 interface cards are available.

## HSSI Card

The optional HSSI card plugs into one of the three card slots on the rear of the T3SU 300. With optional HSSI cards installed, the total 44.2 Mbps bandwidth of the T3 can be divided among the total number of ports to provide multiple data channels over the T3. The total bandwidth of the T3 can be divided among the available ports in any fashion, as long as the divisions are on 75 kbps boundaries.

The HSSI card can be hot inserted or swapped. When it is inserted in a slot on the rear panel and its faceplate is secured to the rear panel of the T3SU 300 with the integral thumb screws, a PCMCIA type connector on the card mates with a compatible connector on the main board of the T3SU 300. A standard 50-pin HSSI connector is then available for DTE connections. See the section *DTE Port Interface Card Slots* on page 31 for more information on installing option cards.

## V.35 Card

The optional V.35 card plugs into the card slots on the rear of the T3SU 300 to provide a V.35-type DTE interface. Operation of the V.35 card is similar to that of the HSSI card except that the maximum bandwidth of the V.35 card is limited to 10 Mbps.

Like the HSSI card, the V.35 card can be hot inserted or swapped, and it installs just as the HSSI card does. Instead of the standard HSSI connector, this card contains a standard 34-pin V.35 connector for DTE connections. See the section *DTE Port Interface Card Slots* on page 31 for more information on installing option cards.

## Quad DSX-1 Card

The optional Quad DSX-1 interface card plugs into the card slots on the rear of the T3SU 300. This card allows you to transport up to four DSX-1 lines per card over the DS3 interface of the T3SU 300 along with high-speed data from the other HSSI/V.35 ports. This configuration allows connectivity of both voice channels and high-speed data channels for two point-to-point sites using only one



network interface. Up to three cards may be installed into any of the T3SU 300 DTE port card slots.



*Even though the Quad DSX-1 interface card allows you to transport T1 information, the T3SU 300 still operates the DS3 interface in an unchannelized fashion. Therefore, your DS3 network provider must supply you with an unchannelized, point-to-point DS3.*

## Ethernet Bridge Card

The optional Ethernet Bridge interface card plugs into the card slots on the rear of the T3SU 300. This card provides four auto-sensing 10/100 BaseT Ethernet ports. The Bridge module provides LAN-to-LAN connectivity using bridging over the WAN. Additionally, this module acts as a LAN switch to provide Layer 2 Ethernet switching between each of the ports on the module. Up to three cards may be installed into any of the T3SU 300 DTE port card slots.



*First generation T3SU's (P/N 1200217L2 and P/N 1200217L4) can only support a single Ethernet Bridge Module.*

*Second Generation T3SU's (P/M 1202217L2 and P/N 1202217L4) can support up to three Ethernet Bridge Modules.*



## Chapter 2    **Installation and Operation**

---

### **RECEIVING INSPECTION**

Carefully inspect the T3SU 300 for any damage that may have occurred in shipment. If damage is suspected, file a claim immediately with the carrier and contact ADTRAN Technical Support (see the front section of this manual for contact information). Keep the original shipping container to use for future shipment or verification of damage during shipment.

### **ADTRAN SHIPMENTS INCLUDE**

The following items are included in ADTRAN shipments of the T3SU 300:

- T3SU 300 unit
- T3SU 300 CD
- An 8-position modular to 8-position modular cable (part number: 3127004)
- An 8-position modular to DB-25 female connector (part number: 3196ADPT005)
- A 4-position modular to 4-position modular cable (part number: 3127014)
- Two BNC to BNC coaxial cables (part number: 3125I054)
- Mounting ears for 19-inch rack installation

- Rubber feet for stand-alone use



*The ADTRAN T3SU 300 MIB is available in the support section of the ADTRAN web page at [www.adtran.com](http://www.adtran.com).*

## Customer Provides

The customer provides an interface cable for each port used. Each cable should be either HSSI, V.35, or an 8-pin modular cable, depending on the interface type.

## POWER UP

The T3SU 300 is provided with a captive eight-foot power cord, terminated by a three-prong plug which connects to a grounded 115 VAC power receptacle.




*Power to the T3SU 300 must be provided from a grounded 115 VAC, 60 Hz receptacle.*

A three-position terminal block which accommodates 12 to 26 AWG wire is located on the rear panel of the T3SU 300 DC version. The positive (+) and negative (-) terminals connect to a -24 to -48 VDC, 0.4A power source. Figure 2-1 on page 29 provides an illustration of the terminal block power connector, along with definitions for the three connector symbols.



*The chassis should be connected to an earth ground.*

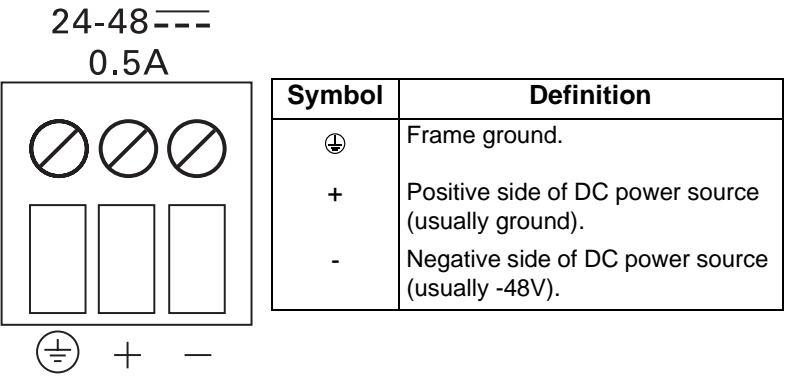

**Figure 2-1. DC Power Connector**

The following UL requirements must be met during installation of the DC version of the T3SU 300:

1. The unit must be connected to a reliably grounded -24 or -48 VDC source which is electrically isolated from the AC source.
2. The branch circuit overcurrent protection should be a fuse or circuit breaker rated 48 V, 15 A.
3. The unit should be installed in accordance with the requirements of NEC NFPA 70.
4. A readily accessible disconnect device that is suitably approved and rated should be incorporated in the fixed wiring.

## INSTALLING THE UNIT

The T3SU 300 can be used as a desktop stand-alone device or mounted into a standard 19-inch equipment rack. The chassis can also be installed in a 23-inch equipment rack by using the 23-inch Rack Kit (P/N 1200171L1).

### Rackmount Installation

Follow these steps to mount your unit into a rack:

1. Install the 19-inch or 23-inch rackmount flanges on each side of the T3SU 300 enclosure at one of the three available positions.



**NOTE**

*Be sure to install the flanges with the screw provided.*

2. After the flanges have been installed, position the T3SU 300 at the correct location within the rack and secure the mounting flanges to the mounting rails of the rack.
3. Make all network and DTE connections to the rear of the unit.
4. Using the 8-position modular to DB-25 female connector and the 8-position modular to 8-position modular cable, connect a VT100 terminal device to the **CONTROL** interface jack on the front panel of the unit.

## Desktop Installation

Follow these steps when using your T3SU 300 as a desktop unit:

1. Affix the four adhesive-backed rubber feet to the bottom of the unit, one in each of the four corners. The feet should be placed approximately one inch from the front or back and one inch from the sides of the unit
2. Make all network and DTE connections to the rear of the unit.
3. Using the 8-position modular to DB-25 female connector and the 8-position modular to 8-position modular cable, connect a VT100 terminal device to the **CONTROL** interface jack on the front panel of the unit.

## REAR PANEL

The T3SU 300 is equipped with three option card slots, a built-in HSSI interface, an alarm output terminal block, an auxiliary (AUX) port, a LAN port, and a DS3 interface. Pin assignments for connectors are given in Appendix A, *Pinouts*, on page 113. The T3SU 300 rear panel is shown in Figure 2-2.

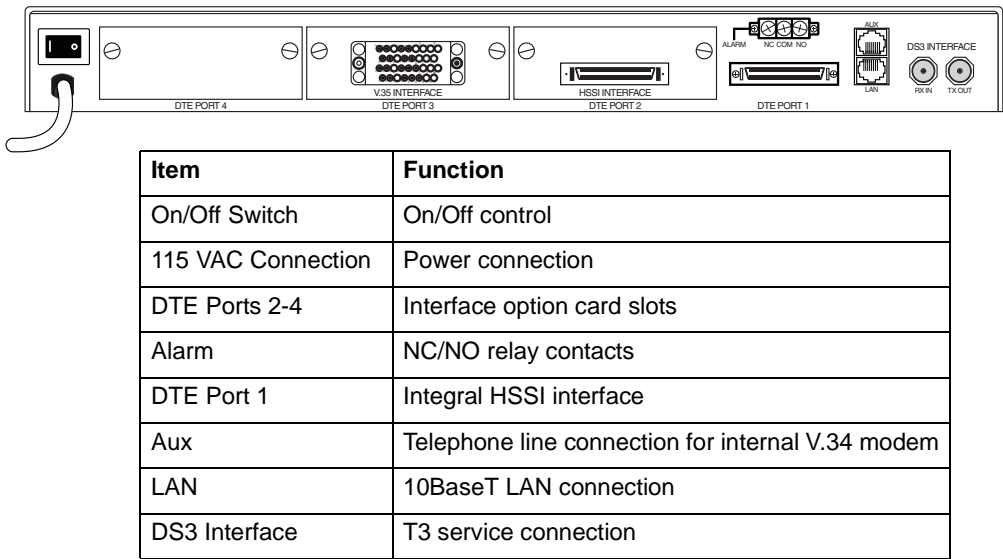


Figure 2-2. T3SU 300 Rear View

## DTE Port Interface Card Slots

The T3SU 300 rear panel has three card slots for the installation of optional interface cards. To insert cards, perform the following procedure:

1. Remove blank slot cover from the rear of the T3SU 300.
2. Slide the card into the corresponding rear slot until the card panel is flush with the T3SU 300 chassis.
3. Push in thumbscrews and turn clockwise to secure the card and ensure proper connection to the main board of the T3SU 300.

## DTE Port 1 (HSSI Interface)

DTE port 1 is a built-in HSSI port that resides on the main board of the T3SU 300. The bandwidth of this port is configurable from 75 kbps to 44.2 Mbps in either 75 kbps or 3.16 Mbps increments. When a single application requires the full 44.2 Mbps of

bandwidth, the T3SU 300 does not have to be equipped with additional port cards.

## Alarm Connector

The alarm connector is a three-position, screw-type terminal block that is connected to the three contacts of a Form C-type relay on the main board of the T3SU 300. This relay is activated any time the T3SU 300 detects an alarm condition on the T3 network interface. The alarm function can be disabled through the **ALARM RELAY** selection of the **CONFIGURATION** menu.

## Auxiliary Port

The auxiliary (**AUX**) port is an 8-pin modular jack located on the rear panel of the T3SU 300. The **AUX** port provides a telephone line (POTS) connection for the internal V.34 modem.

The T3SU 300 can be configured as a dial-in host and also as a dial-out-on-TRAP device (meaning that the unit dials out to a specified host to report error conditions). Configure the modem parameters in the **DIALUP OPTIONS** menu under the **SYSTEM MANAGEMENT** portion of the **CONFIGURATION** menu (**CONFIGURATION -> SYSTEM MANAGEMENT -> DIALUP OPTIONS**).

## LAN Port

The **LAN** port is an 8-pin modular connector that provides a 10BaseT Ethernet LAN interface. This **LAN** interface is used for SNMP and Telnet control.

## DS3 Interface

The DS3 network interface is a full-duplex circuit provided by two BNC coaxial cable connections. The receive data from the network is connected to the **RX IN** connector, while the transmit data from the T3SU 300 is connected to the **TX OUT** connector.



## FRONT PANEL

The T3SU 300 faceplate is shown in Figure 2-3. Descriptions of each part of the front panel follow.

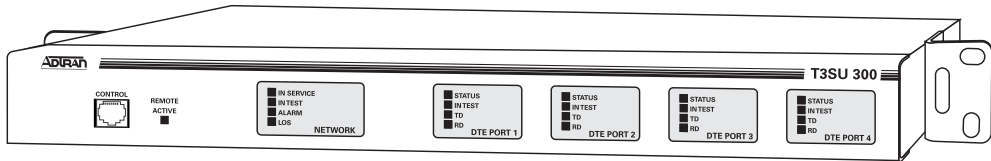


Figure 2-3. T3SU 300 Front Panel

## Control Port

The T3SU 300 has an 8-pin modular jack labeled **CONTROL**. The control port provides connection to a VT100 EIA-232 compatible interface.

## Establishing Terminal Connection

To control the T3SU 300 using a VT100 terminal, follow this procedure:

1. Configure the VT100 terminal for 57600 baud, 8-bit characters, no parity, and one stop bit.
2. Using the ADTRAN-provided terminal interface cable adapter, connect the DTE port of a terminal to the 8-pin modular jack labeled **CONTROL** on the front panel of the T3SU 300.
3. Initialize the terminal session by pressing **Enter** repeatedly until the password prompt appears.
4. Enter the password. The factory default password is **adtran** (all lower-case). The **MAIN** menu appears. See Figure 2-4 on page 34.
5. Make selections by entering the number corresponding to the chosen parameter. Press **ESC** to return to the previous screen. End a terminal session by selecting **LOGOUT** from the **MAIN** menu or by pressing **Ctl-C** at any time.

Adtran T3SU 300 Main Menu
<pre>1 - Status 2 - Statistics 3 - Configuration 4 - Diagnostics  5 - Remote login 6 - Logout</pre>
Enter selection >

Figure 2-4. Terminal Main Menu

### Navigating Within the Menus

Navigate within the T3SU 300 terminal menus using the following procedures:

If you want to...	Press...
select an item	the number corresponding to your choice, and then press the <b>Enter</b> key.
scroll between screens within the same selection	the up and down arrow keys. Additional screens are available when <b>UP</b> or <b>DOWN</b> is displayed in the right-hand side of the menu.
scroll left and right within the same screen	the left and right arrow keys. Additional screens are available when <b>&lt;</b> or <b>&gt;</b> is displayed in the top portion of the menu.
return to the previous menu	the <b>ESC</b> key.
end the terminal session	<b>Ctl-C</b> .
refresh the display	<b>Ctl-R</b> .

## Menus Available

### Status

This selection provides status information on the network and DTE ports. See *Chapter 4, Status*, on page 65 for more information.

### Statistics

This selection provides statistical information for the network and DTE ports. See *Chapter 5, Statistics*, on page 75 for more information.

### Configuration

The **CONFIGURATION** menu is used to set network, DTE, and system management parameters. See *Chapter 3, Configuration*, on page 39 for more detailed information.

### Diagnostics

The **DIAGNOSTICS** menu is used to perform loopback and BERT tests. See *Chapter 6, Diagnostics*, on page 89 for more detailed information.

### Remote Login

The **REMOTE LOGIN** selection allows you to configure the remote T3SU 300. The remote unit's password is required at login. The **DATA LINK** option (in the **DS3 NETWORK CONFIGURATION** menu) must be enabled in order to perform remote configuration.

### Logout

The **LOGOUT** selection ends the terminal session and logs out of the system. Password entry is required before a new session can begin.

## LED Descriptions

The T3SU 300 has LED status indicators for remote access, the network port, and for each individual DTE port. These LEDs are identified as follows:

### Remote Active

This LED is solid when a remote configuration session is taking place through a Telnet session or from the remote end T3SU 300. It

flashes when the unit is being accessed locally through the front panel **CONTROL** port.

## **Network LEDs**

### **In Service**

This LED is active when a valid signal is being received on the DS3 interface.

### **In Test**

This LED is active when the network interface has been put in loopback by the service provider.

### **Alarm**

This LED is active when the DS3 receive signal contains framing errors, the yellow alarm is received from the far end unit, or other alarm messages are received from the network.

### **LOS**

This LED is active when no receive signal from the network is detected on the Rx (in) circuit.

## DTE Port LEDs

### Status

This LED indicates the following conditions:

LED	Condition
Off	No option card is installed.
Flashing green	Interface is available but not configured.
On green	Interface is available and configured.
On red	DTE fault condition (for HSSI interface, no clock from DTE).
On yellow	For HSSI interface, terminal available (TA) signal inactive.

### In Test

This LED is active when the DTE interface is in a loopback condition or is performing a BERT test.

### TD

This LED is active when the T3SU 300 DTE port is transmitting data.

### RD

This LED is active when the T3SU 300 DTE port is receiving data.



## Chapter 3 Configuration

---

The T3SU 300 can be configured locally and remotely. Local configuration is accomplished through a 10BaseT Ethernet connection, a SLIP/PPP port, or a VT100 terminal. Remote configuration can take place through the T3 datalink using a local T3SU 300.

The **CONFIGURATION** menu (see Figure 3-1 on page 40) consists of submenus relating to specific interfaces or functions. This chapter describes each individual menu parameter. The information is organized by submenus into the following sections: **DS3 NETWORK** (page 40), **DTE PORTS** (page 42), **SYSTEM MANAGEMENT** (page 53), **UTILITIES** (page 63), and **SAVE CONFIGURATION** (page 64).

Configuration
<ul style="list-style-type: none"><li>1 - DS3 Network</li><li>2 - DTE Ports</li><li>3 - System Managenent</li><li>4 - Utilities</li> <li>5 - Save Configuration</li></ul>
Enter selection > _

**Figure 3-1. Configuration Main Menu**

## DS3 NETWORK

Select **1 DS3 NETWORK** to access the network configuration parameters. Configure the T3SU 300 network settings to match the T3 signal received from the service provider. During remote configuration, this menu is read-only. The **DS3 NETWORK CONFIGURATION** menu is shown in Figure 3-2 on page 41. Descriptions of the **DS3 NETWORK** fields follow the figure.



DS3 Network Configuration
1 - DS3 framing = C-Bit parity 2 - Line length = Short (0 - 225 ft.) 3 - DS3 timing = Local 4 - DS3 scrambler = Disabled 5 - Multiplexing Mode  6 - Data Link = Enabled 7 - Remote auto-configuration = Slave  8 - IDLE alarm suppression = Disabled 9 - XCV Threshold = Disabled
Enter selection > _

**Figure 3-2. DS3 Network Configuration Menu**

## DS3 Framing

Set the framing format to match the format of the receive signal at the network interface. **C-BIT PARITY** and **M13** framing formats are supported. Select **AUTO** to allow the interface to detect the framing type automatically.

## Line Length

Set the line length to reflect the physical length of the DS3 network line. Set to **LONG** if the cabling distance exceeds 225 feet; set to **SHORT** if the distance is less than 225 feet.

## DS3 Timing

Set the timing to **LOOP** if the T3SU 300 is to derive timing from the network; set to **LOCAL** if the unit is to be the master timing source for the circuit. In most cases, the unit should be configured for **LOOP** timing.

## DS3 Scrambler

Enable this option to scramble the DS3 payload data. This prevents certain transport equipment from falsely reporting alarms.

## Multiplexing Mode

The **MULTIPLEXING MODE** menu allows you to select the DTE port bandwidth increment size. The increment size of Nx75 kbps allows the user to divide 588 blocks among the four ports. The increment size of Nx3.16 Mbps has 14 blocks available, and ports 2, 3, and 4 are disabled. Only port 1, the built-in HSSI port, is available in this mode. The Nx3.16 Mbps mode provides compatibility with Juniper and Cisco routers at below full-bandwidth rates. When the user switches the multiplexing mode, the system will reboot, causing service interruption. Loading default settings does not reset this option.

## Data Link

Set to **ENABLE** to allow for remote configuration. When enabled, the T3SU 300 provides a channel between the local and the remote DSU for point-to-point remote configuration.

## Remote Auto-Configuration

This feature allows one T3SU 300 (set to **MASTER**) to automatically relay its DTE port bandwidth configuration to a second unit (set to **SLAVE**). If desired, the feature can be disabled by either unit.

## DTE PORTS

The **DTE PORTS** menu allows you to select a port to configure. If **REMOTE AUTO CONFIGURATION** is set to **MASTER (CONFIGURATION -> DS3 NETWORK -> REMOTE AUTO CONFIGURATION -> MASTER)**, then a fifth option, **TIMED PROFILES**, is available. See Figure 3-3 on page 43. This option allows you to set up timed profiles specifying bandwidth allocation for all four ports.

Configuration selections for the individual ports are described in the following section. A more in-depth description of **TIMED PROFILES** is on page 51.

Configure DTE Ports
<pre>1 - DTE Port 1 2 - DTE Port 2 3 - DTE Port 3 4 - DTE Port 4  5 - Tined Profiles</pre>
Enter selection > _

Figure 3-3. DTE Ports Menu

## Port Selections 1-4

Select **DTE PORT 1**, **2**, **3**, or **4** to access the port configuration parameters. Configure each DTE port to be compatible with the DTE equipment attached to it. **PORT CONFIGURATION** menu examples are shown in Figure 3-4 on page 44, Figure 3-5 on page 48, and Figure 3-6 on page 50. Descriptions of the individual fields follow the illustration. The descriptions are listed in tables based on the DTE port interface type (HSSI, V.35, Quad DSX-1, or Ethernet Bridge).

- Table 3-1 on page 45 lists the menu fields available for HSSI and V.35 interfaces.
- Table 3-2 on page 46 lists the menu fields available for V.35 interfaces (in addition to those listed in Table 3-1).
- Table 3-3 on page 48 lists the menu fields available for DSX-1 interfaces.

- Table 3-4 on page 50 lists the menu fields available for Ethernet Bridge interfaces.

Port 2 Configuration	
Interface type = V.35 Port status = Inactive	
1 - Port state = Disabled 2 - M x 75k blocks (1-140) = 1	
Port bandwidth = 75.18 Kbps Unallocated 75k blocks = 588	
3 - Apply settings	
4 - CS = Forced ON	8 - Transnit clock = Normal
5 - TR = Ignored	
6 - SR = Forced ON	
7 - CD = Forced ON	
Enter selection >	

**Figure 3-4. Port Configuration Menu (V.35 Interface Card)**

## Configuration Selections for HSSI and V.35 Interfaces

The configuration selections listed in Table 3-1 are available for HSSI and V.35 interfaces. Additional selections listed in Table 3-2 on page 46 apply only to V.35 interfaces.

**Table 3-1. HSSI and V.35 Configuration Selections**

Selection	Description
<b>INTERFACE TYPE</b>	This read-only status field shows the interface type of the selected port (HSSI or V.35).
<b>PORT STATUS</b>	<p>This read-only status field displays one of the following messages to show the port status of the selected port:</p> <p><b>INACTIVE:</b> The port is installed, but idle. Activate a port through the <b>PORT STATE</b> field of this menu.</p> <p><b>ACTIVE:</b> The port has been configured and is passing data.</p> <p><b>WAITING:</b> The port has been configured and is waiting for the DTE to issue the appropriate handshaking signals. For the HSSI interface, the terminal equipment available (TA) signal must be asserted by the DTE. For V.35, DTR is required if the TR field in this menu is set to <b>IDLE WHEN OFF</b>; otherwise, DTR is ignored.</p> <p><b>ERROR:</b> An error condition such as loss of transmit clock has occurred.</p> <p><b>NOT INSTALLED:</b> An interface card is not installed in the selected port. If a port is not installed, the remainder of the <b>PORT CONFIGURATION</b> menu does not appear.</p>
<b>PORT STATE</b>	If a port is installed but not currently in use, set to <b>DISABLED</b> . Set to <b>ENABLED</b> to activate an installed port.
<b>Nx75k BLOCKS</b>	This field determines the amount of bandwidth allocated to the selected port. For an HSSI interface, the selections are from 1-588 (yielding a bandwidth of 75.2 kbps to 44.2 Mbps). For a V.35 interface, the selections are from 1-140 (yielding a bandwidth of 75.2 kbps to 10.5 Mbps). Changes to this field do not take effect until <b>APPLY SETTINGS</b> is selected.
<b>PORT BANDWIDTH</b>	This read-only status field shows the amount of bandwidth that will be available if the selection made in the <b>Nx75k BLOCKS</b> field is applied.

**Table 3-1. HSSI and V.35 Configuration Selections (Continued)**

Selection	Description
<b>APPLY SETTINGS</b>	Select this field after making all configuration changes for the selected port. The changes are then applied to the unit immediately. Applying the settings briefly affects all ports of the T3SU 300. You may cancel changes made to the current <b>PORT CONFIGURATION</b> menu by pressing the <b>ESC</b> key.
<i>Note: Additional configuration selections are available for V.35 interfaces. These selections are listed in Table 3-2.</i>	

**Table 3-2. Additional V.35 Interface Port Configuration Selections**

Selection	Description
<b>CS</b>	<p>Selects the control mode for the clear to send (CS) lead.</p> <p><b>FORCED ON:</b> The CS lead remains on, and request to send (RS) is ignored as long as the unit is synchronized and able to pass data.</p> <p><b>FOLLOW RS:</b> The CS state matches the RS state.</p>
<b>TR</b>	<p>Selects the T3SU 300's response to the data terminal ready (TR) lead.</p> <p><b>IGNORED:</b> The T3SU 300 ignores the state of the TR lead.</p> <p><b>IDLE WHEN OFF:</b> The T3SU 300 suspends traffic on the selected port if the TR lead is off.</p>
<b>SR</b>	<p>Selects the control mode for the data set ready (SR) lead.</p> <p><b>FORCED ON:</b> The SR control lead remains on regardless of the state of the network.</p> <p><b>OFF WHEN OOS/OOF:</b> The SR control lead remains on unless the T3SU 300 receives an out of service/out of frame (OOS/OOF) condition from the network.</p> <p><b>OFF WHEN TEST:</b> The SR lead remains on except when the T3SU 300 is executing a test.</p> <p><b>OFF WHEN OOS/OOF OR TEST:</b> The SR lead remains on except when the unit receives an OOS/OOF condition from the network or when the unit is executing a test.</p>

**Table 3-2. Additional V.35 Interface Port Configuration Selections (Continued)**

Selection	Description
<b>CD</b>	Selects the control mode for the carrier detect (CD) lead. <b>FORCED ON:</b> The CD lead remains active at all times. <b>OFF WHEN OOS/OOF:</b> The CD control lead remains on unless the T3SU 300 receives an OOS/OOF condition from the network.
<b>TRANSMIT CLOCK</b>	See the following section for a description of this item.

**Transmit Clock**

Selects the source of the clock used to transfer data from the DTE to the T3SU 300. Use the following chart to determine your selection:

Select...	If...
<b>NORMAL</b>	you want the transmit clock to be derived from the T3SU 300.
<b>INVERT</b>	your DTE device cannot provide a transmit clock signal and data errors are present between your DTE and the T3SU 300.
<b>EXTERNAL</b>	you are transmitting at high rates. This selection eliminates data errors caused by excessive delays in the DTE transmit clock receiver, transmit data driver, and cable length.

**NOTE**

*Selecting Normal or Invert clocking options depends on your DTE, cable length, and cable characteristics. To verify error-free operation, perform a DTE loopback test and a BERT test from the DTE. See the chapter, **Diagnostics**, on page 85 for information on performing these tests.*

**Configuration Selections for DSX-1 Interfaces**

The configuration selections listed in Table 3-3 on page 48 are available for Quad DSX-1 interfaces. Separate selections can be made for each of the four DSX-1 ports of the card. This menu is shown in Figure 3-5 on page 48.

Port 3 Configuration

Interface type = QUAD DSX-1  
Port status = Inactive  
Unallocated 75k blocks = 588

9 - DSX-1 Timing Source = DS3  
10 - Apply settings

DSX-1 #1  
1 - Port state = Disabled  
2 - Framing = ESF  
3 - Line coding = B8ZS  
4 - Line length = 533-655 ft.

DSX-1 #3  
11 - Port state = Disabled  
12 - Framing = ESF  
13 - Line coding = B8ZS  
14 - Line length = 533-655 ft.

DSX-1 #2  
5 - Port state = Disabled  
6 - Framing = ESF  
7 - Line coding = B8ZS  
8 - Line length = 533-655 ft.

DSX-1 #4  
15 - Port state = Disabled  
16 - Framing = ESF  
17 - Line coding = B8ZS  
18 - Line length = 533-655 ft.

Enter selection >

Figure 3-5. Port Configuration Menu (Quad DSX-1 Interface Card)



*The Quad DSX-1 does not perform ESF to SF (D4) conversion through the network. Therefore, both ends of the circuit must be configured for the same framing type.*

Table 3-3. DSX-1 Interface Port Configuration Selections

Selection	Description
INTERFACE TYPE	This read-only status field displays <b>QUAD DSX-1</b> , indicating that a Quad DSX-1 interface card is installed in the DTE Port card slot.
PORT STATUS	This read-only status field displays <b>INACTIVE, ACTIVE, WAITING, ERROR, OR NOT INSTALLED</b> , indicating the current status of the DSX-1 interface.
UNALLOCATED 75K BLOCKS	Displays the amount of bandwidth (in 75k increments) not already allocated to any of the T3SU 300 DTE ports.
PORT STATE	If an individual DSX-1 interface is installed but not currently in use, set to <b>DISABLED</b> . Set to <b>ENABLED</b> to activate a port.



**Table 3-3. DSX-1 Interface Port Configuration Selections (Continued)**

Selection	Description
<b>FRAMING</b>	<p>Select the framing format for each individual DSX-1 interface. The default setting is <b>ESF</b>. Select <b>ESF</b> if your DTE device is configured for Extended Superframe framing. Select <b>D4</b> if your DTE device is configured for D4 framing. Select <b>AUTO</b> to allow the interface to detect the framing type (ESF or D4) automatically. When in <b>AUTO</b> mode, the selected interface toggles between ESF and D4 approximately every ten seconds until it detects valid framing.</p> <p><i>Note: D4 is equivalent to superframe format (SF).</i></p>
<b>LINE CODING</b>	<p>Set the line code for each individual DSX-1 interface to match the connected DTE device. Three choices are available: <b>B8ZS</b>, <b>AMI</b>, and <b>AMI w/STUFFING</b> (AMI coding with bit stuffing).</p>
<b>LINE LENGTH</b>	<p>Set the line length for each DSX-1 interface according to the distance from the T3SU 300 to your DTE device. Set to <b>7.5 dB</b> if the attached DTE device only supports DS-1 levels.</p>
<b>DSX-1 TIMING SOURCE</b>	<p>For each Quad DSX-1 card pair (the near- and far-end Quad DSX-1 cards), there must be only one source of timing. The available timing sources are described below:</p> <p><b>DS3:</b> The timing for both the near- and far-end Quad DSX-1 cards is derived from the DS3 interface. All DTE devices connected to the DSX-1 interfaces must be slave timed since both cards source the timing reference derived from the DS3. Both the near- and far-end units must be set to DS3.</p> <p><b>REMOTE:</b> The timing source for the Quad DSX-1 card is derived from the far-end Quad DSX-1 card. Use this mode if the far-end card has a <b>DSX-1 TIMING SOURCE</b> configuration of <b>DSX-1 #1</b>, <b>DSX-1 #2</b>, <b>DSX-1 #3</b>, or <b>DSX-1 #4</b>.</p> <p><b>DSX-1 #x</b> (x is 1,2,3, or 4): The timing source for the Quad DSX-1 pair is derived from one of the four DSX-1 interfaces. When configured in this manner, one of the DSX-1 interfaces is slaved to the DSX-1 interface from your DTE. The remaining three DSX-1 interfaces, if enabled, source the timing as derived from the slaved port. The far-end DSX-1 interface must be configured for <b>REMOTE</b>.</p> <p><i>Note: If more than one Quad DSX-1 card is installed, each card can have a different timing source configuration.</i></p>
<b>APPLY SETTINGS</b>	<p>Select this field after making all configuration changes for the selected port. The changes are then applied to the unit immediately.</p>

Configuration Selections for Ethernet Bridge Interfaces

Figure 3-6 shows the Ethernet Bridge menu. Table lists the configuration selections available for the Ethernet Bridge interface.

Port 4 Configuration	
Interface type = ETHERNET BRIDGE	
Port status = Active	8 - N x 75k blocks (1-588) = 588
Unallocated blocks = 0	Port bandwidth = 44.20 Mbps
1 - Port state = Enabled	9 - Apply settings
10/100 BASET/TX #1	
2 - Port State = Enabled	10 - Port State = Enabled
3 - Speed = AUTO DETECT	11 - Speed = AUTO DETECT
4 - Duplex = AUTO DETECT	12 - Duplex = AUTO DETECT
10/100 BASET/TX #2	
5 - Port State = Enabled	13 - Port State = Enabled
6 - Speed = AUTO DETECT	14 - Speed = AUTO DETECT
7 - Duplex = AUTO DETECT	15 - Duplex = AUTO DETECT
10/100 BASET/TX #3	
10/100 BASET/TX #4	
16 - Reset Bridge	
Enter selection > _	

Figure 3-6. Port Configuration Menu (Ethernet Bridge Interface Card)

Table 3-4. Ethernet Bridge Interface Port Configuration

Selection	Description
INTERFACE TYPE	This read-only status field displays <b>ETHERNET BRIDGE</b> , indicating that an Ethernet Bridge interface card is installed in the DTE Port card slot.
PORT STATUS	This read-only status field displays <b>INACTIVE</b> , <b>ACTIVE</b> , <b>WAITING</b> , <b>ERROR</b> , or <b>NOT INSTALLED</b> , indicating the current status of the Ethernet Bridge interface.
UNALLOCATED 75K BLOCKS	Displays the amount of bandwidth (in 75k increments) not already allocated to any of the T3SU 300 DTE ports.
PORT STATE	If an Ethernet Bridge module is installed but not currently in use, set to <b>DISABLED</b> . Set to <b>ENABLED</b> to activate the interface. Each of the four Ethernet ports can be individually activated with the <b>PORT STATE</b> option associated with that port.
PORT STATE	If an individual Ethernet port is not currently in use, set to <b>DISABLED</b> . Set to <b>ENABLED</b> to activate a port.

**Table 3-4. Ethernet Bridge Interface Port Configuration (Continued)**

Selection	Description
<b>SPEED</b>	Set the speed for each individual Ethernet interface. Three choices are available: <b>10 BASET</b> , <b>100 BASETX</b> , and <b>AUTO DETECT</b> .
<b>DUPLEX</b>	Set the duplex for each individual Ethernet interface. Three choices are available: <b>FULL DUPLEX</b> , <b>HALF DUPLEX</b> , and <b>AUTO DETECT</b> .
<b>Nx75K BLOCKS (1-588)</b> <b>PORT BANDWIDTH</b>	Set the amount of bandwidth allocated to the Ethernet Bridge port. The selections are from 1-588 (yielding a bandwidth of 75.2 kbps to 44.2 Mbps). The total <b>PORT BANDWIDTH</b> will automatically be calculated and displayed. Changes to this field do not take effect until <b>APPLY SETTINGS</b> is selected.
<b>APPLY SETTINGS</b>	Select this field after making all configuration changes for the selected port. The changes are then applied to the unit immediately.

## Timed Profiles

Using this option, you can allocate bandwidth based on the time of day. For example, you can assign more bandwidth to the corporate LAN during business hours and more bandwidth to a backup machine in the evenings. The T3SU 300 can store two separate user profiles which have bandwidth selections for each of the four ports. See Figure 3-7 and Figure 3-8 on page 53.



**TIMED PROFILE** selections are only available if the **REMOTE AUTO-CONFIGURATION** selection is set to **MASTER** on the near-end T3SU 300 and **SLAVE** on the far-end T3SU 300 (**CONFIGURATION -> DS3 NETWORK -> REMOTE AUTO-CONFIGURATION**).

Timed Profiles
<p><b>Current Time = 13:14:04</b></p> <p><b>1 - Bandwidth Profile 1</b> <b>2 - Bandwidth Profile 2</b></p> <p><b>3 - Profile 1 switch time = 00:00:00</b> <b>4 - Profile 2 switch time = 00:00:00</b></p> <p><b>5 - Active Profile = Disabled</b></p>
<p><b>Enter selection &gt;</b></p>

Figure 3-7. Timed Profiles Screen

Bandwidth Profiles 1 and 2

The **PROFILE CONFIGURATION** screens allow you to change the **PORT STATE** and **Nx75k BLOCKS** options for HSSI and V.35 ports. See page 45 for descriptions of these options. This screen also allows you to enable or disable each individual DSX-1 interface of a Quad DSX-1 card at the time of day specified in the given profile. Settings for all port types are assigned to the selected profile (1 or 2) and will apply whenever that profile is active. See Figure 3-8 on page 53.

Profile Switch Time (1 and 2)

Enter the time that you want the profile to become active. Enter the time in military time (i.e., 00:00:00 = 12 AM). The profile remains active until one of the following occurs: (1) the other profile's activation time comes about, or (2) the profile is disabled manually through the **ACTIVE PROFILE** selection.

Active Profile

Use this field to either manually force a profile to become active (regardless of the time of day) or disable the profile completely.

Profile 1 Configuration	
<b>DTE Port 1</b> Interface type = HSSI 1 - Port state = Disabled 2 - M x 75k blocks = 0 Port bandwidth = 0 bps	<b>DTE Port 3</b> Interface type = QUAD DSX-1 5 - DSX-1 Port 1 state = Disabled 6 - DSX-1 Port 2 state = Disabled 7 - DSX-1 Port 3 state = Disabled 8 - DSX-1 Port 4 state = Disabled
<b>DTE Port 2</b> Interface type = V.35 3 - Port state = Disabled 4 - M x 75k blocks = 0 Port bandwidth = 0 bps	<b>DTE Port 4</b> Interface type = HSSI 9 - Port state = Disabled 10 - M x 75k blocks = 0 Port bandwidth = 0 bps
Unallocated 75k blocks = 588	
Enter selection > _	

Figure 3-8. Example of a Profile Configuration Menu

## SYSTEM MANAGEMENT

The **SYSTEM MANAGEMENT** menu allows you to configure the T3SU 300 for management through SNMP, Telnet, or a VT100 interface. Embedded SNMP and Telnet are available through either a SLIP/PPP or a 10BaseT Ethernet port. The **SYSTEM MANAGEMENT CONFIGURATION** menu is shown in Figure 3-9.

System Management Configuration	
<b>Management Options</b> 1 - Local IP Address = 0.0.0.0 2 - Subnet Mask = 255.255.255.0 3 - Gateway IP Address = 0.0.0.0 4 - Remote IP Address = 0.0.0.0 5 - Management Port = LAN 6 - Dialup options 7 - Modem Mode = Dialup VT-100 8 - Modem Baud Rate = 38400	<b>System Security</b> 14 - Password = ***** 15 - Terminal timeout = Disabled 16 - IP Security = Disabled 17 - IP Hosts
<b>SNMP Management Options</b> 9 - READ Community Name = public 10 - WRITE Community Name = private 11 - TRAP Community Name = trap 12 - TRAP IP Addresses 13 - TRAP Generation	<b>Miscellaneous</b> 18 - Control Port = 57600 19 - Unit ID = 20 - Date = 03/25/01 21 - Time = 13:27:23 22 - Alarm Relay = Disabled 23 - SysName = T3SU-300 1202217L2 24 - SysLocation = Huntsville, AL 25 - SysContact = 1-888-4ADTRAN
Enter selection >	

Figure 3-9. System Management Configuration Menu

## Local IP Address

Enter the T3SU 300 IP address. This IP address applies to the Ethernet or auxiliary port (when configured for PPP or SLIP). This address is available from the network administrator.

## Subnet Mask

Enter the subnet mask of the T3SU 300. This address is available from the network administrator.

## Gateway IP Address

Enter the gateway IP address of the T3SU 300. This address is necessary only if the T3SU 300 and the network manager are connected through a gateway node. If an IP packet is to be sent to a different network, the unit sends it to the gateway.

## Remote IP Address

Enter the remote T3SU 300's IP address to provide network management access through the local T3SU 300. See the section *Remote SNMP Management Application on page 110* for more information.

## IP Security

Enable or disable the IP Security option. If enabled, the unit accepts management commands and Telnet sessions from the IP addresses entered into the **IP HOSTS** fields.

## IP Hosts

Enter up to 16 IP addresses of management stations from which the unit should accept management commands. These addresses are only applicable if **IP SECURITY** is enabled.

## Management Port

Assign the management port to be either **LAN**, **FDL** (facility datalink), or the **AUX PORT**.

## Modem Mode

Select the **AUX** port function for your application. The **AUX** port, located on the rear panel of the T3SU 300, provides a telephone line (POTS) for connecting to the internal V.34 modem. The modem interface can be configured for dial-in service in VT100, SLIP, and PPP modes. In addition, the T3SU 300 is capable of dial-out operation to report error conditions. All modem options can be configured in the **DIALUP OPTIONS** menu located on the **SYSTEM MANAGEMENT CONFIGURATION** screen. See Figure 3-9 on page 53. The **DIALUP OPTIONS** are described on page 60.

Selections for the **MODEM MODE** include dial-up options for VT100, PPP, and SLIP. If the **MANAGEMENT PORT** option is set to **AUX PORT**, the **PPP** and **SLIP** options are available.

## Modem Baud Rate

Set the operating speed of the **AUX** port to match the connected device. The selections are 1200, 2400, 4800, 9600, 19200, and 38400 bps.

## Read Community Name

Enter the authentication strings used for SNMP management. Match the T3SU 300 to the SNMP manager for read privileges.

## Write Community Name

Enter the authentication strings used for SNMP management. Match the T3SU 300 to the SNMP manager for write privileges.

## Trap IP Addresses

Enter up to five IP addresses of SNMP managers to which the T3SU 300 sends traps.

## Trap Generation

This selection determines which trap types (if any) are generated by the unit. Use this menu (see Figure 3-10) to enable or disable **NEAR END ALARM**, **FAR END ALARM**, **MIB II STANDARD**, **NETWORK TEST**, **DTE PORT**, and **QDSX ALARM** trap types. See Table 3-5 on page 57 through Table 3-9 on page 59 for trap descriptions.

TRAP Generation	
<div> <div> Near End Alarm TRAPs </div> <div> 1 - Red Alarm (LOS) = Disabled  2 - Out of Frame (OOF) = Disabled  3 - Yellow Alarm (RAI) = Disabled  4 - Blue Alarm (AIS) = Disabled  5 - Idle Signal = Disabled </div> </div>	
<div> <div> Far End Alarm TRAPs </div> <div> 6 - Red Alarm (LOS) = Disabled  7 - Out of Frame (OOF) = Disabled  8 - Yellow Alarm (RAI) = Disabled  9 - Blue Alarm (AIS) = Disabled  10 - Idle Signal = Disabled  11 - Eqpt. Fail MSA = Disabled  12 - Eqpt. Fail SA = Disabled  13 - Con. Eqpt. Fail MSA = Disabled </div> </div>	
<div> <div> MIB II Standard TRAPs </div> <div> 14 - Cold Start = Disabled  15 - Link Up/Down = Disabled  16 - Auth. Failure = Disabled </div> </div>	
<div> <div> Network Test TRAPs </div> <div> 17 - Network Test In/Out = Disabled </div> </div>	
<div> <div> DTE Port TRAPs </div> <div> 18 - Port Status Change = Disabled </div> </div>	
<div> <div> QDSX ALARM TRAPs </div> <div> 19 - QDSX Alarms = Disabled </div> </div>	
<div> <div> 20 - Toggle ALL TRAPs </div> </div>	
Enter selection > _	

Figure 3-10. Trap Generation Menu



**Table 3-5. Near End Alarm Trap Descriptions**

Trap Type	If ENABLED, this trap is sent...
Red Alarm (LOS)	when the unit detects a loss of signal.
Out of Frame (OOF)	when the unit detects an out of frame condition.
Yellow Alarm (RAI)	when the unit detects an incoming RAI signal.
Blue Alarm (AIS)	when the unit detects an incoming AIS signal.
Idle Signal	when the unit detects an incoming idle signal (1100) over the entire DS3 bandwidth.

**Table 3-6. Far End Alarm Trap Descriptions**

Trap Type	If ENABLED, this trap is sent...
Red Alarm (LOS)	when the unit receives indication from the far end unit through the FEAC channel that the far end unit has lost its receive signal.
Out of Frame (OOF)	when the unit receives indication from the far end unit through the FEAC channel that the far end unit has lost frame synchronization with the network.

**Table 3-6. Far End Alarm Trap Descriptions (Continued)**

Trap Type	If ENABLED, this trap is sent...
Yellow Alarm (RAI)	when the unit receives indication from the far end unit through the FEAC channel that the far end unit is receiving an RAI indication from the network.
Blue Alarm (AIS)	when the unit receives indication from the far end unit through the FEAC channel that the far end unit is receiving an AIS indication from the network.
Idle Signal	when the unit receives indication from the far end unit through the FEAC channel that the far end unit is receiving an idle signal (1100) over the entire DS3 payload.
Eqpt. Fail NSA	when the unit receives indication from the network through the FEAC channel of a non-service-affecting failure in the network equipment.
Eqpt. Fail SA	when the unit receives indication from the network through the FEAC channel of a service-affecting failure in the network equipment.
Com. Eqpt. Fail NSA	when the unit receives indication from the network through the FEAC channel of a non-service-affecting failure in the network common equipment.

**Table 3-7. MIB II Standard Trap Descriptions**

Trap Type	If ENABLED, this trap is sent...
Cold Start	when the unit is first powered on.
Link Up	when the network recovers from a Link Down condition and data transmission is restored.
Link Down	when a network condition prevents data transmission. This could be either an alarm or a network test.
Auth. Failure	when an SNMP request is made with the wrong read or write community names.

**Table 3-8. Network Trap Descriptions**

Trap Type	If ENABLED, this trap is sent...
Network Test In	when the unit goes into a DS3 network test, either commanded locally or remotely.
Network Test Out	when the unit is in a DS3 network test and the test is terminated.

**Table 3-9. DTE Port Trap Description**

Trap Type	If ENABLED, this trap is sent...
Port Status Change	when the unit detects a change in any of the four DTE ports. These traps may be generated when a DTE interface card is plugged in, a cord is removed, a port is reconfigured, a port goes into an error condition due to cabling problems, or a port goes into a test mode.

**Table 3-10. Quad DSX Port Trap Description**

Trap Type	If ENABLED, this trap is sent...
QDSX Alarms	when any of the DSX-1 ports detects an error condition.

**Toggle All Traps**

When activated, this entry allows you to toggle ALL alarms (previously described) between their disabled and enabled states.

## Password

Set the password required at login (up to 32 characters). The default password is **adtran** (all lower case).

## Control Port

Set the baud rate for the Control Port. The baud rate can be set to 57600 bps or 9600 bps.

## Unit ID

Enter a name to identify the unit for management purposes.

## Terminal Timeout

Set the amount of time the terminal or Telnet session can remain inactive before requiring re-entry of the password for access. This option can be disabled or set for 1 minute, 5 minutes, 15 minutes, 60 minutes, or one day.

## Date/Time

Enter date and time information. Enter the time in military time (separated by colons). Enter the month, date, and year (separated by forward slashes).

## Alarm Relay

Enable if the alarm terminal block (located on the rear of the unit) is connected to an audible alarm. If enabled, the alarm circuit is activated when a network alarm occurs.

## Dialup Options

Configure the dial-up capabilities of the T3SU 300. See Figure 3-11 on page 61. Descriptions of the individual fields of this menu follow the figure.

Dialup Options
<pre> 1 - Primary Phone Number = 2 - Secondary Phone Number = 3 - Init String = ATZ 4 - Dial String = ATDT  5 - Maximum redial attempts = 10 6 - Idle timeout = 10 7 - Connection timeout (&gt; 20 sec) = 60 8 - Pause between calls = 3  9 - Dialout on trap = Disabled 10 - Answer on ring = Enabled  11 - Hangup        Last Modem Response = OK </pre>
Enter selection >

Figure 3-11. Dialup Options Menu

### Primary and Secondary Phone Numbers

When the T3SU 300 dials out to send a trap, it first dials the **PRIMARY PHONE NUMBER**. If the call is unsuccessful, it tries the **SECONDARY PHONE NUMBER**. Attempts between the two numbers continue until a call is established and the trap is reported (or until each number's maximum for redial attempts is reached).

### Initializing String

The AT command entered in this field is used to initialize the modem. Normally, this field should be left at the default setting (ATZ).

### Dial String

The AT command entered in this field causes the modem to dial out. Normally, this field should be left at the default setting (ATDT).

### Maximum Redial Attempts

The T3SU 300 attempts to establish a call the number of times entered in this field. If a successful call is not established after the final attempt, the T3SU 300 discards the trap messages.

## Idle Timeout

Once a call is established and the trap messages are sent, the T3SU 300 remains online for the amount of seconds entered in this field. If the field is set to 0, the unit hangs up as soon as the trap is sent.

## Connection Timeout

The T3SU 300 waits for a connection the amount of seconds entered in this field. Timing begins as soon as the dial command is issued.

## Pause Between Calls

The T3SU 300 waits the number of seconds entered in this field between redial attempts.

## Dialout On Trap

Enable or disable the T3SU 300's ability to dial out to report traps. When configured for **DIALUP VT100**, the unit reports error conditions in plain ASCII with the following information:

- The Unit ID value programmed in the Unit ID field of the **SYSTEM MANAGEMENT** screen (see Figure 3-9 on page 53).
- A trap code indicating the error condition (selected from the **TRAP GENERATION** screen under **SYSTEM MANAGEMENT**)
- The date and time when the error was logged

When the **MODEM MODE** is configured for **DIALUP PPP** or **DIALUP SLIP**, the unit logs in to the PPP/SLIP host and reports the error conditions to the hosts designated under the **TRAP IP ADDRESSES** (also found under **SYSTEM MANAGEMENT**).

## Answer on Ring

Enable or disable the T3SU 300's ability to accept an incoming call. If enabled, incoming calls are automatically answered by the T3SU 300, allowing you to remotely perform management functions.

## Hangup

Selecting this option forces the T3SU 300 to end an established call.

## Last Modem Response

This status field displays the last modem response to the T3SU 300. Possible responses include:

**OK**  
**CONNECT**  
**BUSY**  
**ERROR**  
**No DIALTONE**  
**No CARRIER**

## UTILITIES

The **UTILITIES** menu allows you to view T3SU 300 system information (including self-test results), revert to default configuration settings, update the flash software of the local unit, update the flash software of the far-end T3SU 300, or reset the unit. The **SYSTEM UTILITIES** menu is shown in Figure 3-12 on page 64. Possible results for the self-test are listed in the following chart.

If the self-test results are...	Then...
PASS	the self-test was successful and the unit is ready to use.
BAD RAM DATA, BAD RAM ADDRESS, BAD CHECKSUM, BAD BOOT SECTOR, DS3F LOOPBACK FAILURE, ARTE TERMINAL LOOPBACK FAILURE, or ARTE INTERNAL LOOPBACK FAILURE	contact ADTRAN Technical Support. See <i>Customer Service, Product Support Information, and Training</i> on page 10.
CONFIGURATION CORRUPT	select <b>SAVE CONFIGURATION</b> from the main <b>CONFIGURATION</b> menu. If condition persists, contact ADTRAN Technical Support.

System Utilities
<pre>MAC Address = 00:C0:A8:D2:43:21 Serial number = B10234567 Hardware = 2nd GENERATION T3SU, 120V AC, V.34 MODEM  Software version = 2.00B          Boot version = 1.00A Software checksum = EAA8          Boot ckecksum = 8C9A  Self test results = PASS  1 - Load default settings 2 - Update FLASH software via XMODEM 3 - Update FLASH software using TFTP 4 - Update REMOTE FLASH 5 - Restart</pre>
Enter selection >

**Figure 3-12. System Utilities Menu**

## SAVE CONFIGURATION

The **SAVE CONFIGURATION** selection commits the current configuration changes to nonvolatile memory. If this option is not selected after making changes to the configuration, the unit reverts to its previous configuration when powered down.



# Chapter 4    Status

---

View port status information by selecting **1 STATUS** from the **MAIN** menu. Information for the network port and the DTE ports is provided. The **STATUS** menu is shown in Figure 4-1.

Status	
Network DS3 framing = C-Bit parity Network State = Alarm Alarm State = LOS (Red Alarm)	Data Link State = Down Remote State = Unknown
DTE Port 1 Interface type = HSSI Port status = Inactive Bandwidth = 0 bps DTE Leads =	DTE Port 3 Interface type = QUAD DSX-1 Port status = Inactive T1 Status = OFF OFF OFF OFF T1 Timing Source = DS3
DTE Port 2 Interface type = V.35 Port status = Inactive Bandwidth = 0 bps DTE Leads =	DTE Port 4 Interface type = ETHERNET BRIDGE Port status = Inactive 1 - Bridge Status
Enter selection > _	

Figure 4-1. Status Menu

## NETWORK PORT

### DS3 Framing

The DS3 framing type is shown in this field.

## Network State

This field displays the current network state of the T3SU 300. Possible conditions are given in the following chart:

Condition	Description
Normal	The T3SU 300 is ready to pass data.
Alarm	The unit is currently receiving an alarm indication. See the <b>ALARM STATE</b> field in this menu to determine the alarm type.
In Test	The unit is currently in test mode. The <b>DIAGNOSTICS</b> menu provides information on test type.

## Alarm State

This field displays the current alarm condition of the T3SU 300. Possible conditions are given in the following chart:

Condition	Description
Normal	No alarms are currently being received.
Yellow	The unit is transmitting a yellow alarm from the network. This alarm is a signal sent back toward the source of a failed transmit circuit. The X-bits (X1 and X2) are set to zero.
LOS (Red Alarm)	The unit has lost the Rx signal.
Blue (AIS)	The unit is receiving a blue alarm condition from the network. A blue alarm occurs when consecutive 1010s are received in the information bits. This indicates that there is a transmission fault located either at or upstream from the transmitting terminal.
OOF	The unit detects an out of frame condition from the network.
Idle	The unit detects an idle sequence from the network. Service is immediately available for use.

## Data Link State

This field displays the current state of the data link between the local and the remote T3SU 300s. Possible states are listed in the following chart:

Condition	Description
Normal	The local unit's data link is in sync with the remote unit.
Disabled	The <b>DATA LINK</b> option in the <b>DS3 NETWORK CONFIGURATION</b> menu is set to <b>DISABLED</b> .
Down	The local and remote units are not in sync.

## Remote State

This field displays the current state of the remote link. Possible states are listed in the following chart:

Condition	Description
Normal	No alarms are currently being received.
RAI (Yellow Alarm)	The unit is transmitting a yellow alarm from the network. This alarm is a signal sent back toward the source of a failed transmit circuit. The X-bits (X1 and X2) are set to zero.
LOS (Red Alarm)	The unit has lost the Rx signal.
AIS (Blue Alarm)	The unit is receiving a blue alarm condition from the network. A blue alarm occurs when consecutive 1010s are received in the information bits. This indicates that there is a transmission fault located either at or upstream from the transmitting terminal.
OOF	The unit detects an out of frame condition from the network.
Idle	The unit detects an idle sequence from the network. Service is immediately available for use.
Eqpt Fail (SA)	The network has signaled a service affecting equipment failure condition.

Condition	Description
Eqpt Fail (NSA)	The network has signaled a non-service affecting equipment failure condition.
Com Eqpt Fail (NSA)	The network has signaled a non-service affecting common equipment failure condition.
Unknown	The T3SU 300 is unable to determine the state of the network or the remote unit.

## DTE PORTS

The following status information is available for DTE Ports 1-4.

### Interface Type

The interface type of the port is shown in this field (HSSI, V.35, Quad DSX-1, or Ethernet Bridge).

### Port Status

This field displays the current port status. Possible states are listed in the following chart:

Condition	Description
Inactive	The port is installed, but idle. Activate a port through the <b>PORT STATE</b> field of the <b>DTE PORT CONFIGURATION</b> menu.
Active	The port has been configured and is passing data.
Error	An error condition such as loss of transmit clock has occurred.
In Test	The unit is currently in test mode.

Condition	Description
Waiting for DTE	The port has been configured and is waiting for the DTE to issue the appropriate handshaking signals. For the HSSI interface, the terminal equipment available (TA) signal must be asserted by the DTE. For V.35, DTR is required if the TR field is set to <b>IDLE WHEN OFF</b> ; otherwise, DTR is ignored. The TR field is found in the <b>DTE PORT CONFIGURATION</b> menu.

## T1 Status

This field displays the current status of the Quad DSX-1 interface card. Some conditions are given for each of the four individual ports, while others apply to the entire card. Possible states are listed in the following charts:

Condition	Description
<b>Status conditions for an individual DSX-1 port</b>	
Off	The DSX-1 port has been turned off by the user.
OK	The DSX-1 port is on and is capable of passing data.
Red	The DSX-1 port detects a loss of signal and is in red alarm.
OOF	The DSX-1 port detects an out of frame condition from the network.
Yel	The DSX-1 port detects a yellow alarm condition.
Blue	The DSX-1 port detects a blue alarm condition (unframed all ones).
Tst	The DSX-1 port is in test.

Condition	Description
<b>Status conditions for the entire Quad DSX-1 card</b>	
Initializing	The Quad DSX-1 interface card has just been inserted and is initializing.
Comm Error	The T3SU 300 unit is unable to communicate with the Quad DSX-1 interface card. If displayed, call ADTRAN Technical Support (See <i>Customer Service, Product Support Information, and Training</i> on page 10.).
Frame Slip	The Quad DSX-1 interface card has detected a frame slip.
PLL Error	The Quad DSX-1 interface card is unable to lock on to the timing source.



*When a DSX-1 port is enabled but is not attached to a DTE device, the T3SU 300 will transmit an unframed all ones condition (blue alarm) to the remote site.*

## Bandwidth

Displays the amount of bandwidth being used by the port. This field does not apply to the Quad DSX-1 interface card.

## DTE Leads

If a lead is active on the port, it is displayed in this field. The leads differ according to the interface type. This field does not apply to the Quad DSX-1 interface card.

Lead descriptions for both the HSSI and the V.35 interfaces are as follows:

HSSI Interface Leads	Condition
TA (terminal available)	Asserted by the DTE to indicate readiness to transmit data.
CA (communications equipment available)	Asserted by the T3SU 300 to indicate readiness to transmit data.
LA (loopback circuit A)	The condition reflected by this lead is dependent upon the LB lead. See Table 4-1.
LB (loopback circuit B)	The condition reflected by this lead is dependent upon the LA lead. See Table 4-1.
LC (loopback circuit C)	Asserted by the unit to request a loopback from the DTE.
TM (test mode)	Asserted by the T3SU 300 when either the network or the port is being tested.

**Table 4-1. LA and LB Leads**

LA	LB	Condition
Off	Off	No test (normal)
On	Off	Local line loopback
Off	On	Remote line loopback
On	On	Local DTE loopback



**NOTE**

*Both TA and CA must be on before data will flow.*

**Table 4-2. V.35 Interface Leads**

Lead	Condition
RS	Request to send
CS	Clear to send
CD	Carrier detect
TR	Data terminal ready
SR	Data set ready
LL	Local DTE port loopback
RL	Remote port payload loopback
TM	Test mode. Asserted by the T3SU 300 when either the network or port is being tested.

## Ethernet Bridge Status

View the status of each of the four ports by selecting **1 BRIDGE STATUS** from the **DTE PORT STATUS** menu. The **ETHERNET BRIDGE STATUS** menu is shown in Figure 4-2.

Bridge Status	
10/100 BASE-TX #1 Port Link = No Link Speed = 10 BASE-T Duplex = HALF DUPLEX	10/100 BASE-TX #3 Port Link = No Link Speed = 10 BASE-T Duplex = HALF DUPLEX
10/100 BASE-TX #2 Port Link = No Link Speed = 10 BASE-T Duplex = HALF DUPLEX	10/100 BASE-TX #4 Port Link = No Link Speed = 10 BASE-T Duplex = HALF DUPLEX
Enter selection > _	

**Figure 4-2. Ethernet Bridge Status Menu**



**Port Link**

This field displays the current status of the individual Ethernet ports. The status messages are **LINK** and **No LINK**.

**Speed**

This field displays the current speed of the individual Ethernet ports. The status messages are **10 BASET** and **100 BASET**.

**Duplex**

This field displays the current duplex mode of the individual Ethernet ports. The status messages are **HALF DUPLEX** and **FULL DUPLEX**.



## Chapter 5 Statistics

---

### VIEWING STATISTICAL INFORMATION

Select **2 STATISTICS** from the **MAIN** menu to access **STATISTICS** menus. Alarm information and performance parameters are available for both the near and far ends of the network. If a Quad DSX-1 card or Ethernet Bridge card is installed, the menu item **OTHER STATISTICS** appears on the main **STATISTICS** screen (see Figure 5-1).

All statistical information is given in screens based on the following time periods: the current 15-minute interval, a 24-hour history (divided into 96 15-minute intervals), and the totals for the previous 24 hours. Also, a cumulative alarm count is given. This count continues indefinitely until reset by the user.



*If the **DATA LINK** option is disabled, remote statistics are not available (**CONFIGURATION -> DS3 NETWORK -> DATA LINK**).*

Local Statistics	
Alarm History	
1 -	Current 15 Minute Interval
2 -	24 Hour History
3 -	24 Hour Totals
4 -	Cumulative Alarm Count
Performance Parameters	
5 -	Current 15 Minute Interval
6 -	24 Hour History
7 -	24 Hour Totals
Other Statistics	
8 -	Port 3 Quad DSX-1 Alarm History
9 -	Port 4 Ethernet Bridge Statistics
Enter selection >	

Figure 5-1. Main Local Statistics Menu Screen

## Alarm History

The T3SU 300 keeps track of yellow, blue, and red alarms for the near end. View alarm history information in one of the three time period selections, or view a cumulative alarm count. Information in these fields is for the given time period (if any) since the last reset. The cumulative alarm count continues indefinitely until **CLEAR ALL DS3 ALARM COUNTS** is selected. See Figure 5-2 and Figure 5-3 on page 77 for examples of alarm screens.

An alarm history is also available for the individual ports of a Quad DSX-1 interface card (if installed). Select **PORT x QUAD DSX-1 ALARM HISTORY** (where **x** is the number of the card slot that the Quad DSX-1 card is installed in). See Figure 5-4 on page 78 for an example of the 24-hour alarm history for the card.



*The count given reflects the number of times the alarm has occurred (rather than the number of seconds the alarm was active).*

Local Current Alarm Count	
Near-End Yellow Alarm	0
Near-End Blue Alarm	0
Near-End Red Alarm	0
Far-End Yellow Alarm	0
Far-End Blue Alarm	0
Far-End Red Alarm	0
1 - Clear ALL DS3 alarm counts	
Enter selection > _	

Figure 5-2. Current Alarm Count Screen

Local 15 Minute Alarm History				
Interval starting at:	13:34	13:19	13:04	12:49
Near-End Yellow Alarm	0	0	0	0
Near-End Blue Alarm	0	0	0	0
Near-End Red Alarm	0	0	0	0
Far-End Yellow Alarm	0	0	0	0
Far-End Blue Alarm	0	0	0	0
Far-End Red Alarm	0	0	0	0
1 - Clear ALL DS3 alarm counts				
Enter selection > _				

Figure 5-3. 24-Hour Alarm History Screen

**NOTE**

When a < or > symbol appears in the upper corner of the screen, you can use the arrow keys on your keyboard to scroll right or left to view additional information (see Figure 5-4 on page 78).

24 Hour History							
DSX-1 #1				DSX-1 #3			
13:49	13:34	13:19		13:49	13:34	13:19	
Red Alarm	0	0	0	Red Alarm	0	0	0
OOE Alarm	0	0	0	OOE Alarm	0	0	0
Yellow Alarm	0	0	0	Yellow Alarm	0	0	0
Blue Alarm	0	0	0	Blue Alarm	0	0	0
Frame Slip	0	0	0	Frame Slip	0	0	0
DSX-1 #2				DSX-1 #4			
13:49	13:34	13:19		13:49	13:34	13:19	
Red Alarm	0	0	0	Red Alarm	0	0	0
OOE Alarm	0	0	0	OOE Alarm	0	0	0
Yellow Alarm	0	0	0	Yellow Alarm	0	0	0
Blue Alarm	0	0	0	Blue Alarm	0	0	0
Frame Slip	0	0	0	Frame Slip	0	0	0
Quad DSX-1 Interface				1 - Clear ALL Quad DSX-1 counts			
PLL Lock Alarm	0	0	0				
Enter selection > _							

Figure 5-4. Quad DSX-1 24-Hour Alarm History

## Performance Parameters

View performance parameter information in one of the three time period selections. Information in these fields is for the given time period since the last reset. When viewing the 24-hour history statistics screen, use the left and right arrow keys to scroll through all 96 15-minute intervals. See Figure 5-5 on page 79 through Figure 5-7 on page 81 for examples of the performance parameter screens.

Descriptions of each field of these screens follow:

### Interval starting at:

Time that the 15-minute interval began. This field is only displayed in the 24-hour history screen, which gives information for the previous 24 hours divided into 15-minute intervals (shown in Figure 5-6 on page 80).

### Unavailable Seconds (UAS)

Time in seconds that the network port is unavailable for data delivery. This means that the T3 link is down or in test, or that the signaling state is down.

**Severely Errored Framing Seconds (SEFS)**

Number of seconds with one or more out of frame defects or a detected incoming AIS.

**Line Coding Violations (LCV)**

Number of BPVs (bipolar violations) and EXZs (excessive zeros) that have occurred.

**Line Errored Seconds (LES)**

Number of seconds in which one or more CVs or one or more loss of signal (LOS) defects occurred.

Local Current Performance	
Unavailable Seconds (UAS)	829
Severely Errored Framing Sec (SEFS)	829
Line Coding Violations (LCV)	3621726240
Line Errored Seconds (LES)	829
P-Bit Errored Seconds (PES)	0
P-Bit Severely Errored Sec (PSES)	0
P-Bit Coding Violations (PCV)	0
C-Bit Coding Violations (CCV)	0
C-Bit Errored Seconds (CES)	0
C-Bit Severely Errored Sec (CSES)	0
F-Bit Errors (FBE)	0
M-Bit Errors (MBE)	0
1 - Clear ALL local DS3 statistics	
Enter selection > _	

**Figure 5-5. Network Statistics Menu for Current 15-Minute Interval**

**P-Bit Errored Seconds (PES)**

Number of seconds with one or more PCVs (P-bit coding violations), one or more out of frame defects, or a detected incoming AIS (alarm indication signal). This count is not incremented when UASs (unavailable seconds) are counted.

**P-Bit Severely Errored Seconds (PSES)**

Number of seconds with 44 or more PCVs, one or more out of frame defects, or a detected incoming AIS. This count is not incremented when UASs are counted.

**P-Bit Coding Violations (PCV)**

Number of coding violation (CV) error events that have occurred.

**C-Bit Coding Violations (CCV)**

In C-bit parity mode, this is a count of coding violations reported via the C-bits or the number of C-bit parity errors that have occurred.

Local Performance History				
Interval starting at:	17:49	17:34	17:19	17:04
Unavailable Seconds (UAS)	900	900	900	900
Severely Errored Framing Sec (SEFS)	900	900	900	900
Line Coding Violations (LCV)	39319033	39319033	39319033	39319033
Line Errored Seconds (LES)	900	900	900	900
P-Bit Errored Seconds (PES)	0	0	0	0
P-Bit Severely Errored Sec (PSES)	0	0	0	0
P-Bit Coding Violations (PCV)	0	0	0	0
C-Bit Coding Violations (CCV)	0	0	0	0
C-Bit Errored Seconds (CES)	0	0	0	0
C-Bit Severely Errored Sec (CSES)	0	0	0	0
F-Bit Errors (FBE)	0	0	0	0
M-Bit Errors (MBE)	0	0	0	0
1 - Clear ALL local DS3 statistics				
Enter selection >				

Figure 5-6. Network Port Statistics 24-Hour History Screen

**C-Bit Errored Seconds (CES)**

Number of seconds with one or more CCVs, one or more out of frame defects, or a detected incoming AIS. This count is not incremented when UASs are counted.

**C-Bit Severely Errored Seconds (CSES)**

Number of seconds with 44 or more CCVs, one or more out of frame defects, or a detected incoming AIS. This count is not incremented when UASs are counted.

**F-Bit Errors (FBE)**

Number of times an F-bit framing error has occurred.



## M-Bit Errors (MBE)

Number of times an M-bit framing error has occurred.

Local 24 Hour Performance Totals	
Unavailable Seconds (UAS)	20700
Severely Errored Framing Sec (SEFS)	20700
Line Coding Violations (LCV)	232977159
Line Errored Seconds (LES)	20700
P-Bit Errored Seconds (PES)	0
P-Bit Severely Errored Sec (PSES)	0
P-Bit Coding Violations (PCV)	3
C-Bit Coding Violations (CCV)	0
C-Bit Errored Seconds (CES)	0
C-Bit Severely Errored Sec (CSES)	0
F-Bit Errors (FBE)	7
M-Bit Errors (MBE)	1
1 - Clear ALL local DS3 statistics	
Enter selection >	

**Figure 5-7. Network Port Statistics Menu (24-Hour Totals)**

### Clear All Local DS3 Statistics/Refresh All Remote Statistics

Clears or refreshes all current information. These selections affect all statistical information (not just the displayed screen).

## Other Statistics

If a Quad DSX-1 card or Ethernet Bridge card is installed, the menu item **OTHER STATISTICS** appears on the main **STATISTICS** screen (see Figure 5-1). For Quad DSX-1 cards, an alarm history is available for the individual ports. (See Alarm History on page 76.) For Ethernet Bridge cards, MIB counters provide statistics for each Ethernet Port. See Figure 5-8 on page 82, Figure 5-9 on page 84, and Figure 5-10 on page 86 for examples of the statistical data for the card. A description of each counter is listed in Table 5-1 on page 82, Table 5-2 on page 5-84, and Table 5-3 on page 5-86.

Ethernet Bridge Statistics				
Ethernet Port	PORT 1	PORT 2	PORT 3	PORT 4
TX_OCTETS	0	0	0	0
TX_DROP_PKTS	0	0	0	0
TX_BROADCAST_PKTS	0	0	0	0
TX_MULTICAST_PKTS	0	0	0	0
TX_UNICAST_PKTS	0	0	0	0
TX_COLLISIONS	0	0	0	0
TX_SINGLE_COLLISION	0	0	0	0
TX_MULTIPLE_COLLISIONS	0	0	0	0
TX_DEFERRED_TRANSMIT	0	0	0	0
TX_LATE_COLLISION	0	0	0	0
TX_EXCESSIVE_COLLISIONS	0	0	0	0
TX_FRAME_IN_DISC	0	0	0	0
TX_PAUSE_PKTS	0	0	0	0
DOWN				
Enter selection > _				

Figure 5-8. Ethernet Bridge Statistics Menu Screen 1

Table 5-1. Ethernet Bridge Statistics Counters Screen 1

Counter Name	Description
TX_OCTETS	The total number of good bytes of data transmitted by a port (excluding preamble but including FCS).
TX_DROP_PKTS	This counter is incremented every time a transmit packet is dropped due to lack of resources or an internal MAC sublayer transmit error occurs that is not counted by either TX_LATE COLLISION or the TX_EXCESSIVE_COLLISION counter.
TX_BROADCAST_PKTS	The number of good packets transmitted by a port that are directed to a broadcast address. This counter does not include errored broadcast packets or valid multicast packets.
TX_MULTICAST_PKTS	The number of good packets transmitted by a port that are directed to a multicast address. This counter does not include errored multicast packets or valid broadcast packets.
TX_UNICAST_PKTS	The number of good packets transmitted by a port that are addressed to a unicast address.
TX_COLLISIONS	The number of collisions experienced by a port during packet transmissions.

**Table 5-1. Ethernet Bridge Statistics Counters Screen 1 (Continued)**

Counter Name	Description
TX_SINGLE_COLLISIONS	The number of packets successfully transmitted by a port that experienced exactly one collision.
TX_MULTIPLE_COLLISIONS	The number of packets successfully transmitted by a port that experienced more than one collision.
TX_DEFERRED_TRANSMIT	The number of packets transmitted by a port for which the first transmission attempt is delayed because the medium is busy.
TX_LATE_COLLISIONS	The number of times a collision is detected later than 512 bit-times into the transmission of a packet.
TX_EXCESSIVE_COLLISIONS	The number of packets that are not transmitted from a port because the packet experienced 16 transmission attempts.
TX_FRAME_IN_DISC	The number of valid packets received that are discarded by the forwarding process due to lack of space on an output queue.
TX_PAUSE_PKTS	The number of PAUSE frames transmitted by a port.

Ethernet Bridge Statistics					> UP
Ethernet Port	PORT 1	PORT 2	PORT 3	PORT 4	
RX_OCTETS	0	0	0	0	DOWN
RX_UNDERSIZE_PKTS	0	0	0	0	
RX_PAUSE_PKTS	0	0	0	0	
RX_OVERSIZE_PKTS	0	0	0	0	
RX_JABBERS	0	0	0	0	
RX_ALIGNMENT_ERRORS	0	0	0	0	
RX_FCS_ERRORS	0	0	0	0	
RX_GOOD_OCTETS	0	0	0	0	
RX_DROP_PKTS	0	0	0	0	
RX_UNICAST_PKTS	0	0	0	0	
RX_MULTICAST_PKTS	0	0	0	0	
RX_BROADCAST_PKTS	0	0	0	0	
RX_SA_CHANGES	0	0	0	0	
RX_FRAGMENTS	0	0	0	0	
RX_EXCESS_SIZE_DISC	0	0	0	0	
Enter selection > _					

Figure 5-9. Ethernet Bridge Statistics Menu Screen 2

Table 5-2. Ethernet Bridge Statistics Counters Screen 2

Counter Name	Description
RX_OCTETS	The number of bytes of data received by a port (excluding preamble, but including FCS), including bad packets.
RX_UNDERSIZE_PKTS	The number of good packets received by a a port that are less than 64 bytes long (excluding framing bits, but including the FCS).
RX_PAUSE_PKTS	The number of PAUSE frames received by a port. The pause frame must have a valid MAC Control Frame
RX_OVERSIZE_PKTS	The number of good packets received by a port that are greater than 1522 bytes inclusive (excluding framing bits but including the FCS).
RX_JABBERS	The number of packets received by a port that are longer than 1522 bytes and have either an FCS error or an alignment error.
RX_ALIGNMENT_ERRORS	The number of packets received by a port that have a length (excluding framing bits, but including FCS) between 64 and 1522 bytes, inclusive, and have a bad FCS with an integral number of bytes.

**Table 5-2. Ethernet Bridge Statistics Counters Screen 2 (Continued)**

Counter Name	Description
RX_FCS_ERRORS	The number of packets received by a port that have a length (excluding framing bits but including FCS) between 64 and 1522 bytes inclusive, and have a bad FCS with an integral number of bytes.
RX_GOOD_OCTETS	The total number of bytes in all good packets received by a port (excluding framing bits, but including FCS).
RX_DROP_PKTS	The number of good packets received by a port that were dropped due to lack of resources or were dropped due to a lack of resources before a determination of the validity of the packet was able to be made. This counter is only incremented if the receive error was not counted by either the RX_EXCESS_SIZE_DISC, the RX_ALIGNMENT_ERRORS, or the RX_FCS_ERRORS counters.
RX_UNICAST_PKTS	The number of good packets received by a port that are addressed to a unicast address.
RX_MULTICAST_PKTS	The number of good packets received by a port that are directed to a multicast address. This counter does not include errored multicast packets or valid broadcast packets.
RX_BROADCAST_PKTS	The number of good packets received by a port that are directed to a broadcast address. This counter does not include errored broadcast packets or valid multicast packets.
RX_SA_CHANGES	The number of times the SA of good receive packets has changed from the previous value. A count greater than 1 generally indicates the port is connected to a repeater based network.
RX_FRAGMENTS	The number of packets received by a port that are less than 64 bytes (excluding framing bits) and have either an FCS error or an alignment error.
RX_EXCESS_SIZE_DISC	The number of good packets received by a port that are greater than 1536 bytes (excluding framing bits, but including the FCS) and were discarded due to excessive length. Note the RX_OVERSIZE_PKTS counter alone is incremented for packets in the range 1523-1536 bytes inclusive; whereas, both this counter and the RX_OVERSIZE_PKTS counter are incremented for packets of 1537 bytes and higher.

Ethernet Bridge Statistics				
Ethernet Port	PORT 1	PORT 2	PORT 3	PORT 4
RX_SYMBOL_ERROR	0	0	0	0
PKTS_64_OCTETS	0	0	0	0
PKTS_65T0127_OCTETS	0	0	0	0
PKTS_128T0255_OCTETS	0	0	0	0
PKTS_256T0511_OCTETS	0	0	0	0
PKTS_512T01023_OCTETS	0	0	0	0
PKTS_1024T01522_OCTETS	0	0	0	0
1 - Reset Statistics				
Enter selection >				

Figure 5-10. Ethernet Bridge Statistics Menu Screen 3

Table 5-3. Ethernet Bridge Statistics Counters Screen 3

Counter Name	Description
RX_SYMBOL_ERROR	The total number of times a valid length packet was received at a port and at least one invalid data symbol was detected. This counter only increments once per carrier event and does not increment on detection of collision during the carrier event.
PKTS_64_OCTETS	The number of packets (including error packets) that are 64 bytes long.
PKTS_65T0127_OCTETS	The number of packets (including error packets) that are between 65 and 127 bytes long.
PKTS_128T0255_OCTETS	The number of packets (including error packets) that are between 128 and 255 bytes long.
PKTS_256T0511_OCTETS	The number of packets (including error packets) that are between 256 and 511 bytes long.
PKTS_512TO1023_OCTETS	The number of packets (including error packets) that are between 512 and 1023 bytes long.

**Table 5-3. Ethernet Bridge Statistics Counters Screen 3 (Continued)**

Counter Name	Description
PKTS_ 1024TO1522_ OCTETS	The number of packets (including error packets) that are between 1024 and 1522 bytes long.





The **DIAGNOSTICS** menu allows you to initiate loopback and BERT tests from the T3SU 300. Figure 6-1 on page 90 shows the main **DIAGNOSTICS** menu. Perform tests for the entire DS3 or for an individual DTE port. If a Quad DSX-1 card is installed, activate loopback tests for an entire card (all four DSX-1s) or for an individual DSX-1 port. No diagnostics are available for the Ethernet Bridge card.

To choose a DTE port from the left column of the menu, select the port's corresponding number and press **Enter**. The individual port menus provide loopback and BERT selections. BERT configuration options and results are given in the right-hand column of the main **DIAGNOSTICS** menu.

Diagnostic selections are described in the following portions of this chapter:

DS3 Options: page 91 through page 93

HSSI and V.35 Port Options: page 93 through page 96

Quad DSX-1 Interface Card Options: page 97 through page 102

BERT Configuration Options: page 103 through page 104



*You can only perform a BERT test on one DTE port at a time. If a BERT test is already in progress and a second BERT test is selected for another port, the first test is discontinued.*



*Loopback tests may be performed simultaneously on all four DTE ports.*

Diagnostics	
DS3	BERT Configuration
1 - Data Mode	6 - Pattern = All Zeros
DTE Port 1	7 - Invert pattern = Disabled
2 - Data Mode	Port = None
DTE Port 2	Direction = Network
3 - Data Mode	State = NO SYNC
DTE Port 3	Errors = 0
4 - Data Mode	Current ERR/SEC = 0
DTE Port 4	8 - Insert error
5 - Data Mode	9 - Clear errors
	10 - Reset ALL tests
Enter selection > _	

Figure 6-1. Diagnostics Main Menu

# DS3

Access the DS3’s diagnostic options by selecting **1** from the main **DIAGNOSTICS** menu. The menu in Figure 6-2 appears.

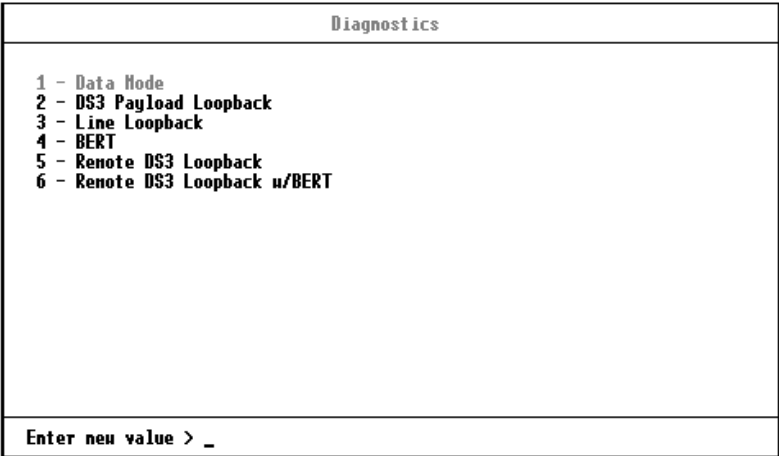


Figure 6-2. DS3 Diagnostics Menu

## Data Mode

Ends a test already in progress for this port.

## DS3 Payload Loopback

During this test, all payload information is re-framed and looped back towards the network. See Figure 6-3 on page 92 for a block diagram illustrating the loopback point and the signal paths for this test.



*This test does not interrupt data flow from the network to the DTE, but it does block all DTE-to-network data.*

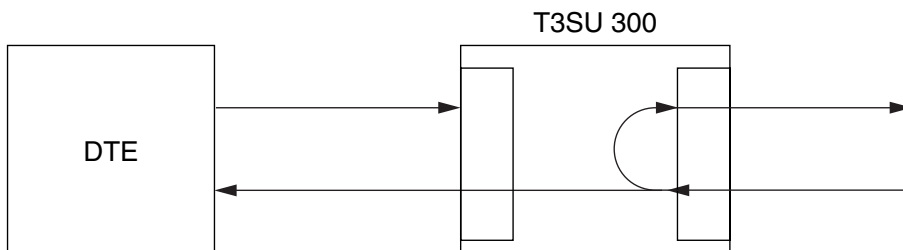


Figure 6-3. DS3 Payload Loopback Test

### Line Loopback

This test allows the loop interface (LINE) section of the local T3SU 300 to be tested from the remote T3SU 300 over the actual T3 circuit. Testing from the remote end of the circuit is performed by using a 511 test pattern or DTE data generated by the remote host. With this test, the T3SU 300 transceiver receives data from the network and loops it back toward the network through its transmitter. The transmitted data is identical to the receive data (including framing errors) and can therefore be accurately tested by the carrier for errors. See Figure 6-4.



*The Line Loopback test is only available in loop timed mode (CONFIGURATION -> DS3 NETWORK -> DS3 TIMING -> LOOP).*

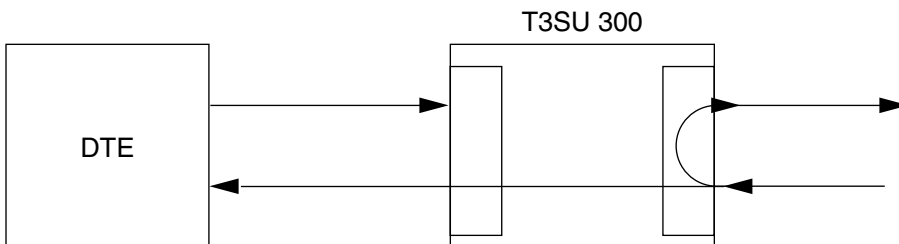


Figure 6-4. Line Loopback Test

## **BERT**

Select BERT to perform a bit error rate test over the entire payload bandwidth. Only one BERT test may be performed at a time.

## **Remote DS3 Loopback**

This selection initiates a DS3 Loopback test for the remote unit. The DS3 Loopback test is described on page 91.

## **Remote Loopback with BERT**

This selection initiates a DS3 Loopback test for the remote unit and sends/checks the BERT pattern over the entire DS3 payload bandwidth.

## **DTE Ports 1-4**

Access the DTE port diagnostic options by selecting the number corresponding with the desired port (options **2** through **5**) from the main **DIAGNOSTICS** menu. These options differ depending on the interface type of the selected port. See the following section for the testing options available for the HSSI and V.35 ports. See the section *Quad DSX-1 Diagnostic Options* on page 97 for testing options available for the DSX-1 ports.

## HSSI and V.35 Diagnostic Options

The menu in Figure 6-5 appears if the selected DTE port is HSSI or V.35. Descriptions of the menu selections follow the figure.

Diagnostics	
1 -	Data Mode
2 -	Payload Loopback
3 -	Payload BERT
4 -	DTE Loopback
5 -	Payload and DTE Loopback
6 -	Remote Port Payload Loopback
7 -	Remote payload loopback w/BERT
Enter new value >	

**Figure 6-5. HSSI or V.35 Port Diagnostics Menu**

### Data Mode

Ends a test already in progress.

### Payload Loopback

This selection initiates a **PAYLOAD LOOPBACK** test for all data on the selected port rather than for the entire DS3. During this test, the data is looped back in the network direction. Perform this test to verify the integrity of the portion of the DS3 link connecting the selected port of the T3SU 300 and the remote DTE. This test is non-intrusive to the three other ports. See Figure 6-6 on page 95.



*This test does not interrupt data flow from the network to the DTE, but it does block all DTE-to-network data for the selected port.*

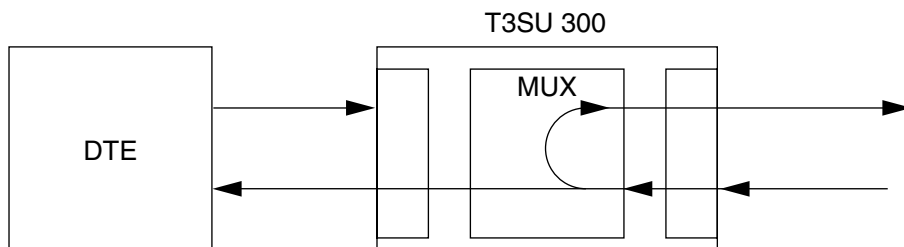


Figure 6-6. Payload Loopback Test

**Payload BERT**

This selection performs a bit error rate test on the selected port. This test is non-intrusive to the other three ports. Only one BERT test may be performed at a time. This test is normally performed from the remote and local ends simultaneously to determine whether the errors are coming from the transmit or the receive direction. See Figure 6-7.

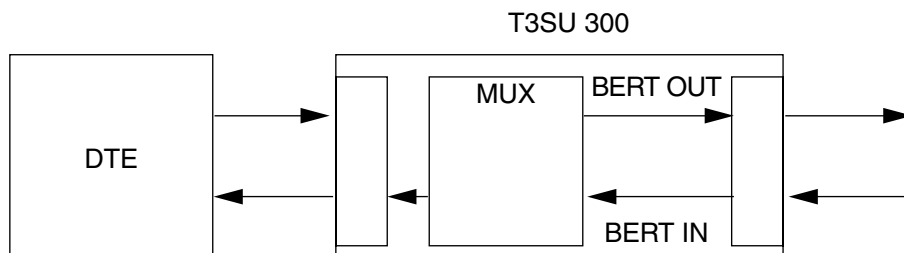


Figure 6-7. Payload BERT Test

**DTE Loopback**

This test is used to verify proper operation of the link between the T3SU 300 and the terminal equipment. During this test, all data sent by the terminal equipment is looped back to the terminal equipment. A block diagram illustrating the loopback point and the signal path is shown in Figure 6-8 on page 96.



*While in DTE Loopback, data from the host is transmitted into the network.*

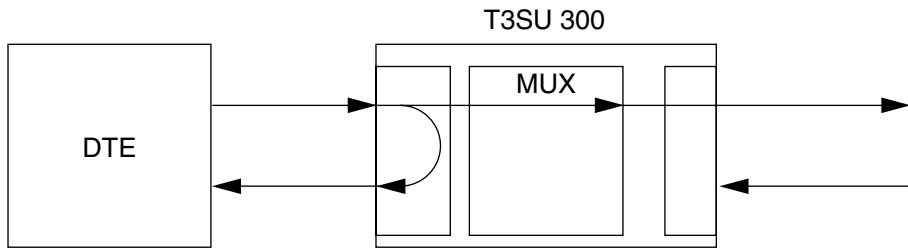


Figure 6-8. DTE Loopback Test

**Payload and DTE Loopback**

Select this test to perform payload and DTE loopbacks simultaneously. The individual tests are described on page 91 and page 95. See Figure 6-9 for a block diagram illustrating this test.

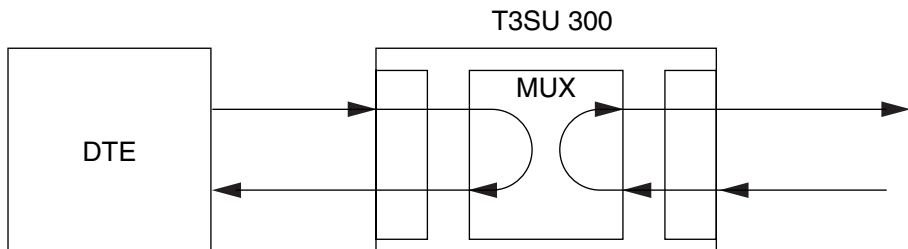


Figure 6-9. Payload and DTE Loopback Test

**Remote Port Payload Loopback**

This selection initiates a Payload Loopback on the remote T3SU 300 for all data on the selected port. Perform this test to verify the integrity of the portion of the DS3 link connecting the local DTE and the selected port of the remote T3SU 300. All other ports on both the local and remote units are unaffected.

**Remote Payload Loopback with BERT**

Perform this test to verify the integrity of the link between the selected port of the local T3SU 300 and the corresponding remote T3SU 300 port. During this test, the remote unit loops back all data for the selected port, while the local unit sends and checks the selected BERT pattern. The loopback point and the signal paths for



the remote T3SU 300 are the same as the Payload Loopback test for the local T3SU 300 (shown in Figure 6-6 on page 95).

**Quad DSX-1 Diagnostic Options**

The menu in Figure 6-10 appears if the selected port is a Quad DSX-1. Descriptions of the menu selections follow the figure.

Diagnostics	
1 - Data Mode	17 - #4 Line Loopback
2 - #1 Payload Loopback	18 - Payload Loopback
3 - #1 Franer Loopback	19 - DTE Loopback
4 - #1 Local Loopback	20 - Payload and DTE Loopback
5 - #1 Line Loopback	21 - Remote Port Payload Loopback
6 - #2 Payload Loopback	
7 - #2 Franer Loopback	
8 - #2 Local Loopback	
9 - #2 Line Loopback	
10 - #3 Payload Loopback	
11 - #3 Franer Loopback	
12 - #3 Local Loopback	
13 - #3 Line Loopback	
14 - #4 Payload Loopback	
15 - #4 Franer Loopback	
16 - #4 Local Loopback	
Enter new value >	


**Figure 6-10. Quad DSX-1 Diagnostics Menu**

**Data Mode**

Ends a test already in progress.

**#x Payload Loopback**


During this test, all payload information on the selected DSX-1 interface is reframed and looped back towards the DTE. See Figure 6-11 for an illustration of this test.

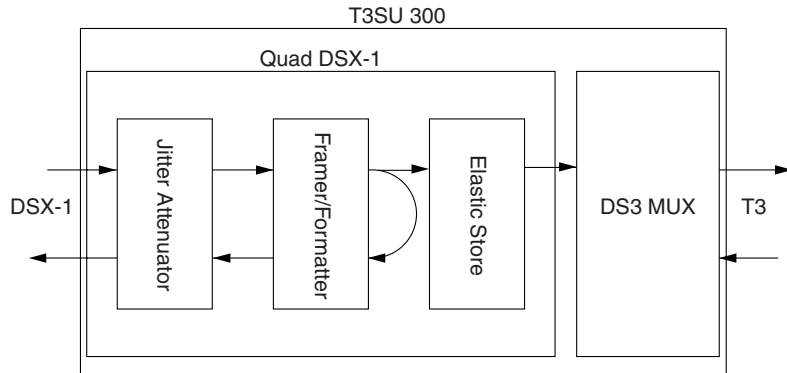

**Figure 6-11. DSX-1 Payload Loopback Test**

**#x Framer Loopback**


During this test, all information from the network side (DS3) for the selected DSX-1 interface is looped back towards the network. See Figure 6-12 for an illustration of this test.

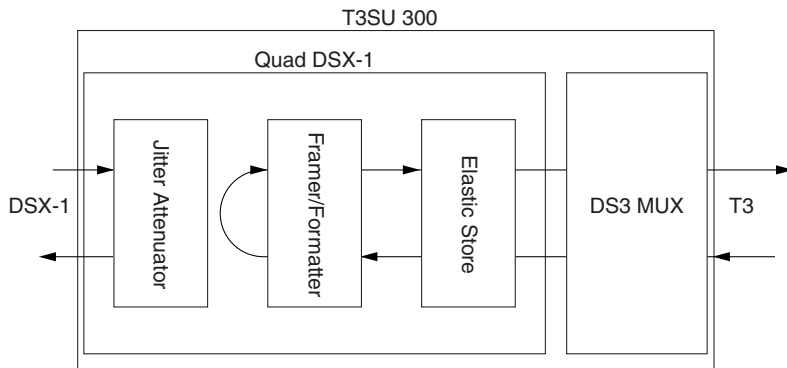

**Figure 6-12. Framer Loopback Test**

### #x Local Loopback


During this test, all information from the network side (DS3) for the selected DSX-1 interface is looped back towards the network. This test is similar to the Framer Loopback test (described previously), with the exception that this test penetrates the circuitry deeper into the Quad DSX-1 interface card. See Figure 6-13 for an illustration of this test.

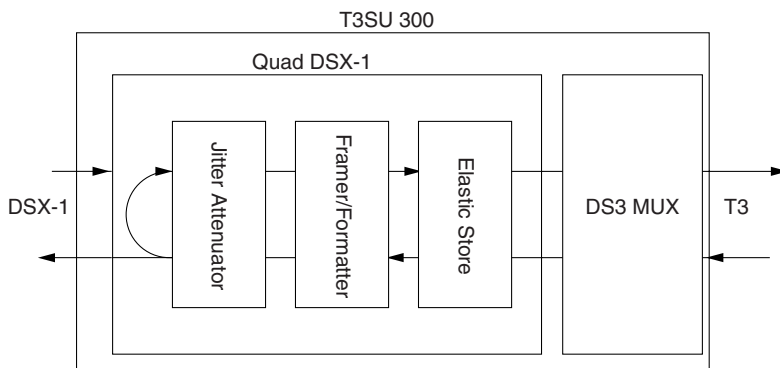

**Figure 6-13. DSX-1 Local Loopback Test**

### #x Line Loopback


During this test, all information on the selected DSX-1 interface, including framing, is looped back towards the DTE. See Figure 6-14 for an illustration of this test.

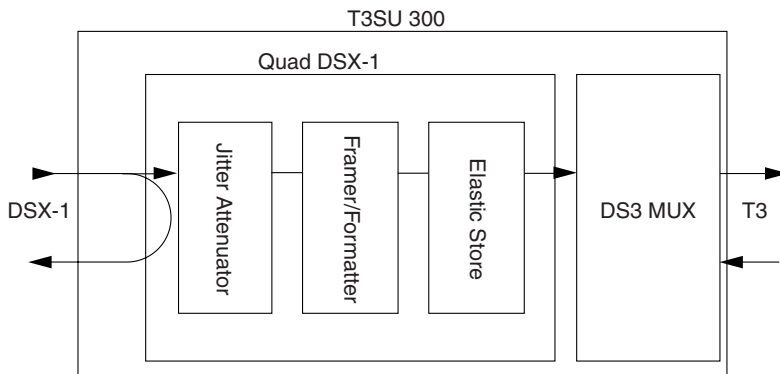

**Figure 6-14. Line Loopback Test**

### Payload Loopback


During this test, all data for the selected DSX-1 interface is looped back to the far-end unit. The end result is all DSX-1 interfaces of the far-end unit are looped back. All other ports are unaffected. See Figure 6-15 for an illustration of this test.

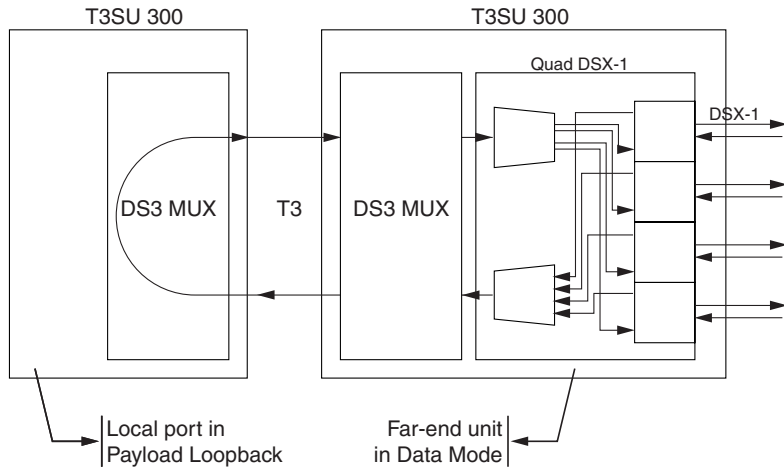

**Figure 6-15. Payload Loopback Test**

### DTE Loopback


During this test, the combined information from the four DSX-1 interfaces is locally looped at the multiplexer of the T3SU 300 back towards the Quad DSX-1 interface card. The end result of this test is a loopback of all DSX-1 interfaces towards the DTE. See Figure 6-16 for an illustration of this test.

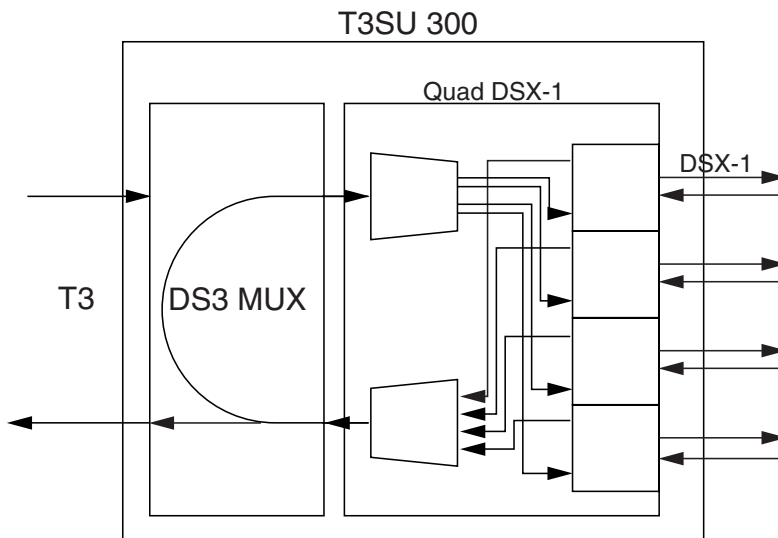

**Figure 6-16. DTE Loopback Test**

### Payload and DTE Loopback


This test is a combination of a Payload Loopback and a DTE Loopback. All of the near- and far-end DSX-1 interfaces on the selected Quad DSX-1 interface card are looped back. See Figure 6-17 on page 102 for an illustration of this test.

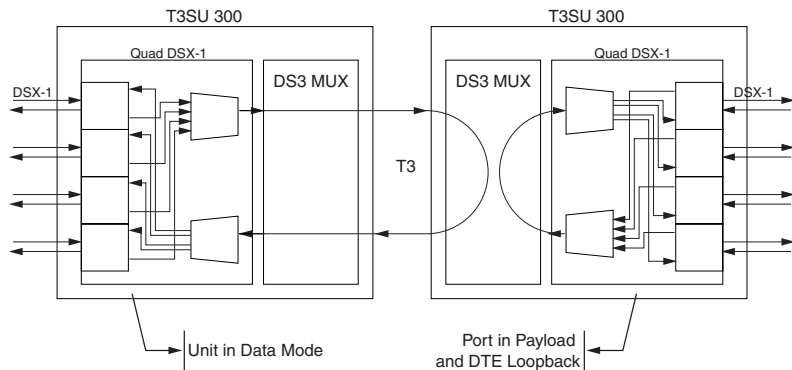

**Figure 6-17. Payload and DTE Loopback Test**

### Remote Port Payload Loopback

During this test, the local unit commands the far-end unit to perform a payload loopback test for the selected Quad DSX-1 interface card. This results in all of the DSX-1 interfaces in the local unit being looped back. See Figure 6-18 for an illustration of this test.

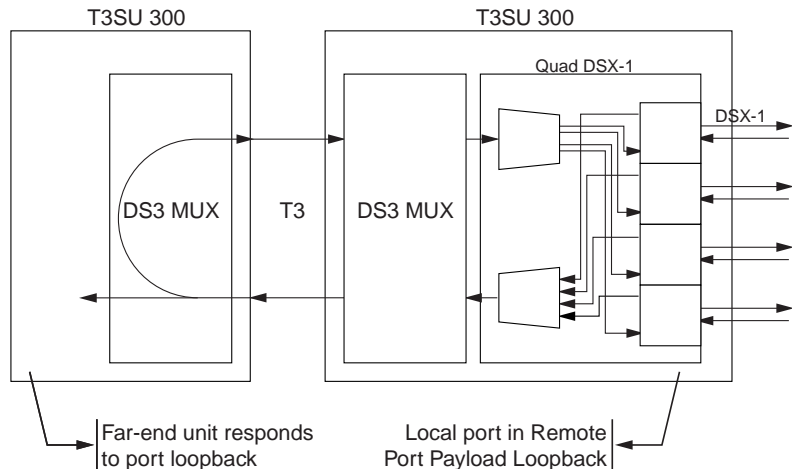

**Figure 6-18. DSX-1 Payload Loopback Test**

# BERT Configuration

The following options apply to any of the tests involving BERT testing.

## Pattern

Select the desired test pattern for the BERT test (see Figure 6-19). The internal test pattern generator can be configured for the following types of test patterns:

- All zeros
- All ones
- 2^15-1
- 2^23-1

The test pattern is used to independently test the operation of the framing circuitry and the network interface of the T3SU 300. Instead of using data from the host, this test uses data generated by the T3SU 300’s internal test pattern generator and detector.

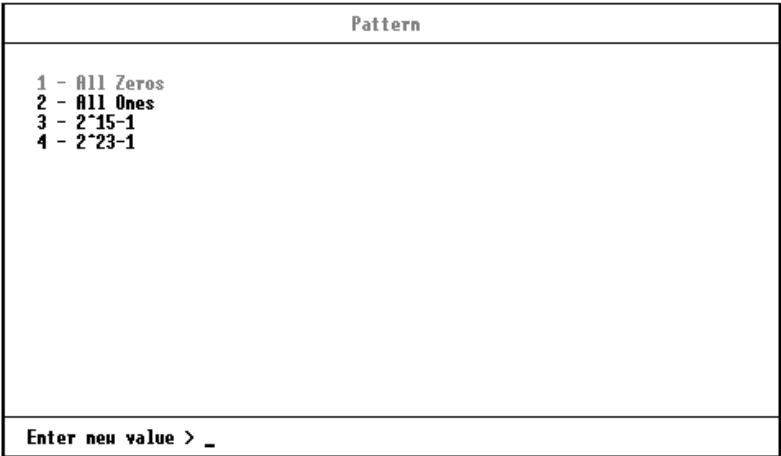


Figure 6-19. BERT Pattern Menu

## Invert Pattern

If set to **ENABLE**, the T3SU 300 inverts the transmitted and received BERT test pattern. This allows the unit to be compatible with test equipment which generates inverted BERT patterns.

## BERT Information Fields

The following five fields provide information about the most recently issued BERT test. These fields appear in the main **DIAGNOSTICS** menu (shown in Figure 6-1 on page 90).

### Port

Displays which port is transmitting and receiving the BERT pattern.

### Direction

Displays the direction in which the BERT pattern is being sent.

### State

Displays either **SYNC** or **No SYNC** to indicate whether the unit is in sync with the BERT pattern.

### Errors

Displays the number of BERT errors received by the T3SU 300 since the last reset.

### Current Err/Sec

Displays the number of BERT errors received by the unit in the last second.

## Insert Error

Inserts one error into the data stream.

## Clear Errors

Clears the error counts given in the BERT information fields of this menu.

## Reset All Tests

Discontinues all active tests and clears the counts displayed in the BERT information fields.



## Chapter 7 Applications


---

This chapter provides examples of some common T3 applications. The examples include a single port DSU/CSU full T3 bandwidth application, a point-to-point multiport application (page 106), a fractional T3 application (page 108), a remote SNMP management application (page 110), and a voice application (page 111). The configuration selections given in these examples may need modification based on your network configuration.

### SINGLE PORT FULL T3 BANDWIDTH

In applications requiring full T3 bandwidth, the T3SU 300 operates with other vendor products that support 44.2 Mbps data over unchannelized T3 circuits.

In the application shown in Figure 7-1, the T3SU 300 provides network connectivity for a router running at 44.2 Mbps. The data is frame relay and the unit is SNMP-managed via the local Ethernet. See Table 7-1 on page 106 for an example configuration.

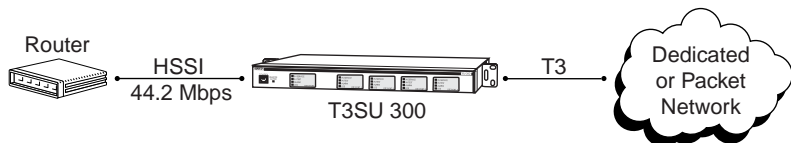

**Figure 7-1. Single Port Application**

**Table 7-1. Single Port Full T3 Bandwidth Application Configuration Example**

	<b>Local T3SU 300</b>
<b>DS3 Network</b>	DS3 Framing - C-bit Parity
	Line Length - Short
	DS3 Timing - Loop
	Data Link - Enabled
<b>DTE 1</b>	Port State - Enabled
	Nx75k blocks - 588
<b>DTE 2</b>	Port State - Disabled
<b>DTE 3</b>	Port State - Disabled
<b>DTE 4</b>	Port State - Disabled
<b>System Management</b>	Local IP Address - 10.4.10.2
	Subnet Mask - 255.255.255.0
	Gateway IP Address - 10.4.10.1
	IP Security - Disabled
	Trap IP Address - 10.4.10.10
	Management Port - LAN

**POINT-TO-POINT MULTIPORT APPLICATION**

When networking requirements call for sharing the bandwidth of a point-to-point T3 circuit, additional data ports can be installed into the T3SU 300 for multiport operation. The T3SU 300 supports up to three port option cards (Quad DSX-1, V.35, or HSSI). These option cards are hot swappable and can be field installed. See the section *DTE Port Interface Card Slots* on page 31 for more information on card installation. See page 111 for a configuration example of this application using a Quad DSX-1 card.

This application (shown in Figure 7-2 on page 107) supports two subnet connections via two different routers, a video conferencing connection, and a main frame data connection. The T3SU 300

supports the high speed data connection requirements of the routers (using the HSSI ports), as well as the V.35 data connection requirements of the video conferencing unit and the main frame. The bandwidth is split by the T3SU 300 to provide 18 Mbps for each router, 1.5 Mbps for the video conference units, and 6 Mbps for the main frames. See Figure 7-2 for an example configuration of this application.

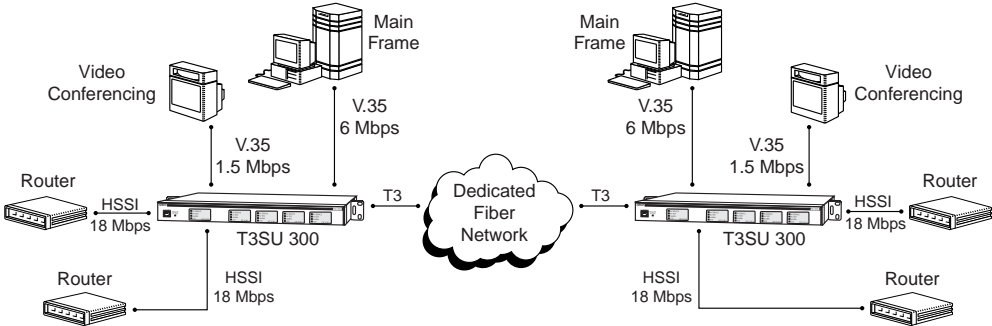


Figure 7-2. Multipoint Application

Table 7-2. Multipoint Application Configuration Example

	Local T3SU 300	Remote T3SU 300
DS3 Network	DS3 Framing - C-bit Parity	DS3 Framing - C-bit Parity
	Line Length - Short	Line Length - Short
	DS3 Timing - Local	DS3 Timing - Loop
	Data Link - Enabled	Data Link - Enabled
DTE 1 (HSSI)	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 240	Nx75k blocks - 240
DTE 2 (HSSI)	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 240	Nx75k blocks - 240
DTE 3 (V.35)	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 80	Nx75k blocks - 80

**Table 7-2. Multiport Application Configuration Example (Continued)**

	Local T3SU 300	Remote T3SU 300
<b>DTE 4 (V.35)</b>	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 20	Nx75k blocks - 20
<b>System Management</b>	Local IP Address - 10.4.10.2	Nothing required. Remote unit can be managed using the local T3SU 300.
	Subnet Mask - 255.255.255.0	
	Gateway IP Address - 10.4.10.1	
	IP Security - Disabled	
	Trap IP Address - 10.4.10.10	
	Management Port - LAN	

## FRACTIONAL T3 CARRIER APPLICATION

When network providers want to provide service at rates less than full T3, T3SU 300 units can be used in pairs for deploying sub-T3 rate services.

In this application example (shown in Figure 7-3 on page 109), a carrier provides fractional T3 access at 8 Mbps for internet connectivity. The data connection can be either V.35 or HSSI at either location. This network uses a HSSI port at the carrier's internet POP (point of presence) and a high-speed V.35 connection at the customer's router. The carrier manages both the local and remote T3SU 300s via SNMP. Table 7-3 on page 109 gives an example configuration for this application.



*While in DTE Loopback, data from the host is transmitted into the network.*

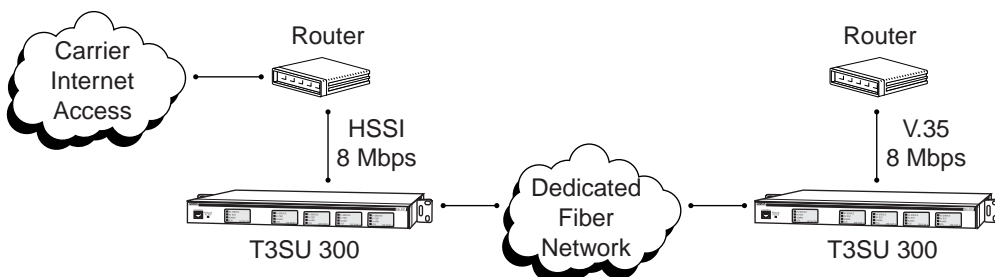


Figure 7-3. Fractional T3 Application


Table 7-3. Configuration Example for Fractional T3 Application

	Local T3SU 300	Remote T3SU 300
<b>DS3 Network</b>	DS3 Framing - C-bit Parity	DS3 Framing - C-bit Parity
	Line Length - Short	Line Length - Short
	DS3 Timing - Local	DS3 Timing - Loop
	Data Link - Enabled	Data Link - Enabled
<b>DTE 1</b>	Port State - Disabled	Port State - Disabled
<b>DTE 2</b> <b>HSSI (Local)</b> <b>V.35 (Remote)</b>	Port State - Enabled	Port State - Enabled
	Nx75k blocks-107	Nx75k blocks-107
<b>DTE 3</b>	Port State - Disabled	Port State - Disabled
<b>DTE 4</b>	Port State - Disabled	Port State - Disabled
<b>System Management</b>	Local IP Address - 12.6.12.2	Nothing required. Remote unit can be managed using the local T3SU 300.
	Subnet Mask - 255.255.255.0	
	Gateway IP Address - 12.6.12.1	
	IP Security - Disabled	
	Trap IP Address - 12.6.12.10	
	Management Port - LAN	

## REMOTE SNMP MANAGEMENT APPLICATION

A remote T3SU 300 can be managed by a local management station if the remote unit is assigned its own IP address. This address must be assigned at both the near and far ends. Also, the **DATA LINK** option must be enabled on both units.

In this application example (shown in Figure 7-4) a local T3SU 300, connected to the same LAN as the management station, provides management access to a remote T3SU 300. The local unit has the remote unit's IP address in its **REMOTE IP ADDRESS** field. That same IP address is entered into the remote unit's **LOCAL IP ADDRESS** field. Figure 7-4 gives an example configuration for this application.

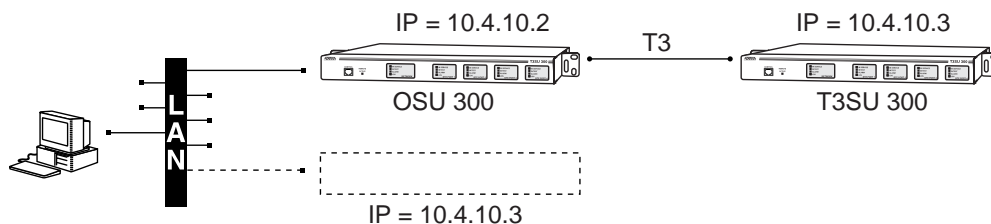

**Figure 7-4. Remote Management Application**

**Table 7-4. Configuration Example for Remote SNMP Management Application**

	Local T3SU 300	Remote T3SU 300
<b>DS3 Network</b>	Data Link - Enabled	Data Link - Enabled
<b>System Management</b>	Local IP Address - 10.4.10.2	Local IP Address - 10.4.10.3
	Subnet Mask - 255.255.255.0	Subnet Mask - 255.255.255.0
	Gateway IP Address - 10.4.10.1	Gateway IP Address - 0.0.0.0
	Remote IP Address - 10.4.10.3	Remote IP Address - 0.0.0.0
	Management Port - LAN	Management Port - FDL

# VOICE APPLICATION

This voice application is similar to the point-to-point multiport application (described on page 106). This application (shown in Figure 7-5) uses two of the four DSX-1 ports on the Quad DSX-1 card to transport PBX data, including voice channels, through the same T3 as the data. See Figure 7-5 for an example configuration of this application.

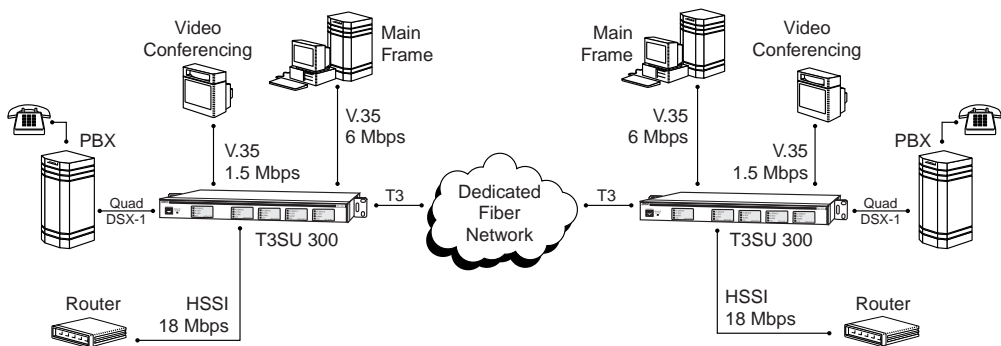


Figure 7-5. Voice Application

Table 7-5. Configuration Example for a Voice Application

	Local T3SU 300	Remote T3SU 300
<b>DS3 Network</b>	DS3 Framing - C-bit Parity	DS3 Framing - C-bit Parity
	Line Length - Short	Line Length - Short
	DS3 Timing - Local	DS3 Timing - Loop
	Data Link - Enabled	Data Link - Enabled
<b>DTE 1 (HSSI)</b>	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 240	Nx75k blocks - 240
<b>DTE 2 (HSSI)</b>	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 80	Nx75k blocks - 80

**Table 7-5. Configuration Example for a Voice Application (Continued)**

	<b>Local T3SU 300</b>	<b>Remote T3SU 300</b>
<b>DTE 3 (V.35)</b>	Port State - Enabled	Port State - Enabled
	Nx75k blocks - 20	Nx75k blocks - 20
<b>DTE 4 (Quad DSX-1)</b>	DSX-1 Port 1: Port State - Enabled Framing - ESF Line Coding - B8ZS Line Length - 0 to 133 feet DSX-1 Port 2: Port State - Enabled Framing - ESF Line Coding - B8ZS Line Length - 0 to 133 feet DSX-1 Timing Source - DS3	DSX-1 Port 1: Port State - Enabled Framing - ESF Line Coding - B8ZS Line Length - 0 to 133 feet DSX-1 Port 2: Port State - Enabled Framing - ESF Line Coding - B8ZS Line Length - 0 to 133 feet DSX-1 Timing Source - DS3
<b>System Management</b>	Local IP Address - 10.4.10.2	Nothing required. Remote unit can be managed using the local T3SU 300.
	Subnet Mask - 255.255.255.0	
	Gateway IP Address - 10.4.10.1	
	IP Security - Disabled	
	Trap IP Address - 10.4.10.10	
	Management Port - LAN	



## Appendix A Pinouts

---

The following tables give the pin assignments for the connectors located on the T3SU 300. For more information on these connectors, see *Chapter 2, Installation and Operation*, on page 27.

**Table A-1. Control Port Pin Assignments**

RJ Pin#	Name	Direction
1	GND	
2	RTS	I
3	TD	I
4	DSR	O
5	RD	O
6	CTS*	O
7	DTR	I
8	DCD	O

\* Used for hardware flow control.

**Table A-2. HSSI Interface Pin Assignments**

<b>Pin # (+ side)</b>	<b>Pin # (- side)</b>	<b>Direction</b>	<b>Description</b>
1	26		Signal Ground (SG)
2	27	O	Receive Timing (RT)
3	28	O	DCE Available (CA)
4	29	O	Receive Data (RD)
5	30	O	Loopback Circuit C (LC)
6	31	O	Send Timing (ST)
7	32		Signal Ground (SG)
8	33	I	DTE Available (TA)
9	34	I	Terminal Timing (TT)
10	35	I	Loopback Circuit A (LA)
11	36	I	Send Data (SD)
12	37	I	Loopback Circuit B (LB)
13	38		Signal Ground (SG)
14-18	39-43	I	Five Ancillary to DCE
19	44		Signal Ground (SG)
20-23	45-48	O	Five Ancillary from DCE
24	49	O	Test Mode (TM)
25	50		Signal Ground (SG)

**Table A-3. LAN Port/Ethernet Bridge Pin Assignments**

Pin	Name	Description
1	TD+	The positive signal for the TD differential pair. This signal contains the serial output data stream transmitted onto the network.
2	TD-	The negative signal for the TD differential pair (pins 1 and 2).
3	RD+	The positive signal for the RD differential pair. This signal contains the serial input data stream received from the network.
4,5	N/A	not used
6	RD-	The negative signal for the RD differential pair (pins 3 and 6).
7,8	N/A	not used

**Table A-4. V.35 Interface Card Pin Assignments**

Pin	Name	Description
A	101	Protective Ground (PG)
B	102	Signal Ground (SG)
C	105	Request to Send (RTS)
D	106	Clear to Send (CTS)
E	107	Data Set Ready
F	109	Received Line Signal Detector (CD)
H	–	Data Terminal Ready (DTR)
J	–	not used
L	–	Local Loopback (LL)

**Table A-4. V.35 Interface Card Pin Assignments (Continued)**

Pin	Name	Description
N	–	Remote Loopback (RL)
R	104	Received Data (RD-A)
T	104	Received Data (RD-B)
V	115	Receiver Signal Element Timing (SCR-A)
X	115	Receiver Signal Element Timing (SCR-B)
P	103	Transmitted Data (SD-A)
S	103	Transmitted Data (SD-B)
Y	114	Transmitter Signal Element Timing (SCT-A)
AA	114	Transmitter Signal Element Timing (SCT-B)
U	113	External TX Signal Element (SCX-A)
W	113	External TX Signal Element (SCX-B)
NN	–	Test Indicator (TI)

**Table A-5. Quad DSX-1 Interface Card Pin Assignments**

Pin	Name	Description
1	R1 TXDATA-RING	Send data toward DTE
2	T1 TXDATA-TIP	Send data toward DTE
3	UNUSED	not used
4	R RXDATA-RING	Receive data from DTE
5	T RXDATA-TIP	Receive data from DTE
6,7,8	UNUSED	not used

## Appendix B Specifications Summary

---

### SPECIFICATIONS AND FEATURES

This section describes the standard specifications and features incorporated in the T3SU 300.

#### **Network Interface**

Clear channel, non-channelized DS3

Line length: short (less than 225 feet) and long (greater than 225 feet)

Framing format: M13 and C-bit parity

Line rate: 44.736 Mbps

Line interface: 75-ohm BNC coax female connectors

#### **DTE Interface(s)**

Integrated HSSI port

Three option slots accept any combination of interface cards.

HSSI ports are SCSI-II 50-pin female.

V.35 ports are high-speed, M34 female.

DSX-1 ports are RJ-48C, 4-wire.

All option cards are hot-swappable.

#### **DTE Rates Supported**

HSSI port(s) support 75 kbps to 44.2 Mbps.

V.35 port(s) support 75 kbps to 10 Mbps.

DSX-1 ports support up to 1.544 Mbps.

Bandwidth is selectable for V.35 and HSSI in 75 kbps increments.

#### **Clocking**

Loop (slaved to network receive clock)

Local (private network master)

**VT 100 Terminal Interface**

RJ-48, EIA-232 compatible, female DB-25 adapter provided.

Accessible through front or rear panel.

Remote configuration and statistics access available inband.

**SNMP/Telnet**

Integrated 10BaseT Ethernet and SLIP/PPP (async) port

MIB II, RFC 1213 and 1407 compliant

ADTRAN Enterprise MIB for extended monitoring and control/  
configuration

**Agency Approvals**

FCC Part 15, Class A, UL and CUL

**Environment**

Operating: 0 to 50 °C (32 to 122 °F)

Storage: -20 to 70 °C (-4 to 158 °F)

Relative Humidity: Up to 95%, non-condensing

**Power**

AC version: 120 VAC, 9 W

DC version: -24 to -48 VDC, 8W

**Physical**

Dimensions: 11.625"D x 17.0"W x 1.7"H  
(for 1U high 19" rack space)

Weight: 7 lbs

## Appendix C Acronyms/Abbreviations

---

<b>AIS</b> .....	alarm indication signal
<b>AMI</b> .....	alternate mark inversion
<b>async</b> .....	asynchronous
<b>BERT</b> .....	bit error rate test
<b>bps</b> .....	bits per second
<b>BPV</b> .....	bipolar violation
<b>CA</b> .....	communications equipment available
<b>CCITT</b> .....	Consultative Committee for International Telephony and Telegraphy
<b>CD</b> .....	carrier detect
<b>CO</b> .....	central office
<b>CPE</b> .....	customer premises equipment
<b>CRC</b> .....	cyclic redundancy check
<b>CS</b> .....	clear to send
<b>CSU</b> .....	channel service unit
<b>CTS</b> .....	clear to send
<b>dB</b> .....	decibel
<b>DCD</b> .....	data carrier detect
<b>DCE</b> .....	data communications equipment
<b>DDS</b> .....	digital data service
<b>DLCI</b> .....	data link connection identifier

<b>DSR</b> .....	data set ready
<b>DSU</b> .....	data service unit
<b>DSX-1</b> .....	digital signal cross connect, level 1
<b>DTE</b> .....	data terminal equipment
<b>DTR</b> .....	data terminal ready
<b>ES</b> .....	errored seconds
<b>EXZ</b> .....	excessive zeros
<b>FDL</b> .....	facility datalink
<b>FEBE</b> .....	far end block error
<b>HSSI</b> .....	high-speed serial interface
<b>IP</b> .....	internet protocol
<b>KA</b> .....	keep alive
<b>LAN</b> .....	local area network
<b>LCV</b> .....	line coding violation
<b>LED</b> .....	light emitting diode
<b>LES</b> .....	line errored seconds
<b>LL</b> .....	local loopback
<b>LOS</b> .....	loss of signal
<b>MBE</b> .....	M-bit errors
<b>Mbps</b> .....	megabits per second
<b>MIB</b> .....	management information base
<b>ms</b> .....	millisecond
<b>NC</b> .....	normally closed
<b>NI</b> .....	network interface
<b>NMS</b> .....	network management system
<b>NO</b> .....	normally open
<b>NRZ</b> .....	non-return to zero
<b>OCU</b> .....	office channel unit
<b>OOF</b> .....	out of frame



<b>OOS</b> .....	out of service
<b>POP</b> .....	point of presence
<b>PPP</b> .....	point-to-point protocol
<b>PSTN</b> .....	public switched telephone network
<b>PVC</b> .....	permanent virtual circuit
<b>RD</b> .....	receive data
<b>RDL</b> .....	remote digital loopback
<b>RL</b> .....	remote loopback
<b>RMA</b> .....	return material authorization
<b>RS</b> .....	request to send
<b>RTS</b> .....	request to send
<b>Rx</b> .....	receive
<b>SEFS</b> .....	severely errored framing seconds
<b>SES</b> .....	severely errored seconds
<b>SLIP</b> .....	serial line internet protocol
<b>SNMP</b> .....	simple network management protocol
<b>SR</b> .....	data set ready
<b>sync</b> .....	synchronous
<b>TA</b> .....	terminal equipment available
<b>TD</b> .....	transmit data
<b>TDM</b> .....	time division multiplexing
<b>TM</b> .....	test mode
<b>TR</b> .....	data terminal ready
<b>Tx</b> .....	transmit
<b>UAS</b> .....	unavailable seconds
<b>WAN</b> .....	wide area network



## Appendix D Glossary

---

### ***10BaseT***

Ethernet connector which implements the IEEE standard on 24-gauge, unshielded twisted pair wiring.

### ***AIS***

alarm indication signal. An unframed all ones pattern that replaces the normal traffic signal when a failure has been detected. This signal prevents logical connections from terminating between devices.

### ***AMI***

alternate mark inversion. A bipolar line-coding format in T1 transmission systems whereby successive ones are alternately inverted.

### ***ANSI***

American National Standards Institute. A non-profit organization that coordinates voluntary standards activities in the United States.

### ***asynchronous***

A method of data transmission which allows characters to be sent at irregular intervals by preceding each character with a start bit, followed by a stop bit.

### ***bandwidth***

The bandwidth determines the rate at which information can be sent through a channel (the greater the bandwidth, the more information that can be sent in a given amount of time).

***baud rate***

A measure of transmission speed over an analog phone line. Baud rate measures the shortest signaling elements per second in the analog signal that a modem sends over an analog phone line. Does not necessarily equal the bit rate.

***BERT***

bit error rate test. A test that uses any of a number of stress patterns to test T3, T1, FT1, and DDS circuits.

***bipolar***

A signal containing both positive and negative amplitude components.

***bipolar violation***

See *BPV*.

***bit***

A binary digit representing a signal, wave, or state as either a one or a zero. A bit is the smallest unit of information a computer can process.

***bit error***

The receipt of an encoded bit that differs from what was sent by the transmitter.

***bit rate***

The speed at which bits are transmitted, usually expressed in bits per second (bps).

***blue alarm (AIS)***

An alarm used in T1/T3 transmission. In a T3 circuit, blue alarms occur when there is a transmission fault located either at or upstream from the transmitting terminal. A blue alarm is when consecutive 1010s are received in the information bits.

***bps***

bits per second. The number of bits passing a specific point per second. Examples of common rates are kbps (one thousand bits per second) and Mbps (one million bits per second). T3 operates at 44.736 Mbps.

**BPV**

bipolar violation. A violation in the alternate mark inversion line code for which consecutive 1s are represented by pulses of opposite polarity. BPVs that are not intentional (B8ZS) are counted as errors. Could also be the presence of two consecutive 1 bits of the same polarity on the T-carrier line.

**bridge**

A data communications device that connects two or more networks and forwards packets between them.

**byte**

Generally, an 8-bit quantity of information. This term is used mainly in referring to parallel data transfer, semiconductor capacity, and data storage.

**carrier**

The provider of the telecommunication services to the customer site. Carriers can be local telephone companies, regional telephone companies, or any inter-exchange carrier such as AT&T, Sprint, or MCI.

**C-bit**

An overhead bit in the DS3 string not used for framing, parity, or alarm indication.

**CCITT**

Consultative Committee for International Telephony and Telegraphy. A standards organization that devises and proposes recommendations for international communications. See also *ANSI*.

**CD**

carrier detect. A signal generated by a modem or DSU/CSU indicating the presence of a carrier signal on a communications link.

**channel**

A transmission path between two or more termination points; also called a circuit, facility, line, link, or path.

***channel bank***

Equipment in a telephone central office or customer premises that performs multiplexing of lower speed digital channels into a higher speed composite channel. The channel bank also detects and transmits signaling information for each channel, thereby transmitting framing information so that time slots allocated to each channel can be identified by the receiver.

***channel service unit***

See *CSU*.

***clocking***

An oscillator-generated signal that provides a timing reference for a transmission link. A clock provides signals used in a transmission system to control the timing of certain functions. The clock has two functions: (1) to generate periodic signals for synchronization, and (2) to provide a time base.

***control port***

The electrical interface between the T3SU 300 and the control terminal. The control terminal is used to communicate commands to the unit.

***CPE***

customer premise equipment. All telecommunications terminal equipment located on the customer premises, including telephone sets, private branch exchanges (PBXs), data terminals, and customer-owned coin-operated telephones.

***CSU***

channel service unit. A device used to connect a digital phone line coming in from the phone company to either a multiplexer, channel bank, or directly to another device producing a digital signal; for example, a digital PBX, a PC, or data communications device. A CSU performs certain line-conditioning and equalization functions, and responds to loopback commands sent from the central office. A CSU regenerates digital signals. It monitors them for problems and provides a way of testing the digital circuit.

***CTS***

clear to send. A signal on the DTE interface indicating that the DCE is clear to send data.

***data communications equipment***

See *DCE*.

***data service unit***

See *DSU*.

***dB***

decibel. A unit of measure of signal strength; usually the relation between a transmitted signal and a standard signal source.

***DCE***

data communications equipment. Device that provides all the functions required for connection to telephone company lines and for converting signals between telephone lines and DTE. Also see *DTE*.

***DDS***

digital data service. A private line digital service for transmitting data end-to-end at speeds of 2.4, 4.8, 9.6, and 56 kbps (and in some cases 19.2, 38.4, or 64 kbps). The systems can use central hub offices for obtaining test access, bridging legs of multi-point circuits, and cross connecting equipment. DDS is offered on an inter-LATA basis by AT&T and on an intra-LATA basis by the Bell operating companies.

***delay***

The amount of time by which a signal is delayed. A round-trip transmission delay measurement helps detect possible causes of protocol timeouts.

***DLCI***

datalink communications identifier. A unique number assigned to a PVC end point in a frame relay network. Identifies a particular PVC endpoint within a user's access channel in a frame relay network and has local significance only to that channel.

***DS1***

digital signal level one. Twenty-four DS0 channels make up one DS1 (total bandwidth is 1.544 Mbps).

***DS3***

digital signal level three. Equivalent of 28 DS1s and 672 DS0s (total bandwidth is 44.736 Mbps).

***DSU***

data service unit. A device designed to transmit and receive digital data on digital transmission facilities.

***DTE***

data terminal equipment. The end-user terminal or computer that plugs into the termination point (DCE) of a communications circuit. The main difference between the DCE and the DTE is that pins two and three are reversed.

***E1***

Transmission rate of 2.048 Mbps on E1 communications lines. See also *T1*.

***end device***

The ultimate source or destination of data flowing through a network (sometimes referred to as DTE).

***end user***

Subscriber who uses (rather than provides) telecommunications services.

***ES***

errored seconds. A second with one or more coding violations (CVs).

***Ethernet***

Transmission protocol for packet-switching LANs.

***facilities***

The equipment used by carriers to provide communication services.

***far end***

The distant end to that being considered. Not the end where testing is being carried out.

***FCC***

Federal Communications Commission. The U.S. federal agency responsible for regulating interstate and international communications by radio, TV, wire, satellite, and cable.

***FDL***

facility datalink. FDL bits provide overhead communication between the terminal equipment in ESF framing.

***gateway***

A device which enables information to be exchanged between two dissimilar systems or networks.



***host computer***

The primary or controlling computer in a multiple computer operation.

***idle code***

In a T3 circuit, an idle code consists of a sequence of 1100 over the entire payload bandwidth.

***in-band***

Signaling (dialing, diagnostics, management, configuration, etc.) over the same channel used for data.

***IP***

internet protocol. A protocol which provides for transmitting blocks of data between hosts identified by fixed-length addresses.

***LAN***

local area network. A privately owned network that offers high-speed communications channels to connect information processing equipment in a limited geographic area.

***local loopback (LL)***

A type of test used to verify the operation of the local terminal equipment, the CSU, and the connection between the two. The signal from the DTE is looped back by the CSU and is sent back to the DTE.

***loopback***

The technique for testing the processing circuitry of a communications device. May be initiated locally or remotely via a telecommunications circuit. Device being tested will echo back received test data. The results are compared with the original data.

***LOS***

loss of signal. Defined as a line state in which no pulses are received for 175 bit positions.

***M13***

DS1/DS3 multiplexer that combines up to 28 DS1 channels into one DS3 channel. Uses two-stage, bit synchronous TDM.

***Mbps***

Megabits per second (one million bits per second).

***MIB***

management information base. A database of network management information used by SNMP.

***modem***

Acronym for modulator/demodulator. Equipment that converts digital signals to and from analog signals. Used to send digital signals over analog phone lines.

***monitor***

To watch or listen to a signal non-intrusively.

***multi-point circuit***

A single communications circuit that has more than two terminations.

***NC***

normally closed. Relay switch contacts that remain closed when inactive.

***near end***

The unit on-site.

***NI***

network interface. The demarcation point between the CPE and the PSTN.

***NO***

normally open. Relay switch contacts that remain open when inactive.

***NRZ***

non return to zero. A mode in which the digital level is low for a 0 bit and high for a 1 bit, and does not return to zero between successive 1 bits.

***out-of-band***

Signaling that is separated from the channel carrying information (voice, data, video, etc.). Typically the separation is accomplished by a filter. The signaling includes dialing and other supervisory signals.

***point-to-point***

Type of communications link that connects a single device to another single device, such as a remote terminal to a host computer.

**POP**

point of presence. Physical place within a LATA (local access and transport area) where a long distance carrier or a cellular provider interfaces with the network of the local exchange carrier (LEC). A POP is usually a building serving as the point of termination which houses switches and transmission equipment.

**protocol**

A set of rules controlling the orderly exchange of information between stations in data communications networks or systems.

**PSTN**

public switched telephone network. Usually refers to the world wide voice telephone network available for public use.

**red alarm**

Unframed all ones signal (keep alive signal). A red alarm is declared on detection of LOS or OOF not caused by an alarm indication signal (AIS) that persists for more than two seconds.

**remote configuration**

A feature designed into ADTRAN products that allows remote units to be configured from a local unit or a VT 100 compatible terminal.

**router**

A device that supports communications between networks. Routers are similar to bridges, with the exception that routers provide more functionality (such as finding the best route between networks and providing network management capabilities).

**service**

The provision of telecommunications to customers by a common carrier, administration, or private operating agency, using voice, data, and/or video technologies.

**service provider**

A company that delivers or sells a telecom service.

**SES**

severely errored seconds. A second in which more than 320 code violations (CVs) occurred or an OOF condition occurred.

***signaling***

Communication between switches to set up and terminate calls.

***SNMP***

simple network management protocol. A control and reporting scheme widely used to manage devices from different vendors. SNMP operates on top of the Internet protocol.

***SR***

data set ready. A signal on the DTE interface that indicates if a connection exists and if the devices are ready to start handshaking control signals so communications can begin.

***synchronous***

Communications in which the timing is achieved by sharing a single clock. Each end of the transmission synchronizes itself with the use of clocks and information sent along with the transmitted data.

***T1***

Transmission rates of 1.544 Mbps are available on T1 communication lines. Also referred to as digital signal level 1 (DS-1). See also *E1*.

***T3***

Transmission rates of 44.736 Mbps are available on T3 communication lines. Also referred to as digital signal level 3 (DS-3).

***TDM***

time division multiplexing. A technique for transmitting two or more signals at the same time over a single communication medium. This is accomplished by allocating channels to the bandwidth for specific increments of time.

***Telnet***

The standard TCP/IP remote login protocol specified in RFC-854.

***transceiver***

A combination of transmitter and receiver providing both output and input interfaces within a single device.

***transmission***

The signaling of data over telecommunications channels.

**V.35**

A standard for trunk interface between a network access device and a packet network that defines signaling for data rates greater than 19.2 kbps.

**VT 100**

A non-intelligent terminal or terminal emulation mode used for asynchronous communications. Used to configure the T3SU 300.

**WAN**

wide area network. A communications network serving geographically separate areas. A WAN typically extends a LAN outside the building to link to other LANs over telephone lines.

***yellow alarm***

A T3 yellow alarm is an indication sent back toward the source of a failed transmit circuit in a DS3 two-way transmission path. The X-bits (X1 and X2) are set to zero.



# Index

---

## Numerics

10BaseT 22, 39, 53

2<sup>15</sup>-1 103

2<sup>23</sup>-1 103

## A

active

- port status 45, 48, 50, 68

- profile 52

agent 23

AIS 57, 66, 67, 79, 80

alarm

- connector 31

- history 76

- LED 36

- messages 66

- network state 66

- relay 60

- state 66

all ones 103

all zeros 103

AMI 49, 51

- w/stuffing 49

answer on ring 62

applications 105

- fractional T3 108, 109

- multiport 106

- point-to-point 106, 107

- single port (full T3) 105, 106

apply settings 46, 49, 51

ATDT 61

ATZ 61

auth failure traps 58

auto

framing 49

auxiliary port 22, 55

- description 32

- setting baud rate 55

## B

B8ZS 49, 51

bad boot sector 63

bad checksum 63

bad RAM address 63

bad RAM data 63

bandwidth 70

bandwidth profiles 52

baud rate 55

BERT 35, 89, 103, 104

- pattern 103

- test 93

blue alarm 66, 67

- T1 status 69

blue alarm traps 57, 58

BPV 79

## C

CA 71

cables

- DSX-1 28

- HSSI 28

- needed 28

- provided 27

- V.35 28

card slots 31

cards (options)

- installation 31

C-bit coding violations 80

C-bit errored seconds 80

- C-bit parity 41
- C-bit severely errored seconds 80
- CCV 80
- CD 47
- CES 80
- channel bandwidth 45
- clear errors 104
- clear statistics 81
- clock
  - setting 60
- clocking 117
  - external 47
  - invert 47
  - source 47
- cold start traps 58
- Com Eqpt Fail (NSA) 68
- comm error
  - T1 status 70
- common equipment fail NSA 58
- configuration 39
  - DS3 network 40
  - DTE port 42
  - remote 39, 40
  - utilities 63
- configuration corrupt 63
- configuration examples 105
- configuration menu 35, 39
- connecting the unit to a terminal interface 33
- connection timeout 62
- control port 30, 33, 113
  - pin assignments 113
- CS 46
- CSES 80
- CV 80
- D**
- D4 49
- damage while shipping 27
- data link 39, 42
- data link state 67
- data mode 91, 94, 97
- date
  - setting 60
- DB-25 30
- desktop installation 30
- diagnostics 35, 89
- DS3
  - BERT test 93
  - line loopback test 92
  - payload loopback test 91
  - remote DS3 loopback test 93
  - remote payload loopback with BERT test 93
- DSX-1
  - DTE loopback test 101
  - framer loopback test 98
  - line loopback test 99
  - local loopback test 99
  - payload and DTE loopback test 101
  - payload loopback test 98, 100
  - remote port payload loopback test 102
- DTE ports 93
- HSSI/V.35
  - DTE loopback test 95
  - payload and DTE loopback test 96
  - payload BERT test 95
  - payload loopback 94
  - remote payload loopback with BERT test 96
  - remote port payload loopback



- test 96
- dial string 61
- dialout on trap 62
- dialup options 60
- DS3 89
  - diagnostics 91
  - DSX-1 timing source 49
  - framing 41
  - framing type 65
  - interface 32
  - network 39, 40
    - configuration menu 40
    - line 41
  - payload loopback 91
  - payload loopback test 91
  - scrambler 42
  - timing 41
- DSX-1 21, 23, 24, 48, 49, 50, 52, 68, 76, 81, 89, 106
  - cable 28
  - configuring 47, 50
  - pin assignments 116
  - specifications 117
  - statistics 75, 81
  - testing options 97
  - voice application 111
- DTE interface cards
  - installing 31
- DTE interfaces 117
- DTE leads 70
- DTE loopback test 95, 101, 108
- DTE port 39, 56
  - configuration 42
  - description 31
  - LEDs 37
  - status information 68
- DTE rates 117
- E**
  - Eqpt Fail (NSA) 68
  - Eqpt Fail (SA) 67
  - equipment
    - provided 27
  - equipment fail NSA 58
  - equipment fail SA 58
  - error
    - port status 45, 68
- ESF 49
- ethernet 22, 39, 53, 118
- EXZ 79
- F**
  - far end alarm 56
  - FBE 80
  - F-bit errors 80
  - FDL 55
  - fractional T3 service application 108
  - frame slip
    - T1 status 70
  - framer loopback test 98
  - framing 49
  - front panel
    - description 33
- G**
  - gateway IP address 54
  - gateway node 54
- H**
  - hangup 62
  - HSSI 21, 23, 24, 31, 45, 51, 52, 68, 71, 89, 94, 106, 108
    - cable 28
    - configuring 45
    - leads 70
    - pin assignments 114

## I

idle 67

idle signal traps 57, 58

idle timeout 62

in service LED 36

in test

- LED 36, 37

- network state 66

- port status 68

inactive

- port status 45, 48, 50, 68

included in shipment 27

initializing

- T1 status 70

initializing string 61

insert error 104

installation 27

installing interface cards 31

installing the unit 29

- desktop installation 30

- rackmount 29

interface cable 28

interface cards 21

- description 23

- HSSI 24

- installation 31

- Quad DSX-1 24

- V.35 24

interface type 45, 48, 50, 68

invert pattern 104

IP 54

IP address

- trap 56

IP hosts 54

IP security 54

## L

LA 71

LAN 23, 32, 55

- pin assignments 115

last modem response 63

LB 71

LC 71

LCV 79

leads 70

LEDs

- alarm 36

- descriptions 35

- DTE port 37

- in service 36

- in test 36, 37

- LOS 36

- network 36

- RD 37

- remote active 35

- status 37

- TD 37

LES 79

line coding 49, 51

line coding violations 79

line errored seconds 79

line length 41, 49

line loopback test 92, 99

link down 78

link down traps 58

link up traps 58

local

- DS3 timing 41

local IP address 54

local loopback test 99

logging out of the system 35

long

- line length 41

loop

- DS3 timing 41

loopback tests 35, 89  
LOS 57, 66, 67, 79  
LOS LED 36

## **M**

M13 41  
management port 55  
master 42  
maximum redial attempts 61  
MBE 81  
M-bit errors 81  
menu

- navigating within 34
- structure 34

MIB 21, 23  
MIB II standard 56  
modem 22, 55  
modem baud rate 55  
modem mode 55  
multiplexer, TDM 21

## **N**

N x 75k blocks 45  
near end alarm 56  
network 32, 40, 41

- interface 117
- LEDs 36
- manager 23
- port
  - status information 65
- state 66
- test 56
- test in traps 59
- test out traps 59

network manager 23  
normal

- network state 66

not installed

- port status 45

## **O**

off

- T1 status 69

OK

- T1 Status 69

OOF 57, 66, 67, 79, 80

- T1 status 69

OOS/OOF 46  
operation overview 27  
out of frame traps 57

## **P**

password

- default 59
- setting 59

pattern 103

- BERT test 103

pause between calls 62  
payload and DTE loopback test 96, 101  
payload BERT test 95  
payload loopback test 94, 98, 100  
P-bit coding violations 80  
P-bit errored seconds 79  
P-bit severely errored seconds 79  
PCV 79, 80  
performance parameters 78  
PES 79  
pin assignments 113

- auxiliary port 113
- control connector 113
- control port 113
- HSSI port 114
- LAN port 115
- Quad DSX-1 116

pinouts 113  
PLL error

- T1 status 70

point-to-point 42

point-to-point multiport application 106  
POP 108

port bandwidth 45

port state 45

port state change traps 59

port status 48, 50, 68

power up 28

    DC version 29

PPP 21, 22, 39, 53, 54, 118

primary phone number 61

profile switch time 52

PSES 79

## **Q**

QDSX alarms 56, 59

Quad DSX-1 23, 24, 52, 68, 70, 76, 81, 89

    configuring 47, 50

    pin assignments 116

    specifications 117

    testing options 97

    voice application 111

## **R**

rackmount installation 29

RAI 57, 67

RD LED 37

read community name 55

rear panel

    description 30

    illustration 30

receipt inspection 27

red alarm 66, 67

    T1 status 69

red alarm traps 57

refresh all remote statistics 81

remote 42

    active LED 35

    auto-configuration 42

configuration 40, 42

DS3 loopback test 93

DSX-1 timing source 49

IP address 54

login 35

payload loopback with BERT test  
    93, 96

port payload loopback test 96,  
    102

SNMP application 110

state 67

reset all tests 104

RFC 1213 23

RS 46

RX 32

## **S**

save configuration 64

secondary phone number 61

SEFS 79

severely errored framing seconds 79

short line length 41

single port application 105

slave 42

SLIP 21, 22, 39, 53, 54, 118

SNMP 21, 22, 23, 32, 53, 55, 56, 58,  
105, 118

specifications 117

    Quad DSX-1 117

SR 46

statistics 75

    display options 75

    menus 35

status

    DTE ports 68

    LED 37

    menus 35, 65

- network port 65
- subnet mask 54
- sub-T3 108
- system management 53

## **T**

- T1 status 69
- T3 overview 22
- TA 71
- TD LED 37
- TDM 21
- TELNET 21, 22, 23, 32, 35, 53, 54, 60, 118
- terminal interface 39
  - connection 33
- terminal timeout 60
- test
  - T1 status 69
- test patterns 103
- testing 35
- time
  - setting 60
- time division multiplexer 21
- timed profiles 42, 50
- TM 71
- toggle all traps 59
- transmit clock 47
- trap generation 56
- trap IP addresses 56
- traps 56, 61
- TX 32

## **U**

- UAS 78, 79, 80
- UL information (DC version) 29
- unavailable seconds 78
- unit ID 59

## **V**

- V.34 modem 22

- V.35 21, 23, 45, 51, 52, 68, 71, 89, 94, 106, 108

- cable 28
  - card 21, 24
  - configuring 45
  - leads 70

- voice application 111

- Quad DSX-1 111

- VT 100 22, 30, 33, 39, 53, 118
  - connection 33

## **W**

- waiting
  - port status 45
- waiting for DTE
  - port status 69
- WAN 22
- write community name 55

## **Y**

- yellow alarm 66, 67
  - T1 status 69
- yellow alarm traps 57, 58