


TOTAL ACCESS IAD BREAKOUT PANEL CONNECTION

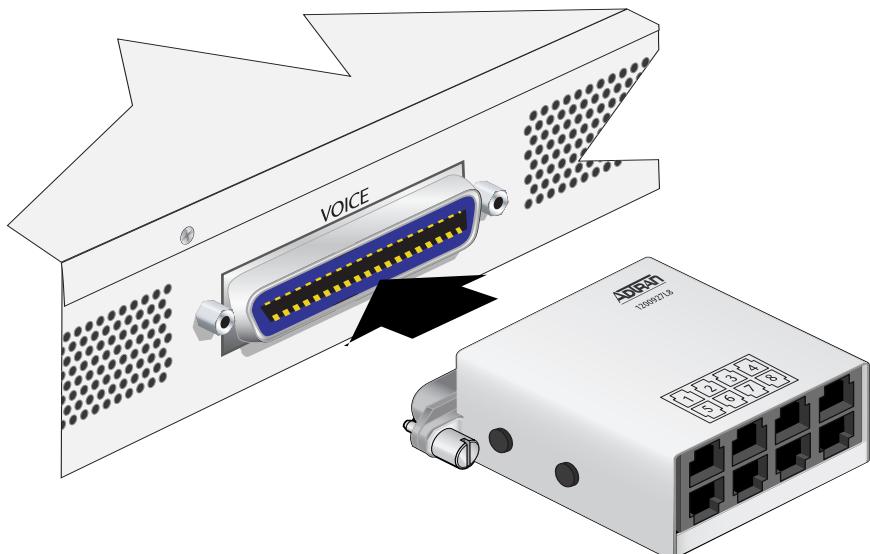

The Total Access IAD system is intended to be installed, maintained, and serviced by qualified personnel only.

PRODUCT DESCRIPTION

The Total Access IAD Breakout Panel delivers the first eight tip/ring pairs from the **VOICE** connector of your Total Access IAD unit to individual RJ-45 connectors on the Total Access IAD Breakout Panel.

BREAKOUT PANEL RJ-45 CONNECTOR CHART

RJ-45 Port	VOICE Connector	Description
1	Pair 1	Tip 1/ Ring 1
2	Pair 2	Tip 2/ Ring 2
3	Pair 3	Tip 3/ Ring 3
4	Pair 4	Tip 4/ Ring 4
5	Pair 5	Tip 5/ Ring 5
6	Pair 6	Tip 6/ Ring 6
7	Pair 7	Tip 7/ Ring 7
8	Pair 8	Tip 8/ Ring 8

CONNECTING THE BREAKOUT PANEL

1. Attach the Breakout Panel to the **VOICE** port on the back of the IAD.
2. Tighten the thumbscrews to secure the Breakout Panel to the IAD.

VOICE PORT CONNECTIONS

A single 50-pin female amphenol connector provides the interconnect wiring for the analog circuits (FXS) located on the rear panel of your Total Access IAD. Refer to the Total Access product *Hardware Installation Guide* or see 61210916L1-34 for a detailed pinout.

RJ-45 CONNECTOR PINOUTS

Pin	Name	Description
1,2,3	Unused	—
4	Ring	Ring lead of the 2-wire interface
5	Tip	Tip lead of the 2-wire interface
6,7,8	Unused	—