TA 624 Configuration for 24 Channels of FXS Analog

If you plan on using a TA 624 as a channel bank only, you'll need to configure the DS0 map appropriately. In a nutshell, all 24 DS0s need to be mapped to the corresponding FXS ports. There are two ways to accomplish this task: 1) manually by editing the map or 2) applying the D4 template to the map. Let's take a look at both methods. For the sake of learning, we'll examine the manual method first.

Manual DS0 assignment

1. From the DS0 Maps menu, arrow over and down to Edit/View Map 1 and hit Enter.

📲 Telnet 10.19.102.62	- 🗆 י	×
FA 624 Gen3/DS0 Maps/Edit/View Map 1		•
Active Map System Info System Config System Utility Interfaces 2 Protocol Bridge Router Security ISO Maps Map 1 Current Map 1 Current Map 2 Current Map 2 Cur		
ADDE: T1 IAD SLOTS 1:FXS 2:FXS 3:FXS 4:FXS 5:FXS 6:FXS NET: up SO Status: ************************************	60	
Z-help 23.0	10	-

2. This is what the map will look like. It is virtually empty except for the 24th channel being mapped to the router.

📕 Telnet 10.19.102.62								- 🗆 🗙
TA 624 Gen3/DS0	Maps/	Edit/View	Map 1					_
Edit/View Map 1	DSØ	Service	Port	Rbs				
Edit/View Map 2	1	open	n/a	n/a				
	2	open	n/a	n/a				
	3	open	n/a	n/a				
	4	open	n/a	n/a				
	5	open	n/a	n/a				
	6	open	n/a	n/a				
	7	open	n/a	n/a				
	8	open	n/a	n/a				
	9	open	n/a	n/a				
	10	open	n/a	n/a				
	11	open	n/a	n/a				
	12	open	n/a	n/a				
	13	open	n/a	n/a				
	14	open	n/a	n/a				
	15	open	n/a	n/a				
	16	open	n/a	n/a				
	17	open	n/a	n/a				
	18	open	n/a	n/a				
	19	open	n/a	n/a				
MODE: T1 IAD	SL	OTS 1:FXS	2:FXS 3	:FXS 4:FXS	5:FXS	6:FXS	NET:	up
DS0 Status:			<u>r</u>	<u>User: guest</u>			ETH:	up
							^Z=help	23:40
								-

3. Arrow over to the Service column for the first DS0 and hit Enter. You'll see a little option box pop up giving you the available choices. Select FXS and hit Enter.

🛃 Telnet 10.19.102.62								- 🗆	×
TA 624 Gen3/DS0	Maps/	′Edit/View	Map 1[1]/Ser	vice					
Edit/View Map 1	DSØ	Service	Port	Rbs					
Edit/View Map 2	1	open	n/a	n/a					
	2	open	n/a	n/a					
	3	open	n/a	n/a					
	4	open	n/a	n/a					
	5	open	n/a	n/a					
	6	open	n/a	n/a					
		open		n/a					
	8	open	Service	r_n/a					
	9	open	open	n/a					
	10	open	FXS	n/a					
	11	open	TA TAD	n/a					
	12	open		—'n/a					
	13	open	n/a	n/a					
	14	open	n/a	n/a					
	15	open	n/a	n/a					
	16	open	n/a	n/a					
	1/	open	n/a	n/a					
	18	open	n/a	n/a					
	19	open	n/a	n/a		6 5110			
MODE: 11 IAD	SL	UTS 1:FXS	2:FXS 3:FX	S 4:FXS	5:FXS	6:FXS	NET:	up	
DS0 Status:			r Use	er: guest			ETH:	up	
							~Z=help	23:41	
									-

4. Arrow over to the Port column for the first DS0 and hit Enter. For a basic configuration, you'll most likely want to align DS0 numbers with Port numbers. Select 1 and hit Enter.

🚮 Telnet 10.19.102.62									-	□ ×
TA 624 Gen3/DS0	Maps/	′Edit/View	Map 1[1]/Port						
Edit/View Map 1	DSØ	Service	Po	rt	Rbs					
Edit/View Map 2	1	FXS			n/a					
	2	open	Po	rt	n/a					
	3	open	una	ssigned	n/a					
	4	open	1		n/a					
	5	open	2		n/a					
	6	open	3		n/a					
		open	4		n/a					
	8	open	5		n/a					
	.9	open	6		n/a					
	10	open	1		n/a					
		open	8		n/a					
	12	open	9		n/a					
	13	open	10		n/a					
	14	open			nza					
	15	open			nza					
		open	13		nza					
		open	14		n/a					
	10	open	12		nza					
NODE, T1 TOD	19	OTS 1.EVS	2.546	2. EVS	nza .Eve	5.540	C.EVe	NET.		-
DSQ Statuc:	31	.013 1:FA3	2.543		FUOCT	J.FA3	0.643	FTH.	up	-
Doo Status			-	user.	juest			^7=bolp	23.6	1
								Z-neth	20.4	±

5. Now we need to copy these settings down to the remaining DS0s. Arrow back to the left to highlight the 1 in the DS0 column. Hit "C" for copy. Arrow down to DS0 2 and hit "P" for paste. Repeat this process for the remaining DS0s. When completed, your map should look like this.

🛃 Telnet 10.19.102.62								- 🗆 🗙
TA 624 Gen3/DS0	Maps/	'Edit/View	Map 1[24]					_
Edit/View Map 1	DSØ	Service	Port	Rbs				
Edit/View Map 2	6	FXS	6	0n				
	7	FXS	7	Qn				
	8	FXS	8	0n				
	9	FXS	9	0n				
	10	FXS	10	0n				
	11	FXS	11	0n				
	12	FXS	12	Qn				
	13	FXS	13	Qn				
	14	FXS	14	0n				
	15	FXS	15	0n				
	16	FXS	$16_{$	0n				
	1/	FXS	1/	Ün				
	18	FXS	18	Ün				
	19	EXS	19	Un				
	20	EXS	20	Un				
	21	FXS	21	Un				
	22	FXS	22	Un				
	23	FXS	23	Un				
	24			Un		C EU0	ИСТ	
MUDE: II IHU	SL.	UIS 1:FXS	2:FX3 3:FX3	4:FX5	5:FX8	0:185	NET:	up *
DS0 Status: ****	*****	********	***** User	: guest			E : ^7=bolo	up 22.71
							Z=help	∠J:41_ ▼

6. Hit "H" for home to return to the main menu. This action will also save your settings.

Template Method

1. From the DS0 Maps menu, arrow over and down to Apply Template to Map 1 and hit Enter. Select the D4 Map option and hit Enter. Hit Y to confirm. Hit H for home.

📕 Telnet 10.19.102.62		- 🗆 🗙
TA 624 Gen3/DS0 M	aps/Apply Template to Map 1	▲
System Info A System Config A System Utility E Interfaces A L2 Protocol E Bridge Router Security DSO Maps	ctive Map Map 1 pply Template to Map 1 [+] pply Template to Map 2 Current Map 2 dit/View Map 2 [+] Apply Template to Map 1 Current Map 1 Current Map 2 D4 Map D1D Map Full Router Clear Map	
MODE: T1 IAD DS0 Status: *****	SLOTS 1:FXS 2:FXS 3:FXS 4:FXS 5:FXS 6:FXS NET: u ************************************	p p 3:56

Both methods will result in a TA 624 that has all 24 DS0s mapped to the FXS ports. The TA is functioning as a basic channel bank at this point. If you have any questions, feel free to contact ADTRAN Technical Support at 1-888-423-8726 or email <u>support@adtran.com</u>.