


## TOTAL ACCESS 600 SERIES MOUNTING CONFIGURATIONS

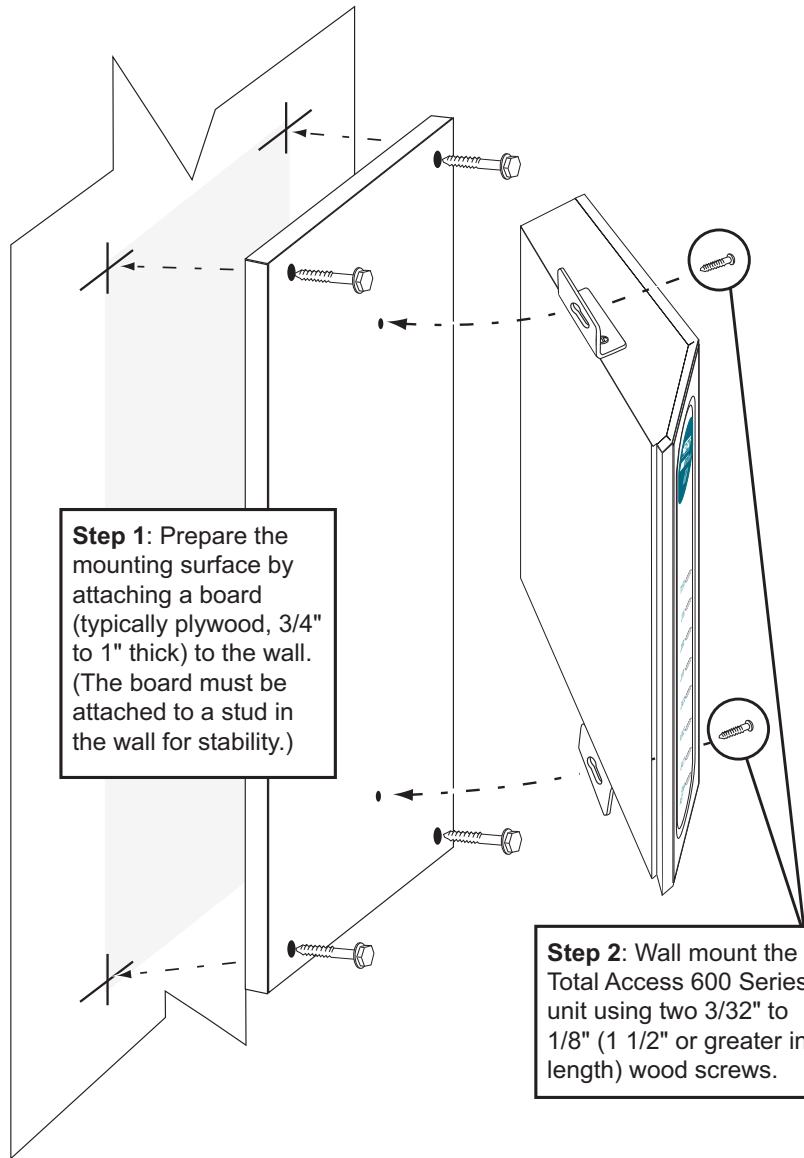


**Step 1:** Prepare the mounting surface by attaching a board (typically plywood, 3/4" to 1" thick) to the wall. (The board must be attached to a stud in the wall for stability.)


**Step 2:** Wall mount the Total Access 600 Series unit using two 3/32" to 1/8" (1 1/2" or greater in length) wood screws.

**Note:** The Total Access 600 Series units come equipped with wall mount brackets preinstalled.

### Acceptable Orientation — Wallmount

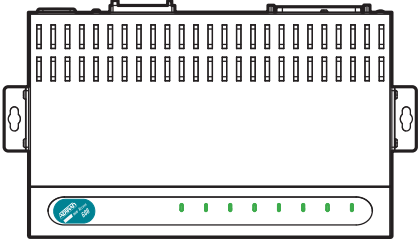


LEDs Pointing Down

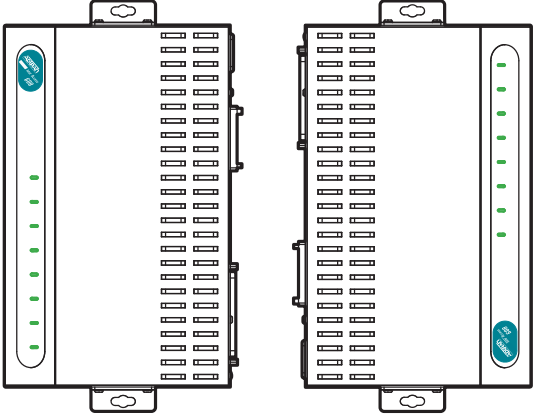


LEDs Pointing Sideways

### Unacceptable Orientation Wallmount

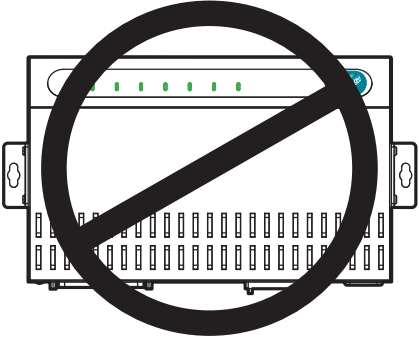

### Tabletop Assembly

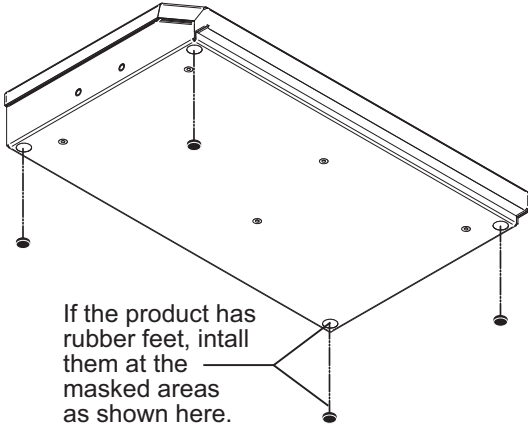

If the product has rubber feet, install them at the masked areas as shown here.

**Do Not Mount with LEDs Pointing Up!**