

NetVanta 3G CDMA Network Interface Module (NIM)

P/N 1700801G1, 1700802G1



SPECIFICATIONS

Wireless Technologies	1xRTT 1xEV-DO Revision 0 1xEV-DO Revision A
Frequency Bands	Band Class 0 (Cellular 800 MHz) Band Class 1 (PCS 1.9 GHz)
Compliance	FCC Part 15, Class A FCC Parts 2, 22, 24 UL/CUL 60950-1 RSS 102 IC ES-003 RSS 129/133 RSS 132/133
Physical	Dimensions: 2.75-inch W x 4.25-inch D Operating Temperature: 0°C to 50°C Storage Temperature: -20°C to 70°C Relative Humidity: Up to 95 percent, noncondensing



Visit www.adtran.com/3G for details on NetVanta platforms supporting the NetVanta 3G CDMA NIM.



This device has been designed to operate with the antennas listed below, and having a maximum gain of 2 dB. Antennas not included in this list or having a gain greater than 2 dB are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Proper antennas are:
Pulse/Larson Dipole Antenna
Part Number: SPDA24850/1900

To reduce potential radio interference to other users, the antenna type and its gain should be chosen so that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

INSTALLATION INSTRUCTIONS

1. Remove power from the base unit.
2. Slide the option module into the option slot until the module is firmly seated against the chassis.
3. Secure the pins at both edges of the module.
4. Place either of the two antennas directly onto the antenna port labeled **ANT1** on the rear panel.
5. Using the thumb screws only, carefully thread the antenna onto the connector until it is secure.
6. Repeat Step 5 with the second antenna, attaching it to the **ANT2** port.
7. Position antennas in a "V" shape at a 90 degree angle to each other.
8. Restore power to the base unit.

3G CDMA NIM LED DESCRIPTIONS

LED Label	LED Color	Indication
WWAN	Off	3G modem is not powered.
	Green (solid)	3G modem is powered, associated, and authenticated, but not transmitting or receiving.
	Green (slow flash)	3G modem is powered and searching, but not associated or authenticated.
	Green (intermittent flash)	3G modem activity proportional to transmitting/receiving speed (3 Hz minimum rate, 20 Hz maximum rate).
RSSI (Received Signal Strength Indication)	Off	No service or no signal detected.
	Red (solid)	Low signal strength.
	Amber (solid)	Medium signal strength.
	Green (solid)	High signal strength.
1xRTT	Off	No 1xRTT service is available.
	Green (solid)	1xRTT service is available.
EVDO	Off	No 1xEV-DO service is available.
	Green (solid)	1xEV-DO service is available.



Important: For additional details on product features, specifications, installation, and safety, refer to the appropriate hardware installation guide on the **AOS Documentation CD** shipped with the base unit and available online at www.adtran.com.

Quick Start

NetVanta 3G CDMA Network Interface Module (NIM)

P/N 1700801G1, 1700802G1

GETTING A CELLULAR ACCOUNT

Before you attempt to connect the 3G CDMA network interface module (NIM) to the cellular network, make sure you have subscribed to an appropriate CDMA service plan with your wireless service provider. The electronic serial number (ESN) might be needed for this process. The ESN can be obtained from the label on the 3G modem or by using the **show interface cellular hardware** command at the command line interface (CLI) prompt. Refer to the NetVanta base unit quick start guide for instructions on accessing the AOS CLI.

GETTING STARTED

Once you have subscribed to a CDMA service plan, you must activate the 3G CDMA NIM. Two activation and configuration methods are available for your NetVanta 3G CDMA NIM:

- Web-based graphical user interface (GUI)
- CLI

The GUI lets you configure the unit's settings and provides online guidance and explanations for each setting. However, using the AOS CLI may be necessary for more advanced configurations.

ACCESS THE GUI


You can access the GUI from any Web browser on your network by following these steps:

1. Connect the base unit to your PC using the Ethernet ports on the front of the unit.
2. Set your PC to a fixed IP address of **10.10.10.2**. If you cannot change the PC's IP address, you will need to change the unit's IP address using the CLI.
3. Enter the unit's IP address in your browser address line. The default IP address is **10.10.10.1**.
4. You will then be prompted for the user name and password (the default settings are **admin** and **password**).
5. The initial GUI screen appears.


ACTIVATING THE 3G CDMA NIM VIA THE GUI

To activate the 3G CDMA NIM and cellular interface, follow these steps:


1. Select **Physical Interfaces** from the **System** menu.

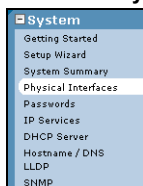


2. Select the **Cellular** interface to modify from the menu.

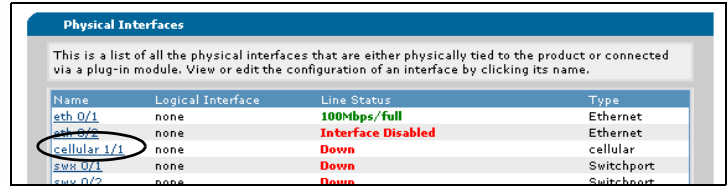

3. Select **Activate** in the **Maintenance** dialogue box.

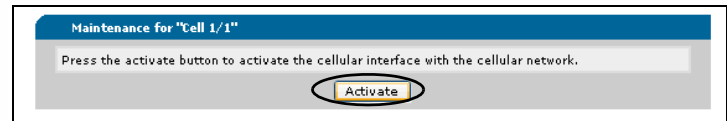

4. After activation, enter a **Description** of the Cellular interface (optional), check the **Enable** box, and select **Apply**.

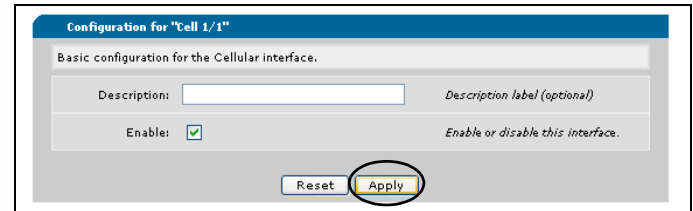

5. After enabling the **Cellular** interface, the demand routing interface must be configured before the 3G CDMA NIM can access the network.

NOTE

For complete configuration information of the 3G NIM, cellular interface, and demand routing interface for network access, refer to the **3G CDMA NIM/Cellular Interface Configuration Guide** available at www.adtran.com.

NOTE

Refer to the quick start guide shipped with your NetVanta base unit for instructions on accessing the CLI, configuring the base unit's IP address, and enabling Telnet access.