



## **Total Access 900 Series Hardware Installation Guide**

Total Access 904

Total Access 908

Total Access 912

Total Access 916

Total Access 924

## Trademarks

Any brand names and product names included in this manual are trademarks, registered trademarks, or trade names of their respective holders.

Total Access® is a registered trademark of ADTRAN, Inc.

## To the Holder of the Manual

The contents of this manual are current as of the date of publication. ADTRAN reserves the right to change the contents without prior notice.

In no event will ADTRAN be liable for any special, incidental, or consequential damages or for commercial losses even if ADTRAN has been advised thereof as a result of issue of this publication.

## Software Licensing Agreement

Each ADTRAN product contains a single license for ADTRAN supplied software. Pursuant to the Licensing Agreement, you may: (a) use the software on the purchased ADTRAN device only and (b) keep a copy of the software for backup purposes. This Agreement covers all software installed on the system, as well as any software available on the ADTRAN website. In addition, certain ADTRAN systems may contain additional conditions for obtaining software upgrades.



901 Explorer Boulevard  
P.O. Box 140000  
Huntsville, AL 35814-4000  
Phone: (256) 963-8000

Copyright © 2008 ADTRAN, Inc.  
All Rights Reserved.  
Printed in U.S.A.

## Conventions

**NOTE**

*Notes provide additional useful information.*

**CAUTION**

*Cautions signify information that could prevent service interruption or damage to equipment.*

**WARNING**

*Warnings provide information that could prevent injury or endangerment to human life.*

## Safety Instructions

When using your telephone equipment, please follow these basic safety precautions to reduce the risk of fire, electrical shock, or personal injury:

1. Do not use this product near water, such as a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There is a remote risk of shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord, power supply, and batteries indicated in the manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.
5. The socket-outlet shall be installed near the equipment and shall be easily accessible.

### Save These Important Safety Instructions



*Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

## FCC-Required Information

### FCC regulations require that the following information be provided in this manual:

1. This equipment complies with Part 68 of Federal Communications Commission (FCC) rules and requirements adopted by America's Carriers Telecommunications Association (ACTA). Each registered interface has a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, provide this information to the telephone company.
2. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given; otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
3. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment. Advance notification and the opportunity to maintain uninterrupted service are given.
4. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. The telephone company may require this equipment to be disconnected from the network until the problem is corrected, or it is certain the equipment is not malfunctioning.
5. This unit contains no user-serviceable parts.
6. This equipment is designed to connect to the telephone network or premises wiring using an FCC-compatible modular jack, which is compliant with Part 68 and requirements adopted by ACTA.
7. The following information may be required when applying to the local telephone company for leased line facilities:

Product	Registration Number	Service Type	REN/SOC	FIC	USOC
Total Access 904/908 T1 Products	US: HDCDENAN4213680L1	1.544 Mbps - SF 1.544 Mbps - SF and B8ZS 1.544 Mbps - ESF 1.544 Mbps - ESF and B8ZS	N/A / 6.0N	04DU9-BN 04DU9-DN 04DU9-1KN 04DU9-1SN	RJ-48C
Total Access 912/916/924 T1 Products	US: HDCDENAN4213616L1	Analog Loop Start/Ground Start Service	0.0B / 9.0F	02LS2 02GS2	RJ-21X
Total Access 924 with optional FXO ports					

8. The ringer equivalency number (REN) is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, the sum of the RENs of all devices should not exceed five. To be certain of the number of devices you may connect to your line as determined by the REN, call your telephone company to determine the maximum REN for your calling area.
9. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Contact your state public utility commission or corporation commission for information.

## **FCC Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **Industry Canada Compliance Information**

Notice: The Industry Canada label applied to the product (identified by the Industry Canada logo or the “IC:” in front of the certification/registration number) signifies that the Industry Canada technical specifications were met.

Notice: The REN for this terminal equipment is supplied in the documentation or on the product labeling/markings. The REN assigned to each terminal device indicates the maximum number of terminals that can be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices should not exceed five (5).

## **Canadian Emissions Requirements**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class A prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques,” NMB-003 édictée par le ministre des Communications.

## **Service and Warranty**

For information on the service and warranty of ADTRAN products, visit the ADTRAN website at <http://www.adtran.com/support>.

# Table of Contents

<b>Introduction to the Total Access 900 Series</b> .....	<b>13</b>
Features and Specifications .....	13
Unpack and Inspect the System .....	14
Contents of ADTRAN Total Access 900 Series Shipments .....	14
<b>Physical Description</b> .....	<b>15</b>
Reviewing the Front Panel Design .....	15
Front Panel LEDs .....	16
Reviewing the Rear Panel Design .....	17
Rear Panel Interfaces and LEDs .....	17
<b>Unit Installation</b> .....	<b>20</b>
Tools Required .....	20
Mounting Options .....	21
Wall Mounting Total Access 900 Series .....	21
Rack Mounting Total Access 900 Series .....	22
Grounding Instructions .....	23
Grounding for AC Power .....	23
Supplying Power to the Unit .....	23
<b>Battery Backup Unit</b> .....	<b>24</b>
Total Access 904/908 BBU (P/N 1200641L1) .....	24
Total Access 912/916/924 BBU (P/N 1175044L1/L2) .....	24
Unpack and Inspect the Battery Backup Unit .....	25
Battery Backup Unit Safety and EMC Notices .....	25
Wall Mounting the Battery Backup Unit .....	26
Wall Mounting the Total Access 904/908 BBU .....	26
Wall Mounting the Total Access 912/916/924 BBU .....	27
Maintenance .....	28
Specifications .....	28
<b>Appendix A. Pin Assignments</b> .....	<b>29</b>
<b>Index</b> .....	<b>33</b>





## List of Figures

Figure 1.	Total Access 900 Series Front Panel Layouts . . . . .	15
Figure 2.	Total Access 900 Series Rear Panel Layouts . . . . .	17
Figure 3.	Voice Connector Pin Assignments . . . . .	19
Figure 4.	Wall Mounting the Unit . . . . .	21
Figure 5.	Wall Mounting the 1200641L1 BBU . . . . .	26
Figure 6.	Wall Mounting the 1175044L1 BBU . . . . .	27



## List of Tables

Table 1.	Total Access 900 Series LEDs.....	16
Table 2.	BBU Specifications.....	28
Table A-1.	VOICE Connector Pinouts.....	29
Table A-2.	NET (T1 0/1) Pinouts.....	30
Table A-3.	NET (ADSL 0/1) Pinouts.....	30
Table A-4.	DSX-1 (T1 0/2) Pinouts.....	30
Table A-5.	10/100Base-T (ETH 0/1) Pinouts.....	31
Table A-6.	CRAFT Port Pinouts.....	31



## 1. INTRODUCTION TO THE TOTAL ACCESS 900 SERIES

The Total Access 900 Series products are IP business gateways designed for cost-effective deployment of up to 1.536 Mbps of Session Initiation Protocol (SIP), Point-to-Point Protocol (PPP), or Frame Relay voice and data services. The Total Access 900 Series combines voice and data services into a single platform, creating the fourth generation of ADTRAN IP business gateways for IP telephony service providers (such as CLECs, ILECs, and ISPs).

Total Access 900 Series products are built on the ADTRAN Operating System (AOS) platform and include the AOS built-in IP router and firewall features. The units include a T1 network interface (**NET T1 0/1**) or an ADSL network interface (**NET ADSL 0/1**) (Total Access 904 and Total Access 908 only), a DSX-1 interface (**DSX-1 T1 0/2**), a **VOICE** interface (up to 24 foreign exchange station (FXS) ports or 16 FXS plus 8 foreign exchange office (FXO) ports), a 10/100Base-T interface, and a **CRAFT** port (management interface). An optional battery backup is also available for the Total Access 900 Series. The last two digits of the product name indicate the number of onboard FXS ports. The Total Access 904 contains 4 FXS ports, the Total Access 908 contains 8 FXS ports, the Total Access 912 contains 12 FXS ports, the Total Access 916 contains 16 FXS ports, and the Total Access 924 contains 24 FXS ports or 16 FXS ports plus 8 FXO ports with the octal FXO daughterboard. The units can provision, test, and provide status for any of the voice and data interfaces. All connections are made via the rear panel.

In common packet-based applications, the wide area network (WAN) (**NET T1 0/1**) connects to the ISP or carrier's network and transmits packetized voice and data over a SIP trunk. The customer's voice is presented as time division multiplex (TDM) to the FXS ports or DSX-1 interface, and the data is routed out the local area network (LAN) (**ETH 0/1**).

### Features and Specifications

The Total Access 900 Series products have the following features:

- Supports up to 24 FXS ports with octal FXS daughterboard
- Supports up to 16 FXS ports and 8 FXO ports with octal FXO daughterboard (Total Access 924 only)
- Supports a single DS1 interface and a single DSX-1 interface
- Supports a single ADSL network interface (Total Access 904/908 ADSL only)
- Supports Primary Rate ISDN (PRI) or robbed bit signaling (RBS) on the DSX-1 interface
- Supports a single auto MDI/MDX 10/100 Ethernet port (RJ-48C)
- Stateful inspection firewall
- QoS/NAT/DHCP client, server, and relay
- Supports SIP trunks
- Supports Frame Relay, PPP, or serial ATM
- Supports three-way conferencing
- Supports caller ID, message waiting, and stutter dial tone
- Fax and analog modem compatible (V.90)
- Supports local station-to-station calls
- Up to 24 channels of G.711 ( $\mu$ -law)
- Up to 24 channels on G.729
- Up to 24 channels of DTMF detection/generation
- Supports 16 ms echo cancellation

- Supports up to 24 channels of caller ID
- 100 ms jitter buffer per channel
- User-friendly Web-based graphical user interface (GUI) and a familiar command line interface (CLI)
- LEDs for system status information
- Total Access 904/908 chassis dimensions: 1.75-inch H x 12.0-inch W x 7.5-inch D
- Total Access 912/916/924 chassis dimensions: 1.75-inch H x 17.0-inch W x 8.5-inch D
- AC power: 90 to 120 VAC, 60 Hz

This hardware installation guide describes the Total Access 900 Series units, details basic functionality, gives installation instructions, and lists unit specifications. For more information on a specific application, refer to the quick start documents provided on your *AOS Documentation CD*.



*The Total Access 900 Series System is intended to be installed, maintained, and serviced by qualified personnel only.*

## Unpack and Inspect the System

Each Total Access 900 Series unit is shipped in its own cardboard shipping carton. Open the carton carefully and avoid deep penetration into the carton with sharp objects.

After unpacking the unit, inspect it for possible shipping damage. If the equipment has been damaged in transit, immediately file a claim with the carrier and contact ADTRAN Customer and Product Service.

### **Contents of ADTRAN Total Access 900 Series Shipments**

Shipments of the Total Access 900 Series units include the following items:

- Total Access 900 Series base unit
- A detachable power cable with a grounded IEC 3-prong power plug
- Two brackets and six screws for wall mounting
- *AOS Documentation CD* or reference sheet




*For additional documentation, refer to the **AOS Documentation CD** shipped with the unit and available online at [www.adtran.com](http://www.adtran.com).*


## 2. PHYSICAL DESCRIPTION

### Reviewing the Front Panel Design

Figure 1 shows the Total Access 900 Series products' front panels (the Total Access 904 contains 4 FXS ports, the Total Access 908 contains 8 FXS ports, the Total Access 912 contains 12 FXS ports, the Total Access 916 contains 16 FXS ports, and the Total Access 924 contains 24 FXS ports or 16 FXS ports plus 8 FXO ports with octal FXO daughterboard).

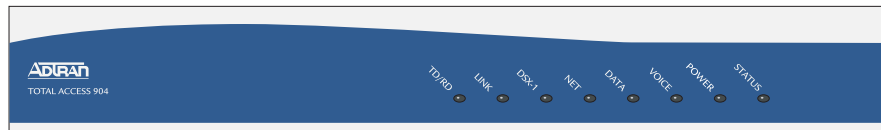

**Total Access 904**

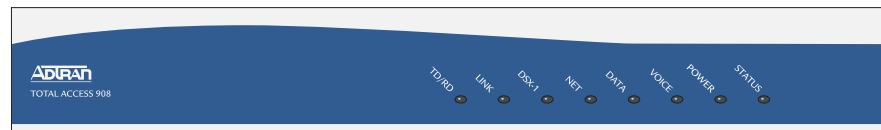

**Total Access 908**



**Total Access 912**



**Total Access 916**



**Total Access 924**

**Figure 1. Total Access 900 Series Front Panel Layouts**

**Front Panel LEDs**

Table 1 describes the front panel LEDs.


**Table 1. Total Access 900 Series LEDs**

LEDs	Color	Indication
<b>STATUS</b>	Off	Bootstrap mode - The boot code cannot be booted. During bootstrap mode, <b>VOICE</b> , <b>DATA</b> , <b>NET</b> , and <b>DSX-1</b> LEDs will be red.
	Green (flashing)	Unit is powering up. On power up, the <b>STATUS</b> LED flashes rapidly for 5 seconds, during which time the user may escape to bootstrap mode from the <b>CRAFT</b> port.
	Green (solid)	Power is on and the unit is functioning normally.
<b>POWER</b>	Off	No power.
	Green	AC power is operational.
	Amber	AC power has failed. Battery backup is active.
<b>VOICE</b>	Off	All ports are inactive or administratively shut down.
	Green (solid)	At least one port is off-hook.
	Green (flashing)	At least one port is ringing.
	Amber	At least one port is in test.
	Red	Fault condition.
<b>DATA</b>	Off	Administratively shut down.
	Green	Layer 2 is up on the NET interface.
	Red	Layer 2 is down on the NET interface.
<b>NET / DSX-1</b>	Off	Port is administratively shut down.
	Green	Link is up and in normal operation.
	Amber	Port is in test.
	Red	An alarm condition is present.
<b>LINK</b>	Off	Link is down or port is administratively shut down.
	Green	10Base-T link is up.
	Amber	100Base-T link is up.
<b>TD / RD</b>	Off	No traffic present or port is administratively shut down.
	Green (flashing)	Data traffic is flowing.
<b>ETH 0/1 (Rear Panel)</b>	Green (off)	Link is down or port is administratively shut down.
	Green (solid)	Link is up.
	Amber (off)	No traffic present or port is administratively shut down.
	Amber (flashing)	Data traffic is flowing.



## Reviewing the Rear Panel Design

Figure 2 shows the Total Access 900 Series products' rear panel layouts.

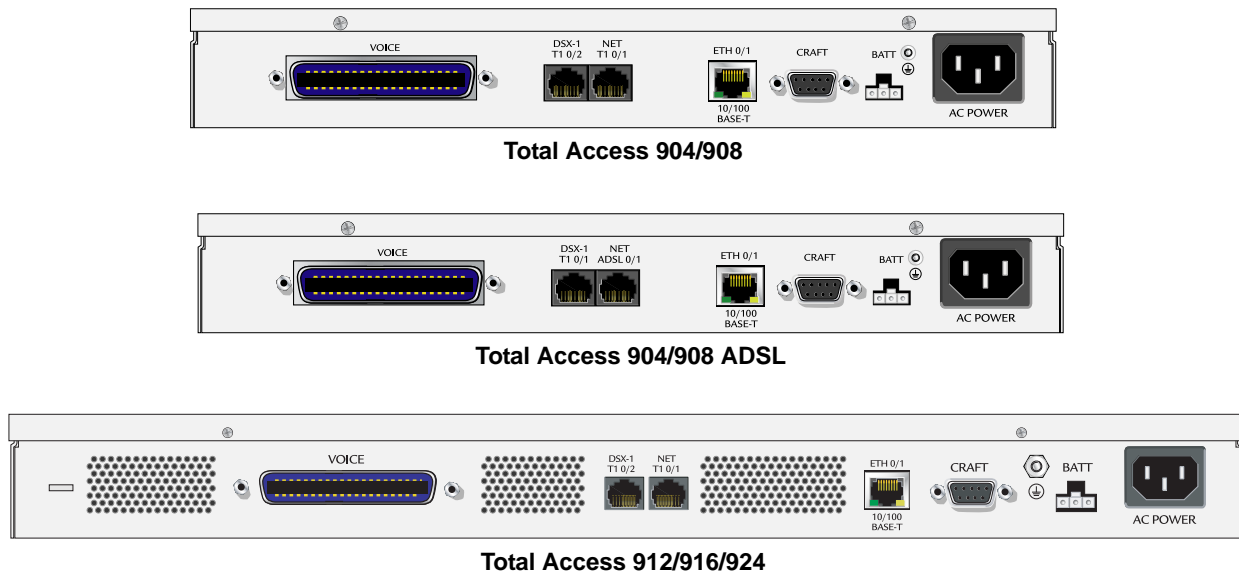

**Figure 2. Total Access 900 Series Rear Panel Layouts**

### Rear Panel Interfaces and LEDs

#### Power Supply

The Total Access 900 Series products have a 90 to 120 VAC power supply with an IEC connector. The appropriate three-prong cable is included in the shipment.

#### Battery Backup Connection

An optional battery backup system is available for the Total Access 900 Series. The Total Access 904/908 optional battery backup system part number is P/N 1200641L1. The Total Access 912/916/924 optional battery backup system part number is P/N 1175044L1 or L2. The connection port is labeled **BATT**. Refer to the documentation available for your specific battery backup unit for more information on this connection, or refer to *Battery Backup Unit* on page 24 for more details.

#### CRAFT Interface

The **CRAFT** interface is an EIA-232 serial port (DCE) that provides for local management and configuration (via a DB-9 female connector). Table 6 on page 31 shows the **CRAFT** port pinouts.



*Connection directly to an external modem requires a cross-over cable.*

#### 10/100Base-T Ethernet Interface and Activity LEDs

The Ethernet port (**ETH 0/1**) is an RJ-45 connector with LEDs. The amber activity LED flashes when data traffic is being sent or received on the Ethernet port. The green link LED is on when the unit has a good connection to the LAN. See Table 5 on page 31 for the Ethernet port pinouts.

**Network Interface**

The **NET T1 0/1** interface is a DS1 RJ-48C pin connection. See Table 2 on page 30 for the T1 network interface pinouts.


**The NET ADSL 0/1 interface is an ADSL RJ-48 pin connection. See Table 2 on page 30 for the ADSL network interface pinouts.**

**DSX-1 Interface**

The **DSX-1 T1 0/2** interface is a DSX-1 RJ-48C pin connection. See Table 4 on page 30 for the DSX-1 network interface pinouts.

**VOICE Connection**

A single 50-pin female amphenol connector provides the interconnect wiring for the analog FXS and FXO circuits (FXO is available as an option only on the Total Access 924). Figure 3 shows the **VOICE** connector pin assignments.

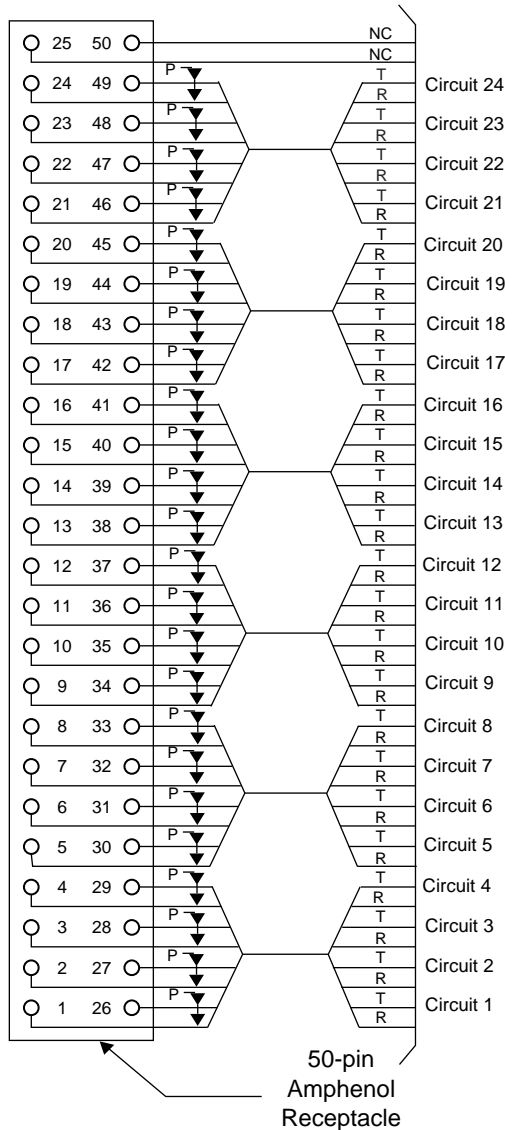

**Figure 3. Voice Connector Pin Assignments**

**NOTE** *The Total Access 904 only uses circuits 1 through 4. The Total Access 908 only uses circuits 1 through 8. The Total Access 912 only uses circuits 1 through 12. The Total Access 916 only uses circuits 1 through 16. The Total Access 924 uses all circuits (1 through 24), and the FXO interfaces are on circuits 17 through 24.*

### 3. UNIT INSTALLATION

The instructions and guidelines provided in this section cover hardware installation topics, such as wall mounting, rack mounting, and installing the unit. Refer to *Unpack and Inspect the System* on page 14 before getting started. These instructions are presented as follows:

- *Tools Required* on page 20
- *Mounting Options* on page 21
- *Grounding Instructions* on page 23
- *Supplying Power to the Unit* on page 23

For information on configuring a specific application, refer to the quick configuration documents provided on your *AOS Documentation CD*. For details on the CLI, refer to the *AOS Command Reference Guide* (also included on your CD).

#### **WARNING**

*To prevent electrical shock, do not install equipment in a wet location or during an electrical storm.*

#### **Tools Required**

The following customer-provided tools are required for the hardware installation of the Total Access 900 Series:

- Two wood screws, 3/32-inch to 1/8-inch (1 1/2-inches length)
- Drill and drill bit set
- Screwdriver (medium)
- 25-pair male amphenol cable (customer connection)
- Selected punch-down block and tool

#### **NOTE**

*To access the CLI of the Total Access 900 Series, you must have a VT100 terminal or PC with terminal emulation software and a **CRAFT** port cable. Instructions on how to access the CLI are given in the **AOS Command Reference Guide** (provided on the **AOS Documentation CD**).*

#### **NOTE**

*To access the GUI of the Total Access 900 Series, you must have a PC connected to an IP network. Instructions on how to access the GUI are given in the **Web GUI Configuration Guide**, document number 61210916L1-42.1 (provided on the **AOS Documentation CD**).*

## Mounting Options

The Total Access 900 Series may be installed in a wallmount or tabletop configuration. The Total Access 912/916/924 may also be mounted in a 19-inch or 23-inch rack. The following sections provide step-by-step instructions for rack mounting and wall mounting.

### Wall Mounting Total Access 900 Series

Instructions for Wall Mounting Total Access 900 Series	
Step	Action
1	Attach the wallmount brackets to the unit using the supplied screws.
2	Decide on a location for the Total Access 900 Series. Keep in mind that the unit needs to be mounted at or below eye level so that the LEDs are visible.  <b>Warning! Do not mount the chassis with the LEDs facing up (see Figure 4).</b>
3	Prepare the mounting surface by attaching a board (typically plywood, 3/4-inch to 1-inch thick) to a wall stud. <b>Important! Mounting to a stud ensures stability. Using sheetrock anchors may not provide sufficient long-term stability.</b>
4	Have an assistant hold the unit in position as you install two 3/32-inch up to 1/8-inch (1 1/2-inch or greater length) wood screws through the unit's brackets and into the mounted board.
5	Proceed to the steps given in <i>Grounding Instructions</i> on page 23.

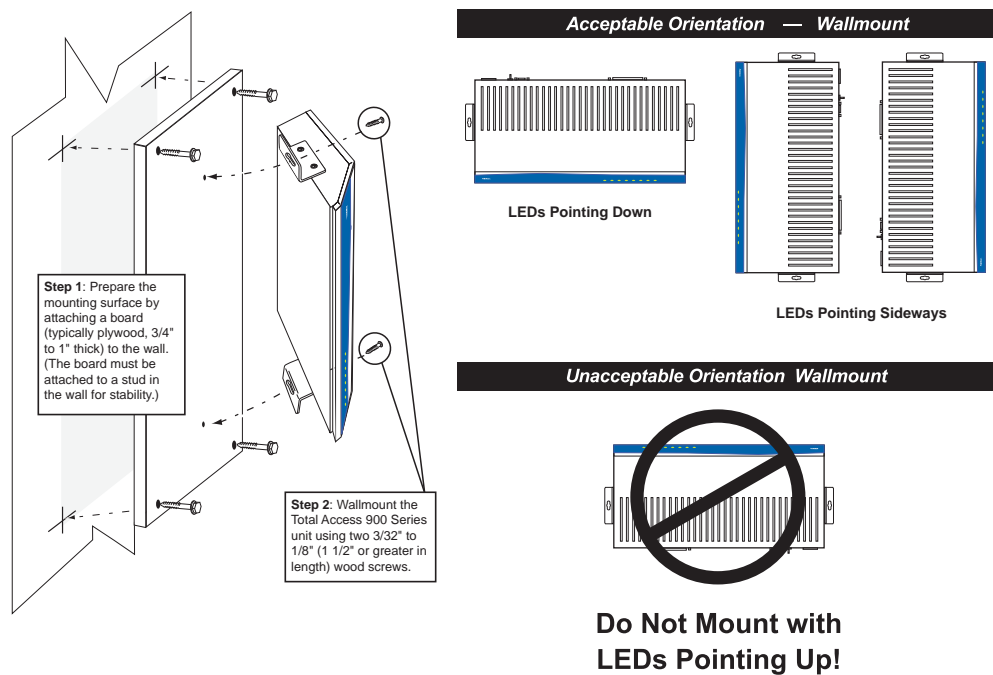



Figure 4. Wall Mounting the Unit

**Rack Mounting Total Access 900 Series**


The Total Access 912/916/924 products are housed in a 1U-high, rack mountable chassis that can be installed into 19-inch or 23-inch equipment racks. For a rackmount installation, optional rackmount brackets must be purchased (19-inch – P/N 1200927L19, 23-inch – P/N 1200927L23). The Total Access 912/916/924 mount and connect with standard fasteners and hand tools.

 **NOTE** *The Total Access 904 and Total Access 908 are **not** rack mountable.*

 **NOTE** *ADTRAN recommends 1U (1.75 inches) of separation above and below the Total Access 900 Series unit. This spacing allows the unit to dissipate heat. The design of the Total Access 900 Series uses the chassis to distribute heat generated by the unit’s internal cards. This design allows the unit to operate without a cooling fan, thus creating overall reliability of the unit.*

Follow these steps to rackmount the Total Access 912/916/924:

Instructions for Rack Mounting Total Access 900 Series	
Step	Action
1	Position the Total Access 900 Series in a stationary equipment rack. This unit takes up 1U of space. To allow proper grounding, scrape the paint from the rack around the mounting holes where the Total Access 900 Series will be positioned.
2	Have an assistant hold the unit in position as you install two mounting bolts through the unit’s brackets and into the equipment rack.
3	Proceed to the steps given in <i>Grounding Instructions</i> on page 23.

 **CAUTION** *If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature specified by the manufacturer.*

*Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.*

*Be careful not to compromise the stability of the equipment mounting rack when installing this product.*

*Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading the circuit might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.*

*Reliable grounding of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).*

## Grounding Instructions

The following provides grounding instructions for the Underwriters' Laboratory UL 60950 Standard for Safety of Information Technology Equipment Including Electrical Business Equipment, with revisions dated March 15, 2002.

A supplementary equipment grounding conductor shall be installed between the product or system and ground that is in addition to the equipment grounding conductor in the power supply cord. The supplementary equipment grounding conductor shall not be smaller in size than the ungrounded branch-circuit supply conductors. The supplementary equipment grounding conductor shall be connected to the product at the terminal provided, and shall be connected to ground in a manner that will retain the ground connection when the product is unplugged from the receptacle. The connection to ground of the supplementary equipment grounding conductor shall be in compliance with the rules for terminating bonding jumpers at Part K or Article 250 of the National Electrical Code, ANSI/NFPA 70. Termination of the supplementary equipment grounding conductor is permitted to be made to building steel, to a metal electrical raceway system, or to any grounded item that is permanently and reliably connected to the electrical service equipment ground.

The supplemental grounding conductor shall be connected to the equipment using a number 8 ring terminal and should be fastened to the grounding lug provided on the rear panel of the equipment. The ring terminal should be installed using the appropriate crimping tool (AMP P/N 59250 T-EAD Crimping Tool or equivalent).

### Grounding for AC Power

The attachment-plug receptacles in the vicinity of the product or system are all to be of a grounding type, and the equipment grounding conductors serving these receptacles are to be connected to earth ground at the service equipment.

### Supplying Power to the Unit

As shipped, each Total Access 900 Series product is set to factory default conditions. After installing the unit, the Total Access 900 Series product is ready for power-up. To power the unit, ensure that the unit is properly connected to an appropriate power source (as outlined in the sections below).

The Total Access 900 Series comes equipped with a 90 to 120 VAC, 60 Hz power supply. The maximum power consumption is 50 W. A grounded, three-plug detachable cable is included with the shipment.



*Use only copper conductors when making power connections.*

*Install unit in accordance with Article 400 and 364.8 of the NEC NFPA 70.*

*A readily accessible disconnect device, that is suitably approved and rated, shall be incorporated in the field wiring.*

*Maximum recommended ambient operating temperature is 50°C.*

## 4. BATTERY BACKUP UNIT

The ADTRAN battery backup unit (BBU) is an optional device designed as a backup DC power supply for the Total Access 900 Series.

### **Total Access 904/908 BBU (P/N 1200641L1)**

The BBU connects to the Total Access 904/908 through a 2-foot charge/discharge, 2-conductor wire with a keyed modular plug (included with the BBU). The 1200641L1 BBU is a low profile wallmount configuration. The BBU is **not** rack mountable.

Features of the BBU, P/N 1200641L1, include the following:

- No-spill battery design
- Compact wallmount box
- 7 AHR battery (up to 8 hours of backup, depending on load)
- Modular plug (provides quick and easy installation)
- All mounting hardware included

### **Total Access 912/916/924 BBU (P/N 1175044L1/L2)**

The BBU connects to the Total Access 912/916/924 through a 6-foot charge/discharge, 2-conductor wire with a keyed modular plug (included with the BBU). The 1175044L1 BBU is a low profile wallmount configuration. It can be rack mounted with the appropriate 19-inch or 23-inch rackmount adapter brackets. The 19-inch rackmount adapter bracket part number is P/N 117547L1. The 23-inch rackmount adapter bracket part number is P/N 1175048L1. The 1175044L2 is an equivalent BBU with a hinged front access door.

Features of the BBU, P/N 1175044L1/L2, include the following:

- No-spill battery design
- Compact wallmount or rackmount box
- Double BBU rack mounting available
- 7 AHR battery (up to 8 hours of backup, depending on load)
- Modular plug (provides quick and easy installation)
- All mounting hardware included



## Unpack and Inspect the Battery Backup Unit



*Removing the BBU covers could allow batteries to fall out.*

After unpacking the BBU unit, inspect it for damage. If damage is noted, file a claim with the carrier; then contact ADTRAN Customer Service.



*The BBU (P/N 1175044L1/L2) weighs in excess of 30 pounds. Arrange for assistance when handling the BBU for mounting.*

Batteries are retained and prewired in the BBU in a specific pattern. Battery position is maintained by foam spacers press-fitted against the housing walls. Removing batteries or disconnecting wires compromises correct reassembly and should not be attempted.

## Battery Backup Unit Safety and EMC Notices



*The BBU should only be used in specified ADTRAN applications.*


This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including that which may cause undesired operation.

## Wall Mounting the Battery Backup Unit

### Wall Mounting the Total Access 904/908 BBU

Figure 5 shows the BBU mounting dimensions for the Total Access 904/908.

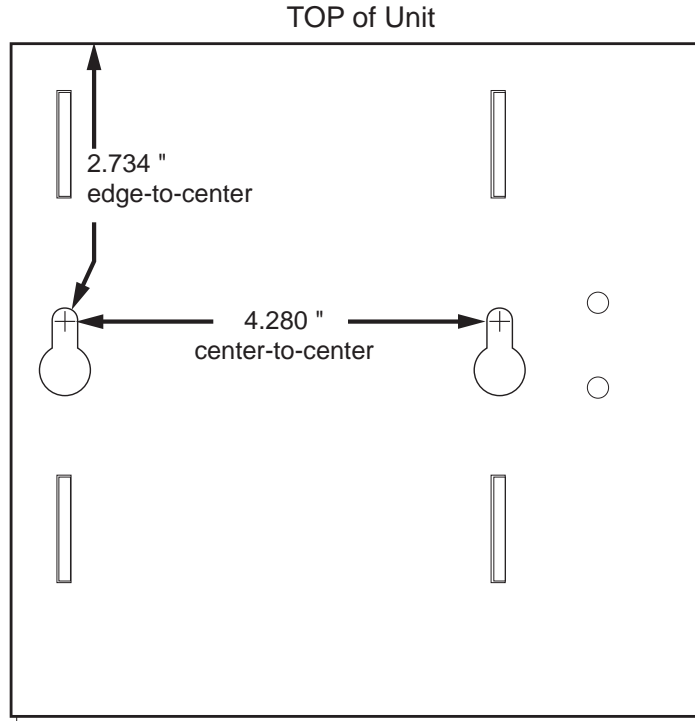


**Figure 5. Wall Mounting the 1200641L1 BBU**

For a wallmount installation, the BBU installs on heavy plywood (3/4-inch minimum) using two #10 x 3/4-inch pan-head wood screws. Install the BBU as follows:

Instructions for Wall Mounting the 1200641L1 BBU	
Step	Action
1	Determine the preferred unit layout to ensure cable plugs reach their designated sockets.
2	Ensuring a plumb measurement, mark where the pilot holes are to be drilled according to the dimensions given in the documentation included with your shipment.
3	Drill the two pilot holes using a size 1/16-inch drill bit.
4	Screw in the top two pan-head screws that fit the keyhole openings. Let the head of each screw protrude 1/16 inch from the plywood to engage the keyhole slot.
5	Position the BBU and to hang on the screw heads. Allow the unit to slide down until the slot end rests against the screws.
6	Use cable ties as appropriate. The battery connection from the BBU should be directly connected to the <b>BATT</b> port on the rear of the chassis.

**Wall Mounting the Total Access 912/916/924 BBU**

Figure 6 shows the BBU mounting dimensions for the Total Access 912/916/924.

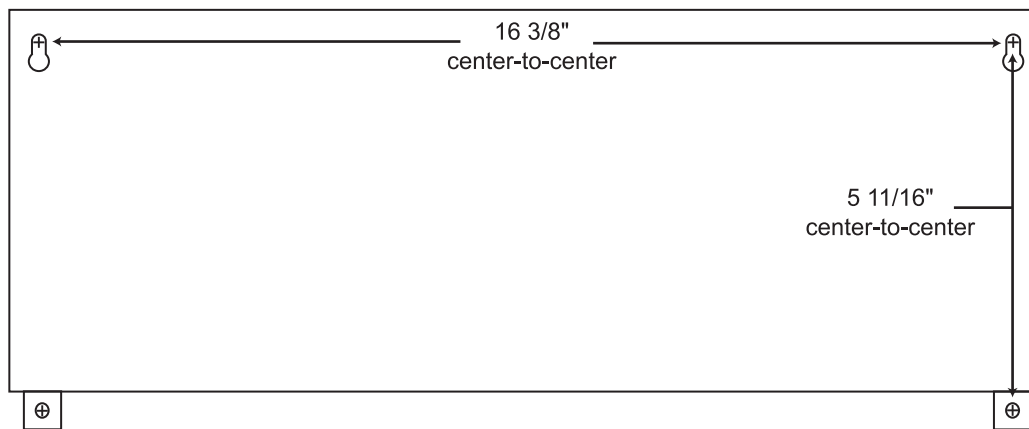

**Figure 6. Wall Mounting the 1175044L1 BBU**

For a wallmount installation, the BBU installs on heavy plywood (3/4-inch minimum) using four #10 x 3/4-inch pan-head wood screws. Install the BBU as follows:

<b>Instructions for Wall Mounting the 1175044L1 BBU</b>	
<b>Step</b>	<b>Action</b>
1	Determine the preferred unit layout to ensure cable plugs reach their designated sockets.
2	Ensuring a plumb measurement, mark where the pilot holes are to be drilled according to the dimensions given in the documentation included with your shipment.
3	Drill all four pilot holes using a size 1/16-inch drill bit.
4	Screw in the top two pan-head screws that fit the keyhole openings. Let the head of each screw protrude 1/16 inch from the plywood to engage the keyhole slot.



*Do not let the weight of the BBU rest on the two keyhole screws. Maintain support until the lower two screws are fully inserted.*

5	With an assistant, lift the BBU and position to engage the screw heads. Allow the unit to slide down until the slot end rests against the screws.
6	Insert the two lower screws through the tabs and tighten securely.
7	Use cable ties as appropriate. The battery connection from the BBU should be directly connected to the <b>BATT</b> port on the rear of the chassis.

### Maintenance

- The BBU does not require routine maintenance for normal operation. The life expectancy of the BBU is 3 to 5 years on standby use when used at room temperature.
- Excessive heat decreases battery power and life. Extreme low temperature also decreases battery capacity. Ideal ambient temperature for battery life and capacity is 20°C.
- Battery shelf life is extended in cooler temperatures.
- To order replacement batteries, reference the following part number: 1975044L1 (12 V replacement batteries).

ADTRAN is an environmentally friendly company. Therefore, we encourage the proper recycling and handling of the batteries. Federal and state laws prohibit the improper disposal of all lead acid batteries. The customer is responsible for the handling of their batteries from the day of purchase through their ultimate disposal. For more information on battery replacement and recycling, reference ADTRAN document number 60000120-36 online at [www.adtran.com](http://www.adtran.com). (Enter the document number in the search field to display a link to the document.)

### Specifications

Table 2 provides BBU specifications.

**Table 2. BBU Specifications**

<b>Battery</b>	
Part Number:	311212V02
Suppliers:	YUASA and Panasonic
Batteries:	7 AHR per battery
Voltage:	-12 VDC per battery
Backup Time:	Up to 8 hours
Wire Gauge:	18 AWG
<b>Environmental</b>	
Operating Temperatures:	Charge: -15°C to 50°C Discharge: -20°C to 60°C
Preferred:	20°C
<b>Physical Dimensions</b>	
P/N 1200641L1:	6.5-inch W x 6.5-inch H x 3.0-inch D
Weight:	7 lb
P/N 1175044L1/L2:	17-inch W x 6.5-inch H x 3.5-inch D
Weight:	30 lb

## Appendix A. Pin Assignments

**Table A-1. VOICE Connector Pinouts**

Pins	50-pin Amphenol Connector	Description
1, 26	Circuit 1	FXS 0/1 Ring, Tip
2, 27	Circuit 2	FXS 0/2 Ring, Tip
3, 28	Circuit 3	FXS 0/3 Ring, Tip
4, 29	Circuit 4	FXS 0/4 Ring, Tip
5, 30	Circuit 5	FXS 0/5 Ring, Tip
6, 31	Circuit 6	FXS 0/6 Ring, Tip
7, 32	Circuit 7	FXS 0/7 Ring, Tip
8, 33	Circuit 8	FXS 0/8 Ring, Tip
9, 34	Circuit 9	FXS 0/9 Ring, Tip
10, 35	Circuit 10	FXS 0/10 Ring, Tip
11, 36	Circuit 11	FXS 0/11 Ring, Tip
12, 37	Circuit 12	FXS 0/12 Ring, Tip
13, 38	Circuit 13	FXS 0/13 Ring, Tip
14, 39	Circuit 14	FXS 0/14 Ring, Tip
15, 40	Circuit 15	FXS 0/15 Ring, Tip
16, 41	Circuit 16	FXS 0/16 Ring, Tip
17, 42	Circuit 17	FXS 0/17 Ring, Tip or FXO 0/1 Ring, Tip
18, 43	Circuit 18	FXS 0/18 Ring, Tip or FXO 0/2 Ring, Tip
19, 44	Circuit 19	FXS 0/19 Ring, Tip or FXO 0/3 Ring, Tip
20, 45	Circuit 20	FXS 0/20 Ring, Tip or FXO 0/4 Ring, Tip
21, 46	Circuit 21	FXS 0/21 Ring, Tip or FXO 0/5 Ring, Tip
22, 47	Circuit 22	FXS 0/22 Ring, Tip or FXO 0/6 Ring, Tip
23, 48	Circuit 23	FXS 0/23 Ring, Tip or FXO 0/7 Ring, Tip
24, 49	Circuit 24	FXS 0/24 Ring, Tip or FXO 0/8 Ring, Tip
25, 50	—	Unused

**Note: The FXO ports are only available on the Total Access 924.**

**Table A-2. NET (T1 0/1) Pinouts**

Pin	Name	Description
1	R1	Receive data from the network (Ring 1)
2	T1	Receive data from the network (Tip 1)
3	—	Unused
4	R	Transmit data toward the network (Ring)
5	T	Transmit data toward the network (Tip)
6-8	—	Unused

**Table A-3. NET (ADSL 0/1) Pinouts**

Pin	Name	Description
1-3	—	Unused
4	T	ADSL Tip
5	R	ADSL Ring
6-8	—	Unused

**Table A-4. DSX-1 (T1 0/2) Pinouts**

Pin	Name	Description
1	R	Transmit data toward the DTE (Ring)
2	T	Transmit data toward the DTE (Tip)
3	—	Unused
4	R1	Receive data from the DTE (Ring 1)
5	T1	Receive data from the DTE (Tip 1)
6-8	—	Unused

**Table A-5. 10/100Base-T (ETH 0/1) Pinouts**

Pin	Name	Description
1	TX1	Transmit Positive
2	TX2	Transmit Negative
3	RX1	Receive Positive
4, 5	—	Unused
6	RX2	Receive Negative
7, 8	—	Unused

**Table A-6. CRAFT Port Pinouts**

Pin	Name	Description
1	DCD	Data Carrier Detect (output)
2	RD	Receive Data (output)
3	TD	Transmitted Data (input)
4	DTR	Data Terminal Ready (input)
5	GND	Ground - connected to unit chassis
6	DSR	Data Set Ready (output)
7	RTS	Request To Send - flow control (input)
8	CTS	Clear To Send - flow control (output)
9	RI	Ring Indicate (output)



*Connection directly to an external modem requires a cross-over cable.*





## Index

### A

AC power 23

### B

battery backup unit 24  
    maintenance 28  
    specifications 28

### C

contents of shipment 14  
craft port  
    EIA-232 serial port (DCE) 17  
    pinouts 31

### D

dimensions 14  
DSX-1 (T1 0/2) 18  
    pinouts 30

### E

Ethernet interface  
    10/100Base-T 17  
    pinouts 31

### F

features of the Total Access 900 Series 13  
front panel 15  
FXO ports 19, 29  
FXS ports 15

### G

grounding instructions 23

### I

inspection 14  
installation  
    general 20  
    rackmount 22  
    wallmount 26, 27  
installing 20

### L

LEDs  
    front panel 16  
    rear panel 17

### M

maintenance of battery backup unit 28  
mounting options 21  
    rack 22  
    wall 21

### N

NET ADSL 0/1 18  
NET T1 0/1 18  
    pinouts 30

### P

power 23  
power supply 17  
PRI 13

### R

rack mounting 22  
RBS 13  
rear panel 17

### S

safety instructions 4, 25  
service 6  
shipping contents 14  
specifications  
    battery backup unit 28  
    Total Access 900 Series 13

### T

tools required for installation 20  
trademarks 2

### U

unit installation 20  
unpacking and inspecting  
    the battery backup unit 24  
    the system 14

### V

voice  
    50-pin amphenol 19  
    pinouts 19, 29

### W

wall mounting 21  
    installation of battery backup unit 26, 27

warranty 6